



SH-GT5.75-ZM

Please Read Carefully Before
any Assembly or Installation

A) Warning to installer and user

- 1)WARNING: It's very important to your safety that these instructions are followed. The bad installation or wrong appliance can damage people or materials.
- 2) Keep these instructions in a safe for future reference.
- 3) This product was designed and produced strictly for the use indicated in this manual. Any other use than expressly mentioned may damage the product and/or be a hazard to people, and void the warranty.
- 4) WE are not responsible for the incorrect use of the product or by using other than that for which it was designed.
- 5) Do not install the product in an area where there is danger of explosion: gases or flammable fumes are a serious security threat.
- 6) WE are not responsible if the safety standards weren't taken into account the manufacture of the element to be automated, or any deformation that may occur at the same.
- 7) Before the installation, turn off the power.
- 8) The devices (ex: photocells) should be used to prevent injury to people or materials.
- 9) WE are not responsible for safety and proper operation of the product when it's not used with components sold by itself.
- 10) Do not make any changes to the components of the engine and their accessories.
- 11) The installer should inform the customer of how to operate the product in an emergency case and provide the manual of it.
- 12) Do not let the children closer to the door of the moving parts automatically when they are in motion.
- 13) Keep controls out of reach of children, to prevent any accident.
- 14) You shouldn't in any circumstances, attempt to repair or tune the automatic and must call an end to this technical qualified.
- 15) The automation should be installed to be protected from elements, exposure to water, rain, humidity or excessive dust may void the warranty of the product.
- 16) Connect the automatic taking of a protected 230v with ground wire.
- 17) Automation for use inside.

H)The use of the clutch

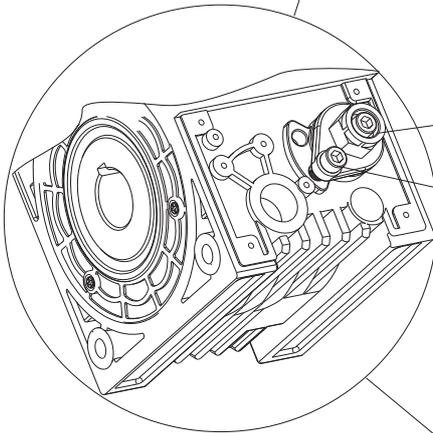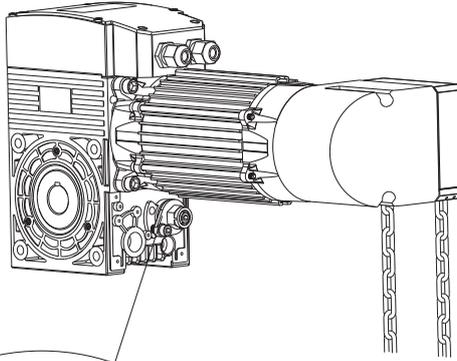


working position

Bolt fixed position

clutch disengaged position


Loosen bolts location

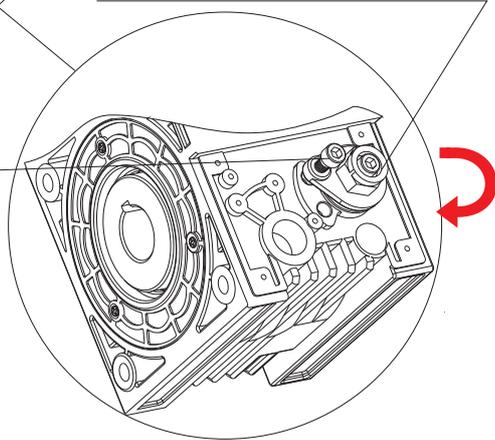


After the completion of the state of clutch is used, should pull back to the original working condition, and will be bolted in place.

F)control mount

The controller structure

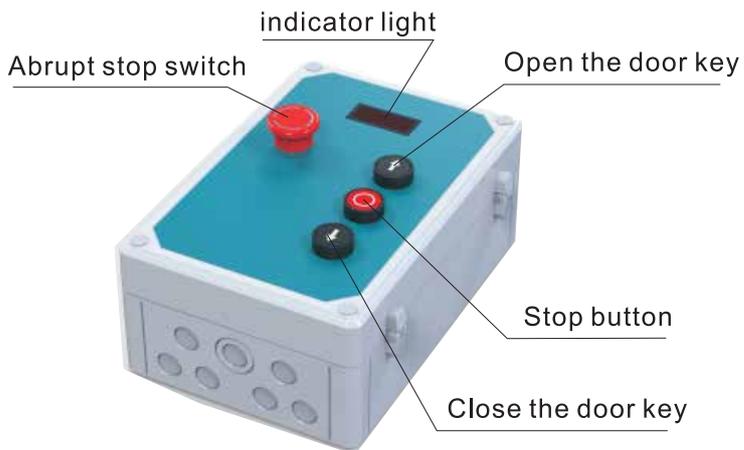


G)control mount

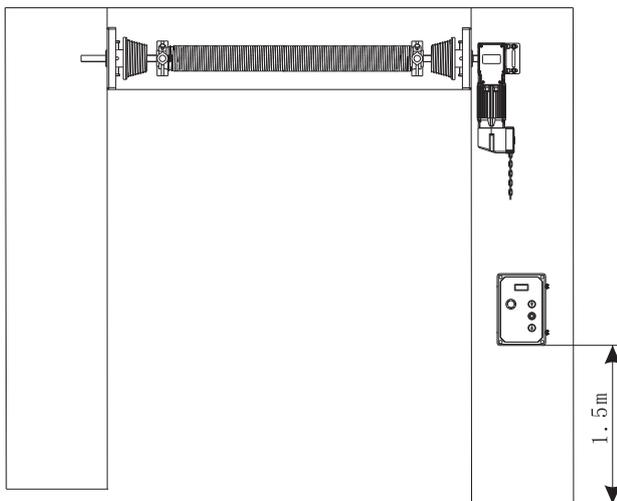


B) overall dimensions

unit: mm

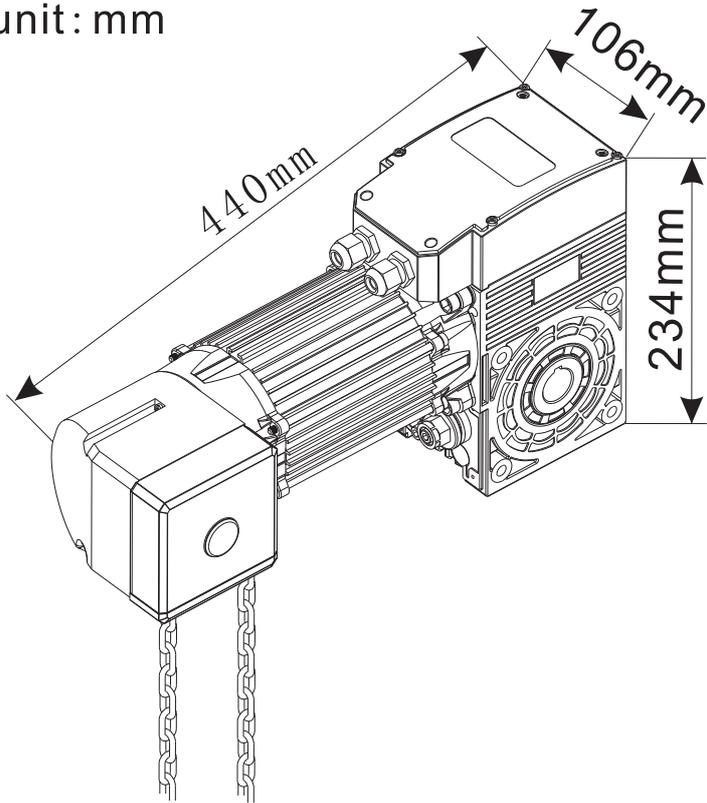





D)Product structure

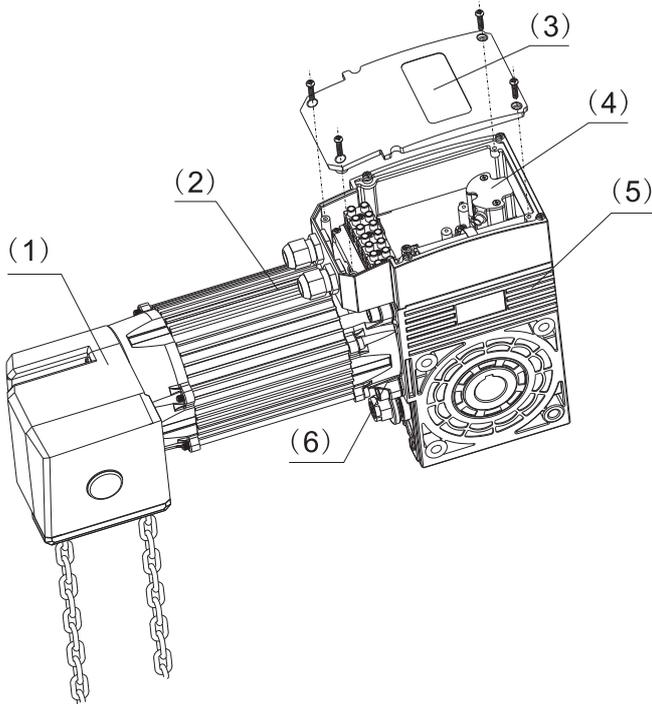

- (1) Hand zipper institutions
- (2) Motor
- (3) Plastic cover
- (4) The encoder limit mechanism
- (5) Reducer casing
- (6) Disengaging gear


E)The product installation and debugging

The product installation steps:

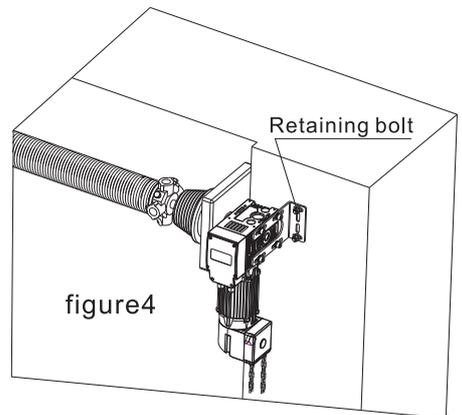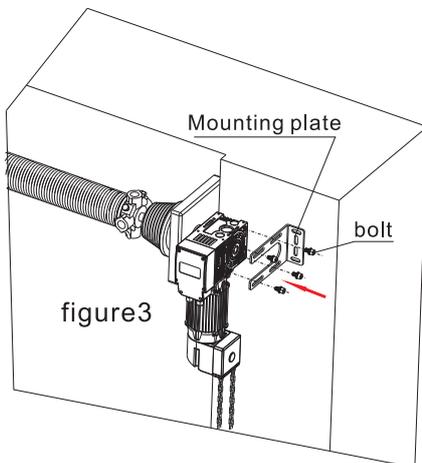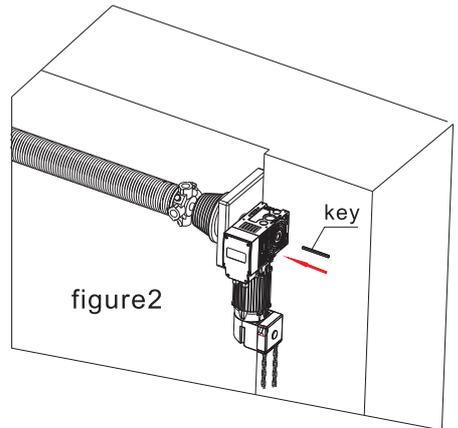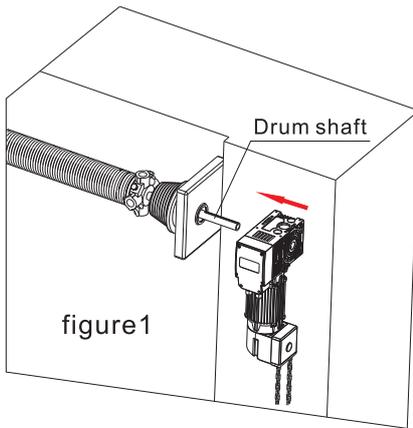

When the door at run time, no hand pull zipper!

Manage Time & Attendance for all your Branches from Head Office

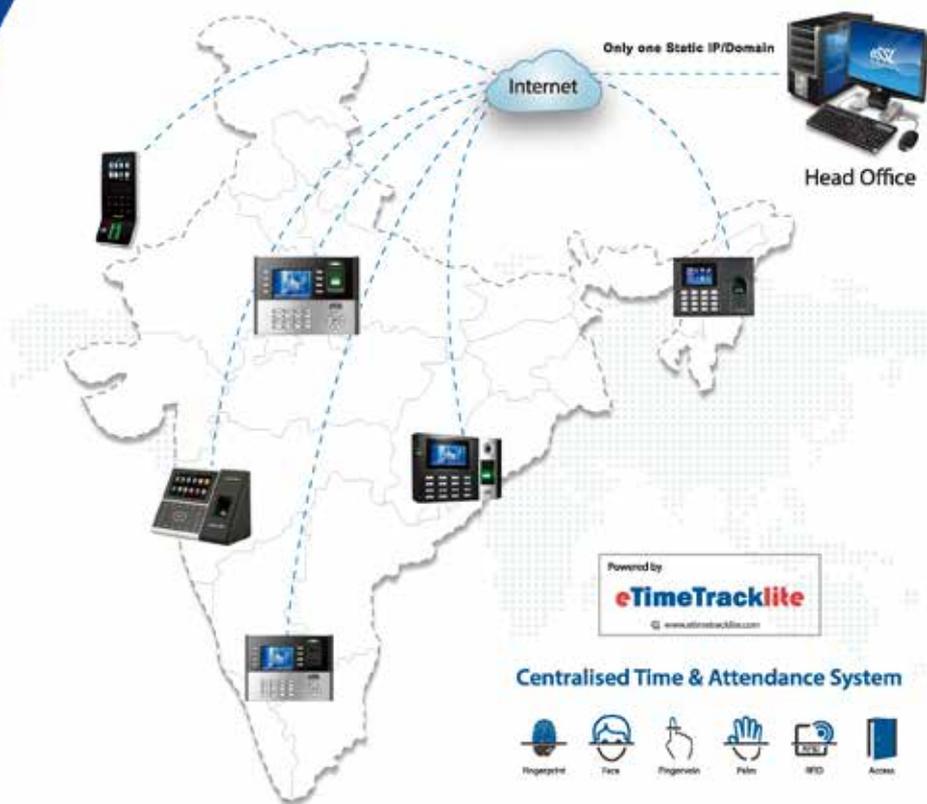

Disclaimer : Specifications can be changed without prior notice.

1. **Buying and Selling eSSL products online is prohibited and is termed as illegal**
2. Installation / Technical support / Training to end user is the responsibility of the installer or dealer
3. eSSL do not support end user directly, if they want support charges will be applicable



Enterprise Software Solutions Lab Pvt. Ltd. (Corporate-Office)

#24, 23rd main, Shambhavi Building, J P nagar 2nd phase, Bengaluru - 560078

www.esslsecurity.com | sales@esslsecurity.com | Ph : 91-8026090500