



User Manual ThermoAccess-9



Infrared Thermometer Access Control ThermoAccess-9



Basic specifications:

Sensor	WTTS001	Display	Infrared LED
Accurate	±0.2 ℃	Measuring time	<0.5s
Working voltage	5V ~ 12V input	Working ambient temperature:	5℃~44℃
Measuring distance:	5~10cm	Temp measurement range:	35℃~42.9℃
Internal relay	Yes	Wiegand input/output	Yes
Alarm	Yes(external available)	Certificates	CE/FCC
Size	130*90*53mm	Weight	240g
Package	Neutral packaging	Installation	Wall mounted

Settings:

You are suggested to set to a new password before using the this device with administrator function

Administrator function: Long pressing key "M" for 6 seconds, displaying default password "0000", Press Key "M" again to set the new passwords. Key "+/-" is for Increasing and decreasing the value, key "M" is for positioning (notes: please make sure to remember the new passwords)

- Alarm temperature setting: Press key "M" one time, the display will show 1. 37.5, meaning the default high temperature value is 37.5°C, press key "+/-" to adjust the target high temperature
- 2. Temperature compensation value setting: Press key "M" twice, the display will show 2. 0.0, press key "+/-" to adjust the value (adjust value unit is 0.1° C)
- 3. Alarm switch off setting: Press key "M" three time, the display will show <u>3. ON, press</u> key "+/-" to switch off or switch on the alarm
- 4. Interval time setting: Press key "M" the fourth time, the display will show <u>4...5</u>, key "+/-" to adjust value of interval time (interval time available between 3s ~ 90s)
- Passwords change setting: Press key "M" the fifth time, the display will show <u>5</u> PC, key "+/-" to adjust value of passwords, Key "+/-" is for Increasing and decreasing the value, key "M" is for positioning (notes: please make sure to remember the new passwords)
- 6. Exit setting: Press key "M" the sixth time to exit the setting



IM3 Access control connection Sketch Map

IM3 connection diagram



Connection descriptions:

Connection A:



- 1. GND: GND input
- 2. D2 OUT: wiegand output
- 3. D2 IN: wiegand input
- 4. GND: GND input
- 5. DI OUT: wiegand output
- 6. D1 IN: wiegand input

Connection B:



- 1. NO IN: Relay input
- 2. NO OUT: Relay output
- 3. GND: GND input
- 4. +12V: 12V power input



- 1. BELL+: Alarm + 12V output
- 2. BELL-: Alarm GND output



#24, Shambavi Building, 23rd Main, Marenahalli, JP Nagar 2nd Phase, Bengaluru - 560078 Phone : 91-8026090500 | Email : sales@esslsecurity.com www.esslsecurity.com