


Operating Instruction

Load Batteries and Power on

Load 3 pcs AA alkaline batteries into the battery holder of the rear panel, and insert the plug of the front panel into the socket of the rear panel.

Any finger can unlock before setting;

After registered, only the registered fingerprint can unlock.

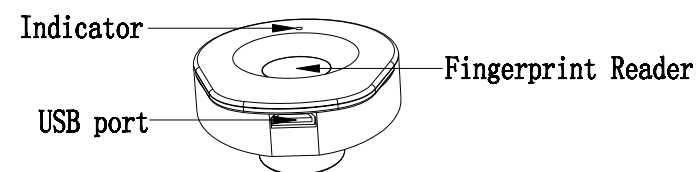

I. Register Fingerprint(s) (10 pcs)

After unlocking, keep your finger still on the reader, 5 seconds later green light on, raise your finger, blue light on put your finger on the reader again until green light blink, raise your fingerprint again; blue light on put your finger again and repeat like this 5 times, green light on 2 seconds, the fingerprint is successfully registered.

2 seconds later green light off, and blue light on, another new fingerprint can be registered like the first one steps until maximum 10 pcs. If more fingerprints are not necessary, just wait for more than 5 seconds until blue light off, exit the registration status.

If registration failed, red light on, need to re-register.

Unlock by Fingerprint:

Put your fingerprint on the reader, green light blink once and the latch retracts and the lock is unlocked; 3 seconds later green light blinks once again and the latch protrudes and the lock is locked.

If non-registered finger is put, red light blinks once.

Remarks:

A. If the lock already registered 10 full fingerprints and need to add new ones, red light on to exit the registration status. The new fingerprints can be registered after the lock needs to be initialized first.

B. Suggest to register at least 3 fingerprints to make sure the security of access.

C. If the fingerprint(s) is not sensitive after long term use, you can register new fingerprint(s).

II. Low Battery Warning:

When the batteries are low (less than 3.8V), green light blinks once and red light blinks 3 times while opening; it is to show the battery is low and need to replace them with new ones.

III. Emergency Unlocking:

Insert USB key into the USB port of the lock and put (any) finger on the reader, the latch retracts and the lock is unlocked.

IV. Initialize the Lock:

"Initialize the Lock" means: to delete all the (registered) fingerprints. 2 ways as below:

- A. After unlocking your finger is still on the reader, 5 seconds later green light on and your finger remains on the reader, remove your finger until red light blink 5 seconds later, initialization is successful.
- B. (If the lock already used (inserted) some USB key, then the lock only recognized the used USB key). Insert the USB key into the USB port of the lock, put your finger on the reader and remains on it until red light blinks 10 seconds later, remove away your finger and initialization is successful.

USB Key :

USB Key can be used both as the functions of "Emergency Unlocking" and "Initiate the Lock".

- If one USB Key is used for one lock, then the lock only accept the used key;
- If a new USB key needs to be used for the lock, insert the new Key into the lock and initialize the lock;
- One USB key can be used for many locks!!!