



## GLASS DOORS LOCK

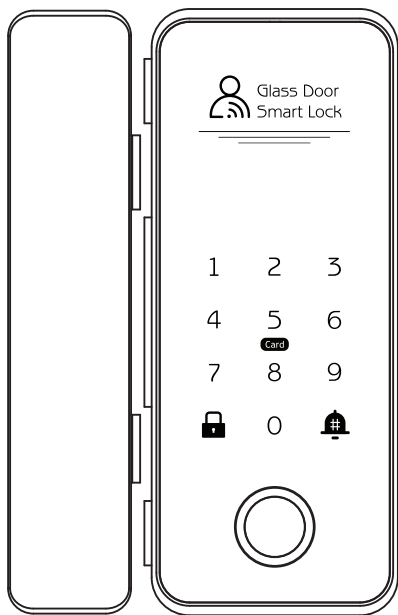


Enjoy your technolog office

## How to adjust the direction

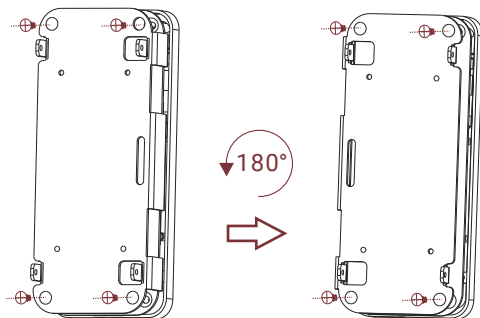

1. Remove the screws on both sides of the main lock, remove the rear housing, and then remove the four front housing fixing screws;
2. Separate the U-shaped bracket and the front shell, rotate the bracket 180 and install it back;
3. When the back shell is installed back, it also rotates 180 degrees to complete the left-right exchange.


## Cable's assemble and disassemble

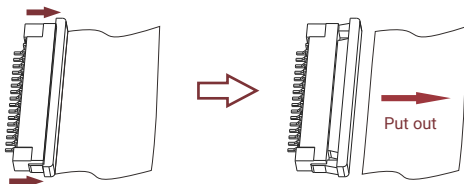


1. When removing the cable, gently pull out the lock to the right with both fingers, and then pull out the cable
2. When replacing the cable, insert the cable first, and then push the lock slightly to the left.

Note: Gently pull and push to prevent the lock from breaking


# Installation: frameless glass doors

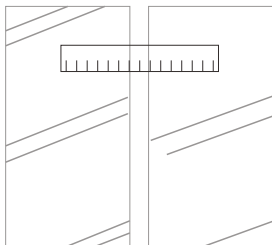


- 1 Clean the surface of the glass and stick a horizontal positioning card inside the door

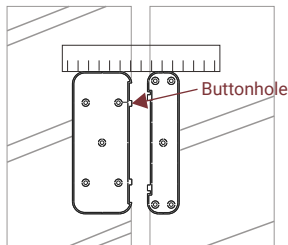

- 2 Tear off the mounting board tape and attach it to the card position

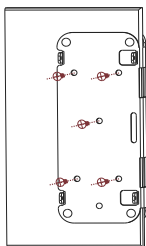

- 3 The main lock removes the rear housing and wiring, pushes in from the side, and unscrews screws (same as the secondary lock)


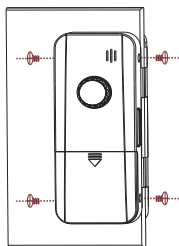


- 4 Connect the wire and return the rear housing of the main lock, and screw 4 screws on both sides (same as the secondary lock)

## Note:



- Be sure to use a horizontal positioning plate to align the main and secondary locks, and the door seams shall not be less than 4 mm;
- The thickness of the glass is 10-12mm, which needs to be customized

## Installation: single-glass door

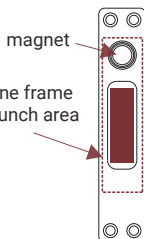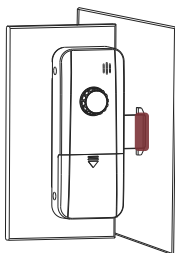


- 1 Press the previous page install the main lock, close the door and mark the lock tongue position
- 2 The wall is perforated with a side bar; note that the magnet orientation should be consistent with the main lock knob (shown above)

## Installation: Framed glass doors

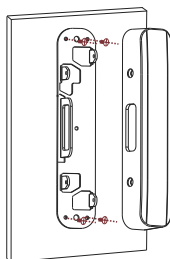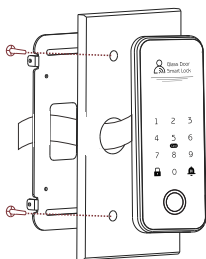

- 1 The main lock is perforated according to the size, the front panel passes through the stud and wire, the front plate
- 2 The auxiliary lock is directly fixed on the metal plate with self tapping screws or rivets, and then installed on the rear housing. Note: the secondary lock has only the rear housing

## Functional structure diagram

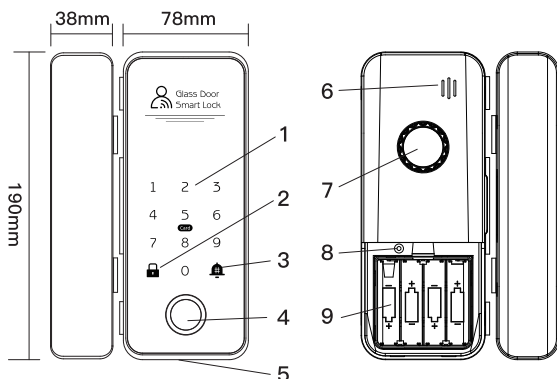

## Install and use the APP



### APP Name

Apple's iOS ( iPhone ), can be downloaded from App store.

Google's Android, can be downloaded from App market such as Google play.

1. After the app is installed, you need to use your mobile phone number to register your account, Then you can add a lock to the app;
2. If you need detailed operation instructions of app, please ask the sales.

## Switch to English voice prompt

In factory condition, Input 123456#, after unlocking, Input 39#2#, Will be converted to English voice

## Restore the factory settings

Long press the reset key loked. Input 000# after hearing "please input the initialization password", will restore the factory setting

## Scramble PIN Code

Anti-peeping password recognition system, support up to 16 bits of virtual password. If the actual password is 88888, you can enter "123458888854321 ok" to verify the unlock