

Intelligent cloud Lock

GLASS DOORS LOCK



How to adjust the direction




Right door opening (default)

Left door opening


In initialization mode, enter 123456#56#1# on the lock to switch the keyboard to the top and fingerprint to the bottom (default state); Enter 123456#56#2# to switch the keyboard to keyboard below and fingerprint above.

Cable's assemble and disassemble

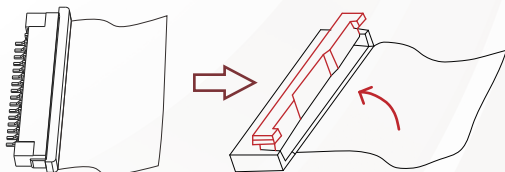


- 1、When removing the cable, gently lift the lock up with your fingertips, and then pull out the cable.
- 2、When replacing the cable, insert the cable first, and then press the lock down gently.

Installation: frameless glass doors

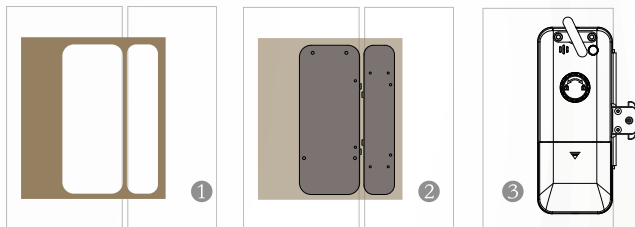

1. Clean the glass, and stick a horizontally positioned paper jam inside the door
2. Remove the adhesive paper of the mounting plate and paste it according to the position of the paper jam. The buckle feet should buckle the side of the glass door
3. Push the main lock in from the side of the glass, remove the battery cover, turn over the top cover strip, and screw on 4 fixing screws


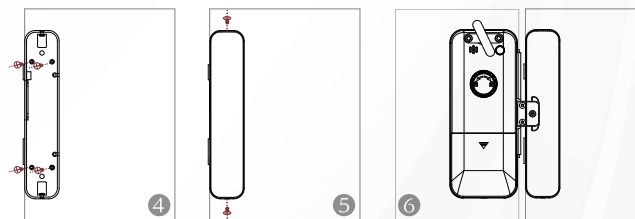


4. Remove the rear shell (upper and lower screws) from the auxiliary lock, push it in from the side of the glass, and screw on the fixing screws
5. Use the manual knob to lock, confirm that the main and auxiliary locks are aligned, then reinstall the back shell, and tighten the upper and lower two screws
6. Install the battery and close the battery cover to complete the installation

Note

1. Be sure to use positioning paper to align the main and auxiliary locks, and the door gap should not be less than 4mm
2. The thickness of the glass is 8–12 mm

Installation: single-glass door

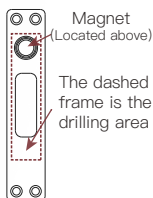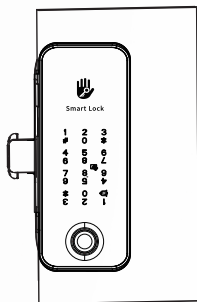


1. Install the main lock, close the door and mark the position of the bolt.

2. Drill holes on the wall and install side strips.


Note that the orientation of the magnet should be consistent with the main lock knob, the illustrations are all on the top

Installation: Framed glass doors

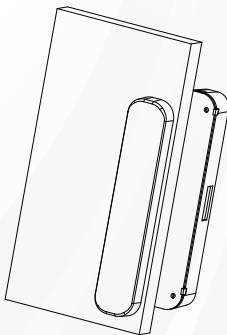

1. Install the main lock and drill holes for the wooden door or door frame.
2. After the studs and cables of the front panel pass through the wooden door, fix the front panel with screws on the metal plate behind the door.
3. Connect the cable to the rear shell, and fix the rear shell with screws on both sides to complete the main lock installation.
4. Install the auxiliary lock, fix the metal plate with self-tapping screws or rivets, and then install the back cover (as shown in the right picture above).

Functional structure diagram

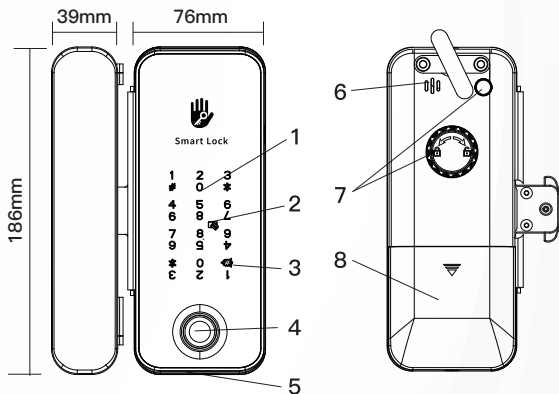

1 Keyboard

2 Verify card

3 Doorbell Key

4 Fingerprint

5 USB power port

6 Horn hole

7 Rotary knob

8 Battery compartment

Install and use the APP




APP Name: TT lock

Apple's iOS (iPhone), can be downloaded from App store.

Google's Android系, can be downloaded from App market such as Google play.

1. After the app is installed, you need to use your mobile phone number to register your account, Then you can add a lock to the app;
2. If you need detailed operation instructions of app, please ask the sales.

TT Lock

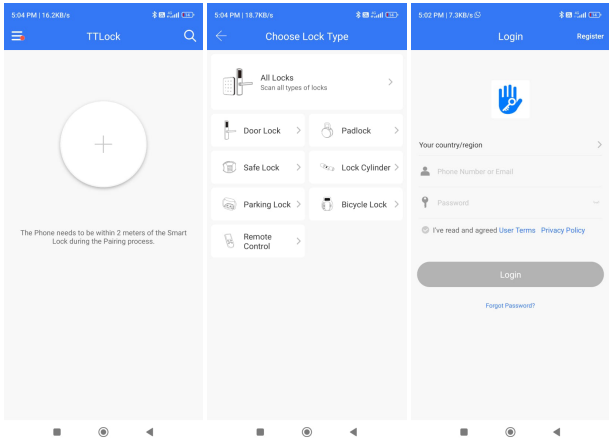

TT Lock

←

TTLock

⌚

←

Passage Mode

Save

ABC 102



Touch to Unlock, Long Press to Lock.

 Send eKey

 Generate Passcode

 eKeys

 Passcodes

 Authorized Admin

 Records

 Settings

Passage Mode ☒

During the specific time period, the Lock will remain Unlocked until it is manually Locked

On these Days

Sun

Mon

Tue

Wed

Thu

Fri

Sat

All Hours ☐

Start Time 08:45 >

End Time 18:10 >

←

Generate Passcode

←

Records

Refresh Records

Permanent

Timed

One-time

Erase

Custom

Start Time 2020.05.27 09:00

End Time 2020.05.27 09:00

Name Enter a name for this passcode

This Passcode MUST BE used at least Once, within 24 Hours, after the Start Date and Time or it will be SUSPENDED for Security Reasons.

Generate Passcode

Search

2020.05.26

LeLe fingerprint

19:33:47 Unlock with fingerprint

LeLe Pin

17:48:49 Unlock with Passcode 2388

LeLe fingerprint

16:26:40 Unlock with fingerprint

Mon

10:27:56 Unlock with fingerprint

Mon

07:07:44 Unlock with fingerprint

2020.05.25

LeLe Pin

20:25:16 Unlock with Passcode 2388

LeLe fingerprint

20:17:45 Unlock with fingerprint

Switch to English voice prompt

In initialization mode, enter 123456#39#1# on the lock to switch to Chinese; enter 123456#39#2# on the lock to switch to English;

Restore the factory settings

Long press the reset key locked. Input 0000# after hearing “please input the initialization password”, will restore the factory setting

Scramble PIN Code

Anti-peeping password recognition system, support up to 16 bits of virtual password. If the actual password is 88888, you can enter “123458888854321 ok” to verify the unlock

Technical Parameter

Shell material: aluminum alloy / ABS

Panel material: IML injection molding / Acrylic

Unlocking mode: APP/ Fingerprint / Password / IC card /
Temporary password / Remote control (optional)

Fingerprint type: Semiconductor fingerprint sensor

Recognition speed: 0.5s

Recognition error: $\leq 0.0001\%$

Fingerprint capacity: 100

IC Card capacity: 200 (Shared capacity with remote control)

Custom password: 150 (From APP sending: Unrestricted) **Working temperature:** $-20^{\circ}\text{C} \sim 79^{\circ}\text{C}$

Working humidity: 5 ~ 95% RH (no condensation)

Working power supply: 6V, Four No.5 batteries

Emergency power supply: Type-C

Power current: static $\leq 65\mu\text{A}$, dynamic $\leq 250\text{mA}$

Scope of application:

8–12mm frameless glass door (door seam size 4–15mm)

30–120mm framed glass door / wooden door