



USER MANUAL

HL200



Content

1. System Overview.....	5
1.1. System components.....	5
1.1.1. The door locks.....	5
1.1.2. General Lock Features.....	5
1.1.2.1. Deadbolt override.....	5
1.1.2.2. Cylinder for Mechanical Override (Optional).....	6
1.1.2.3. Common Doors.....	6
1.1.2.4. System Events.....	6
1.1.2.5. Lock Modes.....	6
1.1.2.6. Time-control.....	6
1.2. RFID card encoder.....	6
1.3. Hand held unit.....	7
1.4. BIS Software.....	7
1.4.1. Hardware requirements.....	7
1.4.2. The requirements for the PCs OS are:.....	7
2. Before software installation.....	7
2.1. In Win 7.....	8
2.2. Win 8.....	10
3. Software installations.....	11
4. Load software.....	16
5. Before programming a lock.....	18
5.1. Room type.....	18
5.2. Create rooms.....	19
5.2.1. Create guest room.....	19
5.2.2. Create inner door.....	22
5.3. Create Members.....	23
5.3.1. Create Emergency cards (Master key).....	23
5.3.2. Staff card.....	25
5.4. Time card.....	26
5.5. Encoder driver installation.....	27
5.6. Encoder selection.....	30
6. Main steps to program a lock (With Cards)	30
6.1. System ID card (S50).....	30
6.2. Lock setting card (S50).....	33
6.3. Setup lock's time with Time card (S70).....	35
6.4. Emergency cards (S50).....	37
6.5. Staff card (S50).....	40
6.5.1. Setup Time section for staff cards.....	40
6.5.2. Issue "Staff card".....	41
6.5.3. Authoring staffs.....	43
6.6. Authorizing card (S70).....	44
6.7. Assign member (Operator log in).....	45

7. Issue guest card.....	52
8. Back up database.....	54
9. Software registration.....	55
10. Hand held Unit.....	56
10.1. Hand held Unit profile.....	57
10.1.1. Function.....	57
10.1.2. Before Using.....	57
10.1.3. How to open and shut down.....	57
10.1.4. Manus of the hand held.....	57
10.1.5. Hand held operating steps for programming door lock.....	57
10.2. Driver installation.....	58
10.3. Options operation.....	62
10.3.1. Change password of handset (change pw of handset).....	62
10.3.2. Communicate with PC (communicate with PC).....	62
10.4. Handset setting.....	62
10.4.1. Set time.....	63
10.4.2. Get time.....	63
10.4.3. Update SP.....	64
10.4.4. Delete data.....	64
10.5. Setting information.....	66
10.5.1. Correct room information.....	66
10.5.2. Correct authorization.....	66
10.5.3. Write handset.....	67
10.5.3.1. Time sections setting.....	69
10.5.3.2. Blacklist setting.....	69
10.6. Program the lock with handset.....	71
10.6.1. Setup system password (setup sys pw).....	71
10.6.2. Setup lock's information (setup lock's info).....	71
10.6.3. Check lock's time (check lock's time).....	72
10.6.4. Adjust lock's time (adjust lock's time).....	72
10.6.5. Check lock's battery (check lock's battery).....	72
10.7. Audit trail lock's access records.....	72
10.7.1. Download lock's info (download lock's information).....	72
11. Trouble and Shooting.....	76
11.1. Run software error.....	76
11.2. Encoder is not working.....	76
11.3. Illegal card error.....	76
12. Emergency solution for lock.....	77
12.1. Frequently errors and Trouble Shooting Guide for Guest Card.....	77
12.2. Frequently errors and Trouble Shooting Guide for staff Card.....	78
13. Database type selection.....	79
13.1. Forget the operator password.....	80
13.1.1. Solution 1.....	80
13.1.2. Solution 2.....	80
13.2. Forget the system ID that ever set.....	80
13.3. Audit trail lock's information.....	81

13.3.1. Audit trail with Query card (S70).....	81
13.3.1.1. Issue query card.....	81
13.3.1.2. Read query card.....	83
13.3.2. Audit trail with Hand held.....	86
13.4. For a lost key card.....	87
13.4.1. Guest card.....	87
13.4.2. Staff card.....	87
13.4.3. Emergency card.....	87
13.5. Low voltage alarm.....	90
13.6. Door Ajar alarm.....	90

1. System Overview

1.1. System components

1.1.1. The door locks



1.1.2. General Lock Features

When a guest occupies a room, their complete privacy is insured by extracting a deadbolt. The deadbolt can only be retracted from outside the room with the (metal) Emergency Key (for locks with cylinders), a keycard with authorized deadbolt override,

Both the deadbolt and latch bolt can be retracted by use of a keycard authorized for deadbolt override. If no deadbolt override is assigned to the card, the indicator on the outside escutcheon, just above the card insertion slot, displays a yellow light when the card is inserted

1.1.2.1. Deadbolt override

A keycard can be authorized to override the deadbolt. Certain User Groups can be pre-defined to always have Deadbolt override. For Guest Keys it is also possible to set Deadbolt override as a tick off item in the Common Door list box. This means that the card is able to override the Privacy function (unlock when door is dead bolted).

The lock can always be opened by pressing the inner handle even if the deadbolt is extracted. This serves as an emergency exit

A new guest card automatically locks out the keycard of the previous guest. This is accomplished by assigning a start time to the card. When the card is issued, the system writes the present time onto the card.

Employee keycards work in parallel with the guest keycards. The employee keycards also are valid only for a specified amount of time. However, it is usually for a longer time than a guest keycard. Employee keycards are normally issued for access to one or several sections of rooms, depending on the hotel's needs, but keycards for bellboys can easily be encoded to allow access to individual rooms, like guest keycards. Employee access keycards do not override guest keycards and therefore do not affect a guest's access

1.1.2.2. Cylinder for Mechanical Override (Optional)

Most locksets may be equipped with a mechanical cylinder operated by the metal Emergency key (EMK). This cylinder will withdraw both latch and deadbolt when operated, and represents a dual independent emergency opening system, totally separated from the electronic lock controller.

1.1.2.3. Common Doors

Common Doors are typically perimeter doors, garage, health club, pool, VIP floors etc. This access is assigned automatically when the keycards are issued based on the settings in the System. Up to 32 of these Common Doors can be specified in the BIS Software.

Access to Common Doors is given in addition to doors that are specifically selected when the keycard is issued and up to 32 Common Doors can automatically assigned to a keycard when it is issued. For example, all Guest keycards might automatically include access through exterior entrances and parking

1.1.2.4. System Events

The BIS system keeps a constant log of every computer transaction. The log is recorded to the hard disk. The log may be recalled from computer memory at any time by running a system event report. Reports may include every computer entry or may be limited to a given room or a given user. Logged data are time of event, name of operator and details about the command issued.

1.1.2.5. Lock Modes

Locks can be set to operate in 2 different modes.

Normal Mode—the door is locked and unlocks when a valid keycard is withdrawn.

Passage Mode—the door will alternate between locked and unlocked whenever a valid keycard is inserted

1.1.2.6. Time-control

All keycards include a start and expiration date

1.2. RFID card encoder

It is used for reading and writing cards



RW-69

1.3. Hand held unit

The Hand held unit brings information from BIS database to the locks when the system is started for the first time (configuration and initialization) and brings information from the lock to BIS when you want to see the information of the lock.



1.4. BIS Software

The software can be installed on any PC running Windows 98, 2000, NT, XP, Vista, Win 7, Win 8, Win sever 2003, Win server 2008,Win server 2012

1.4.1. Hardware requirements

Most common brand PCs that meet the requirements for Windows98, 2000, NT, XP, Vista, Win 7, Win 8, Win sever 2003, Win server 2008, win server 2012can be used

1.4.2. The requirements for the PCs OS are:

Windows 98/NT/2000/XP/Vista/7/8/10, win server 2012

2. Before software installation

Closing UAC is necessary before installing be-tech locking system, otherwise you will get an error while running the software, and then you can not use the software. Please see below to close in Win 7 and Win 8.


2.1. In Win 7



Press “Start” in the Win 7, you see the screen as below, and then type “UAC”




You see “Change User Account control Settings”, click it

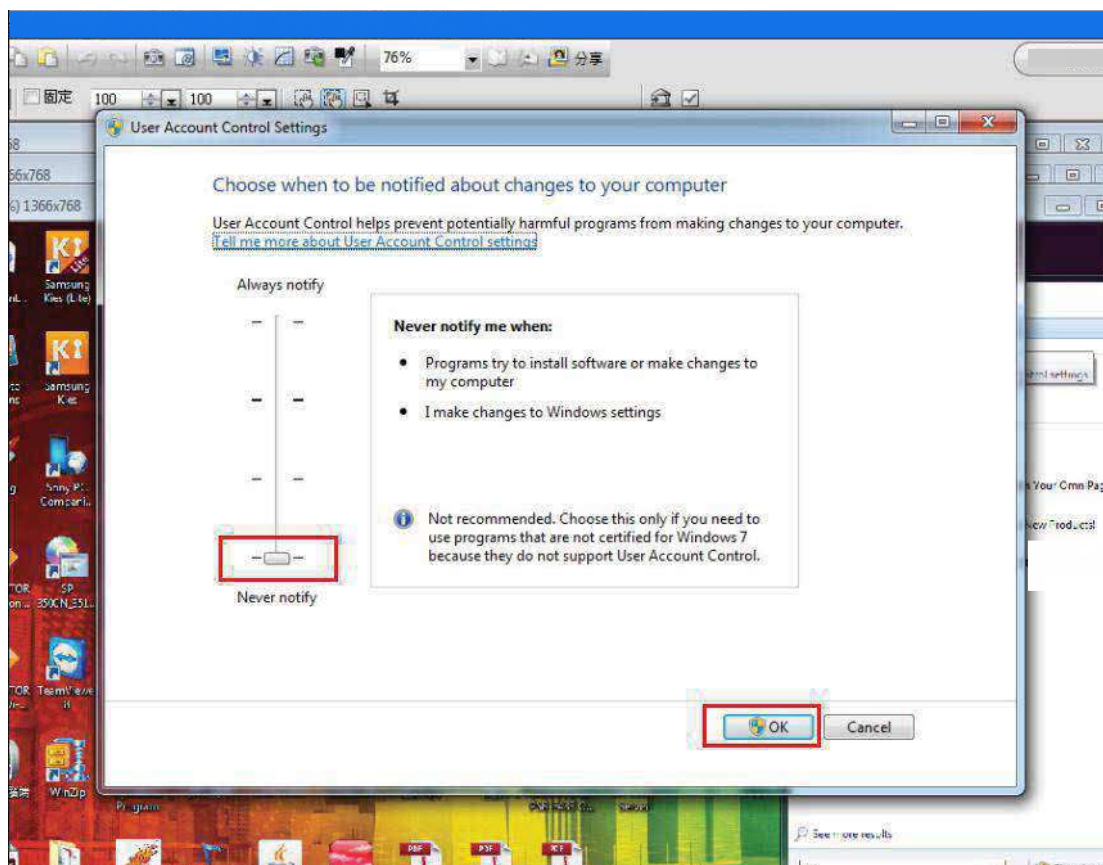


Choose “Never notify”, and press “OK”, restart your computer.

2.2. Win 8

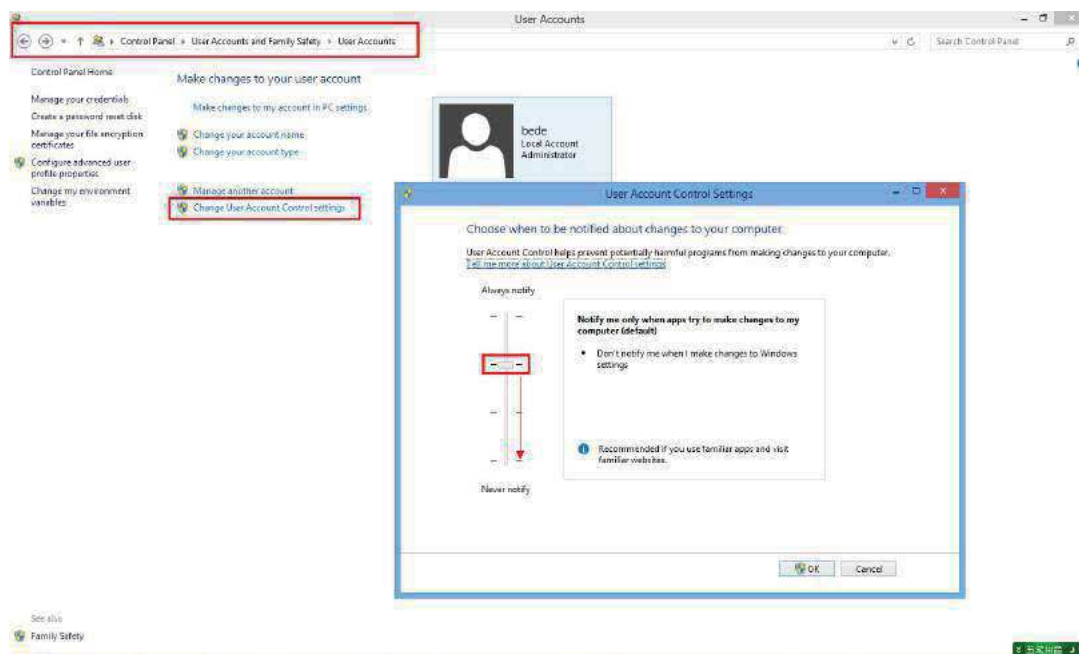

Choose “Never notify”, and press “OK”, restart your computer.

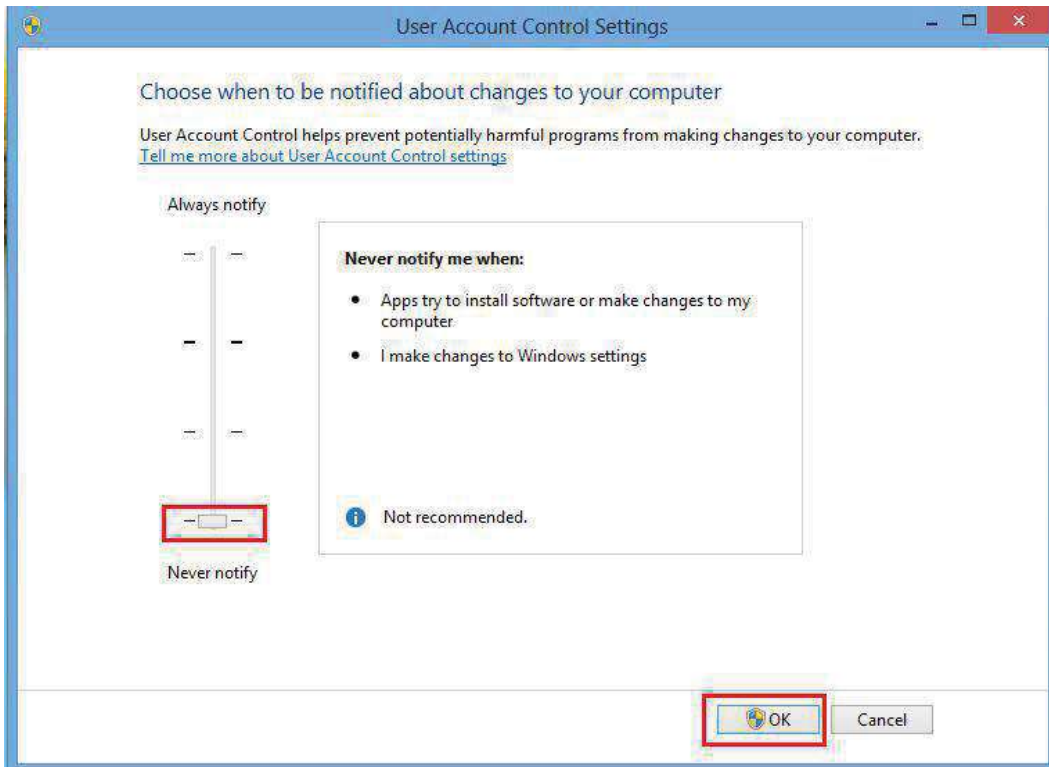


3. Software installations

Find out Be-tech installation “exe” file and




double click.

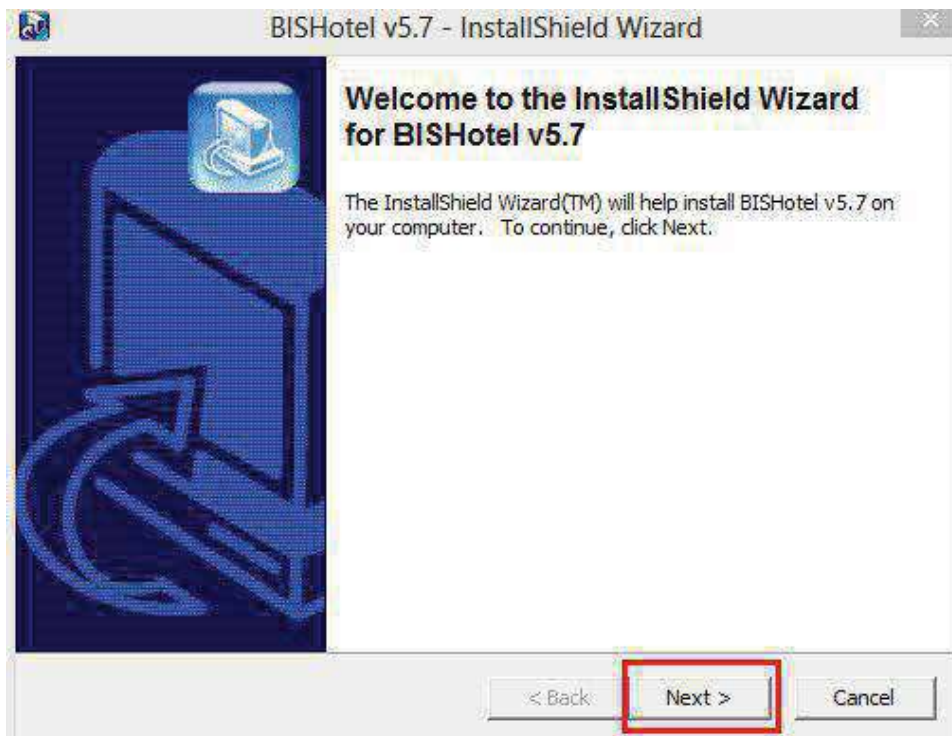


Double click the file and prepare to install

Click **Next**

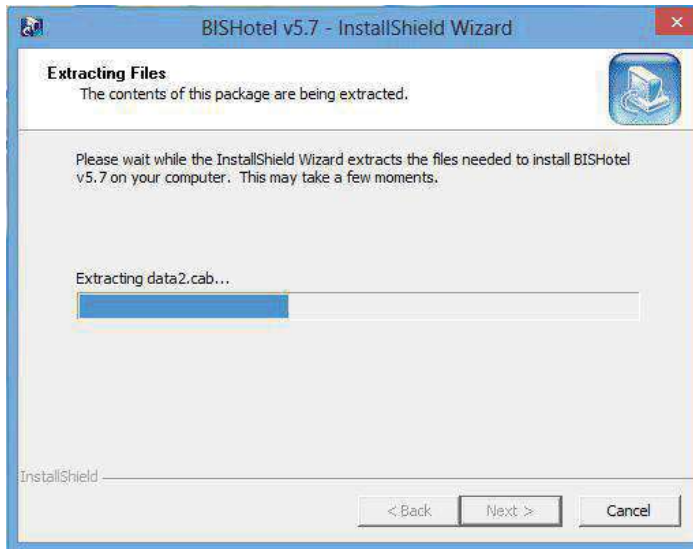


Choose language of the software

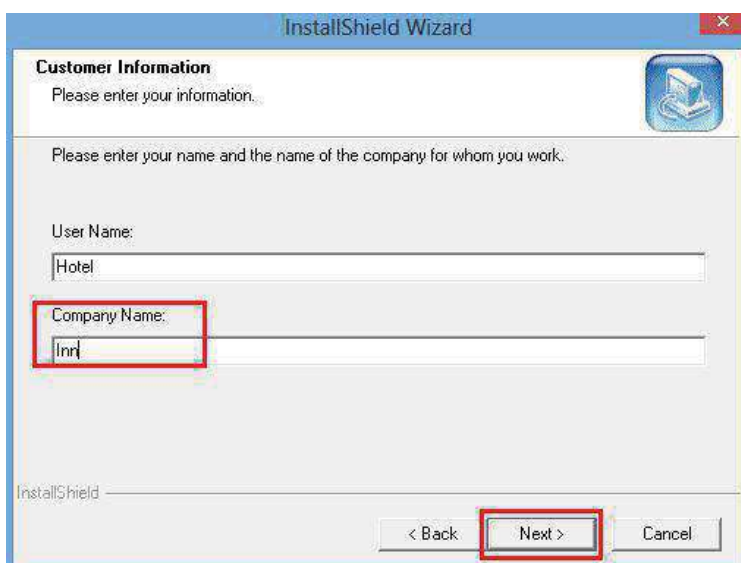


Enter the use name and company name.


Click "Next"

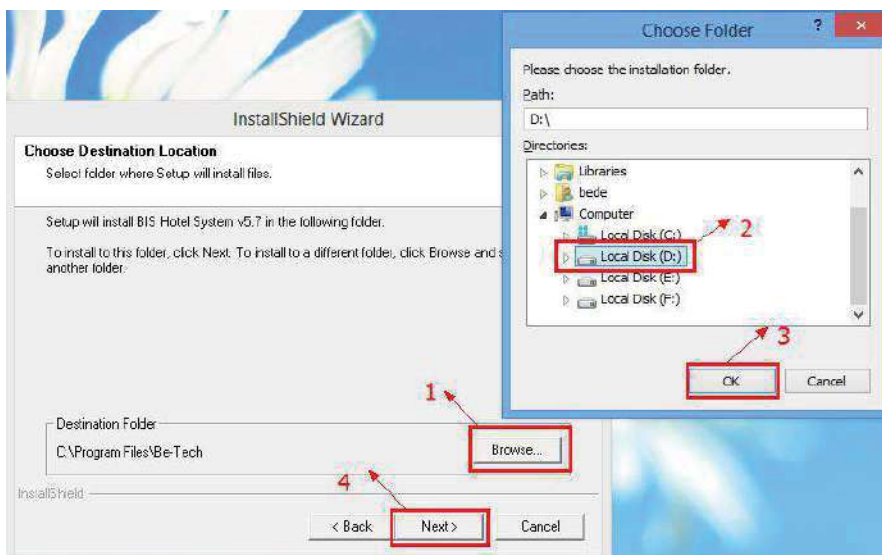



Note:

For OS Win 8, please install the software locating in other local disk except C:, otherwise that would be some little problem when you run the software. The problem is caused by the security level of Win 8, not by BIS software.

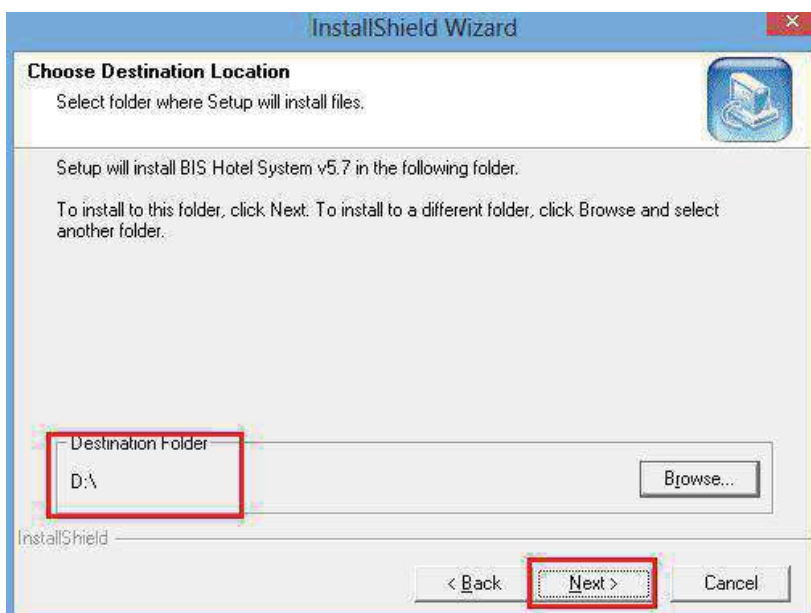


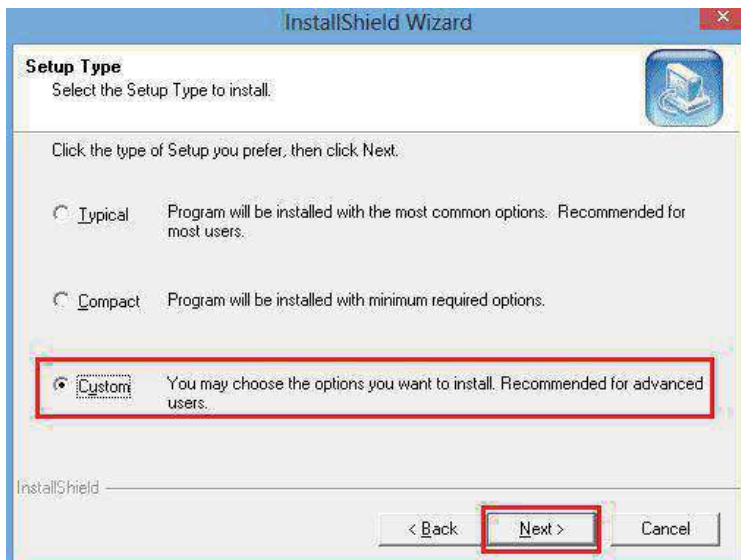

Choose "Custom"
And
Click "Next"

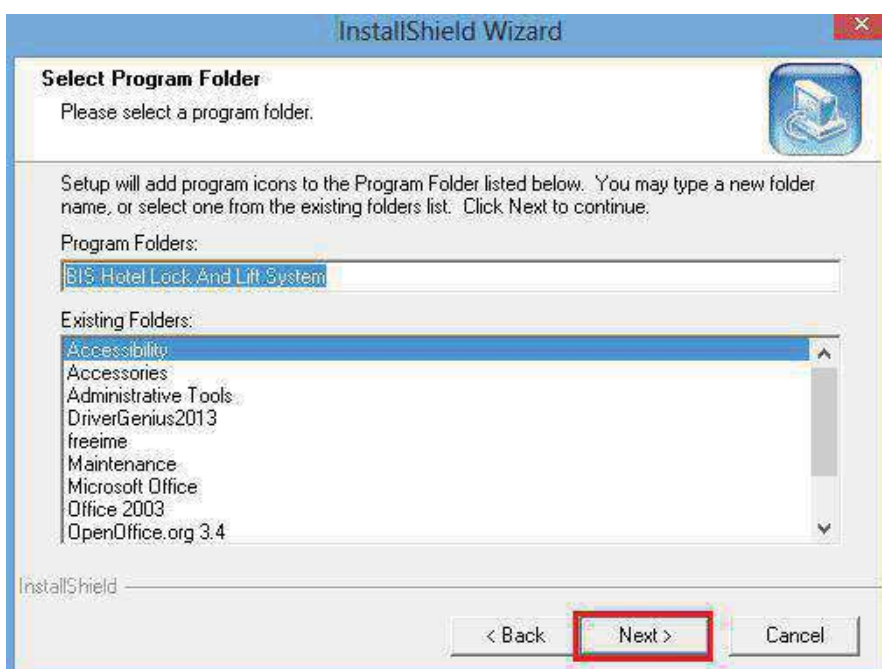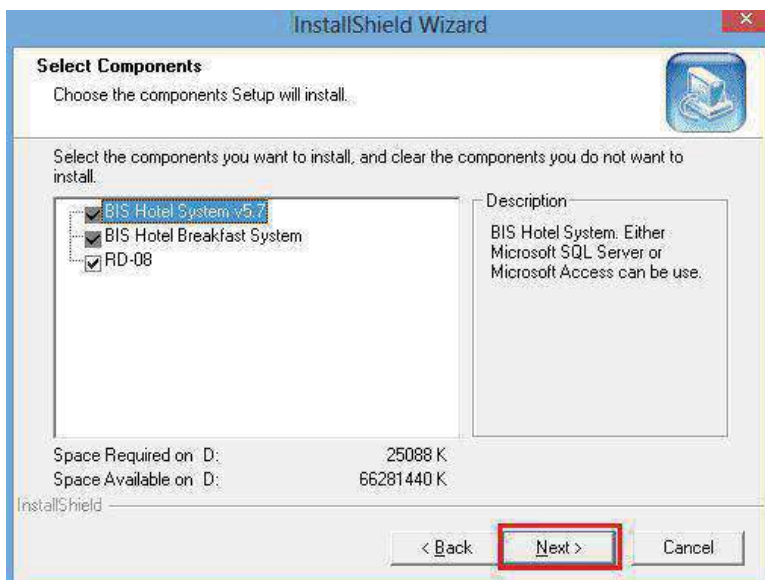

]

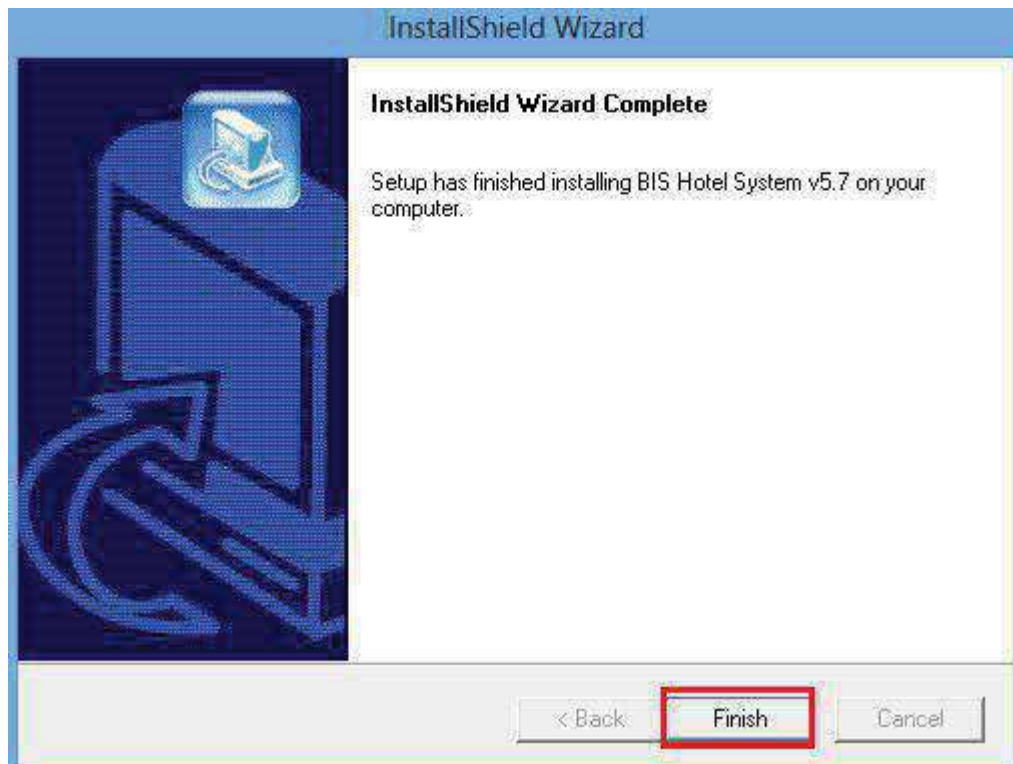


After installation, you will see the icons

4. Load software



Double click the icon

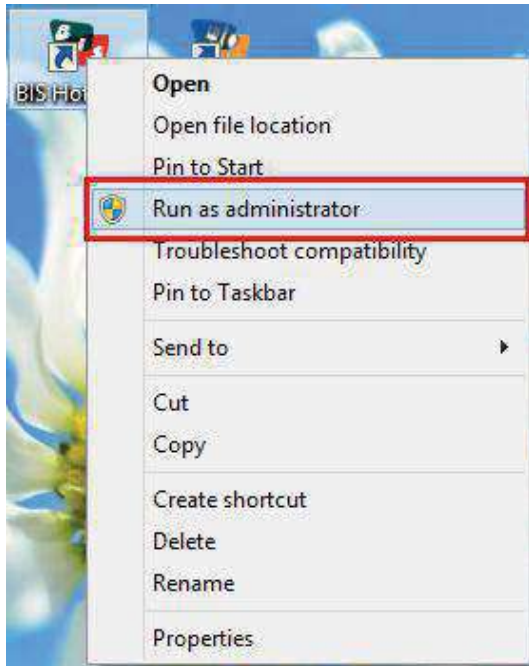

If you can't run the software in QS Win 8, please right click "BIS Hotel 5.7" and select "Run as administrator"



Select the application language.

The dialogue will not pop up if select "Don't show this dialog again"



There are two databases available for Be-tech locking system, "Microsoft Access" and "SQL Server",
Ms ACCESS is for stand alone computer to issue card,
which is contained after installing the software.

Database Login Information

MS Access **SQL Server**

Server Name: [local]

SQL Server Type

☒ SQL Server 2000 ☐ SQL Server 2005

Authentication Mode

☐ Windows NT ☒ SQL Server

User Name: sa

Login Password:

☒ Don't show this dialog again. **OK** Cancel

Before using SQL servers, you have to install SQL database first.

SQL database is for multi-computers to issue cards, regarding to how to run SQL, please contact us for more information.

Click "OK", you will see the screen shows as below

Operator Login

Operator code:

Operator name:

Description:

Login password:




OK Cancel

If you did not setup the operator, then you can continue as clicking "OK", you will see as below


5. Before programming a lock

Before programming a lock, make sure all of the information is ready, such as room types, room numbers, time sections, emergency cards, staff cards are completed.

5.1. Room type

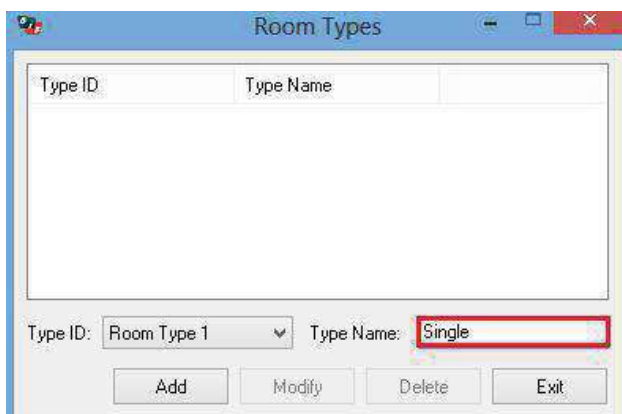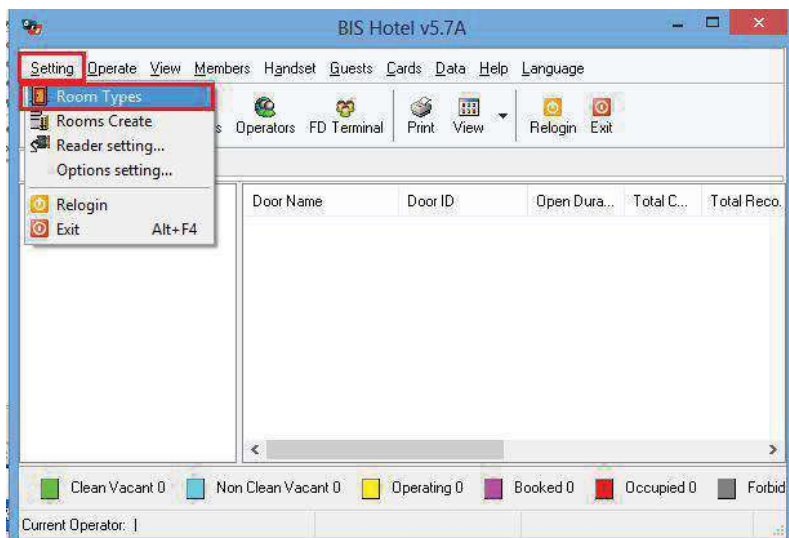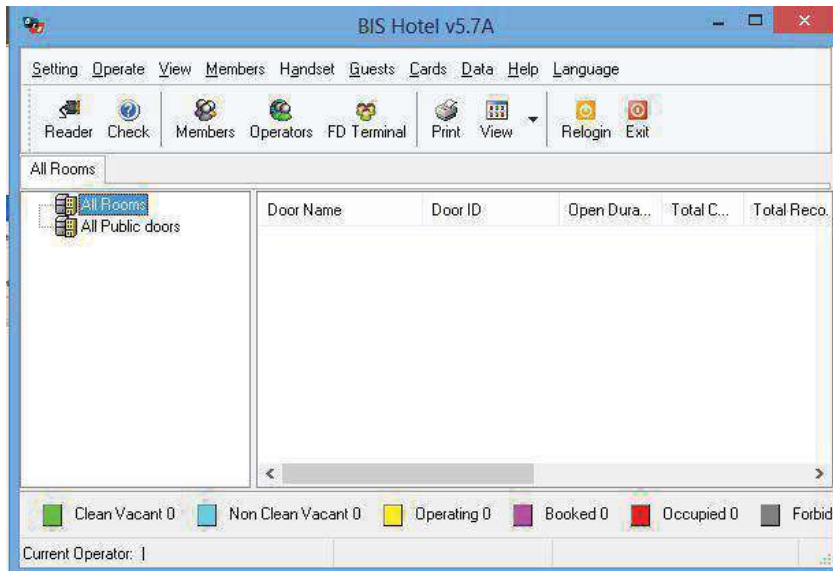


Choose the “Type ID” and enter “Type Name”, and click “Add”

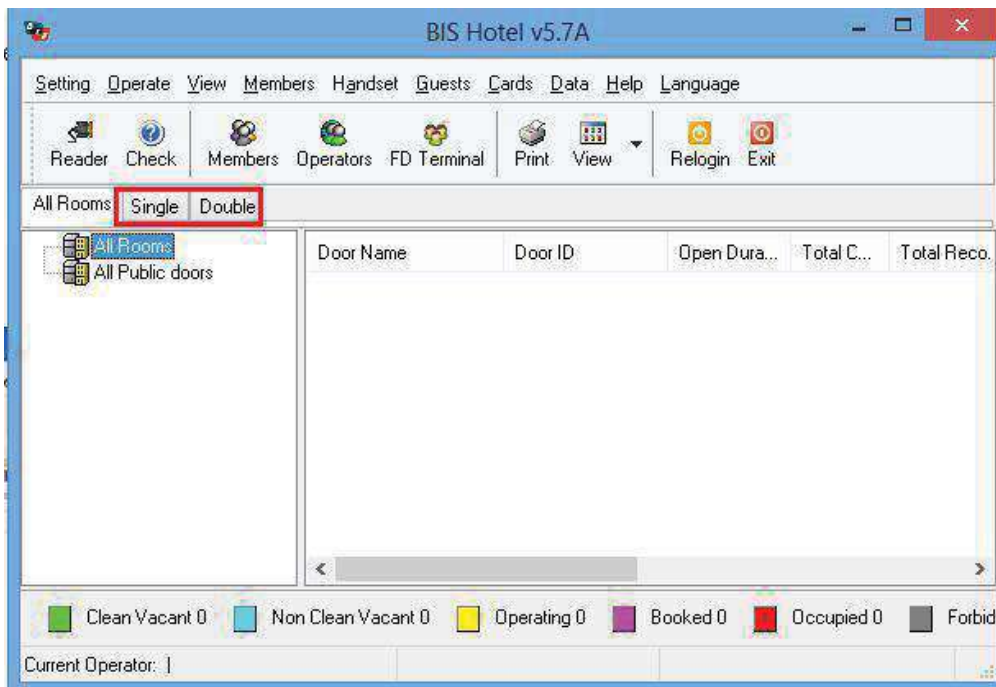

After adding all the “Room Types”, you will see the “Room Types” showing on the software.

5.2. Create rooms

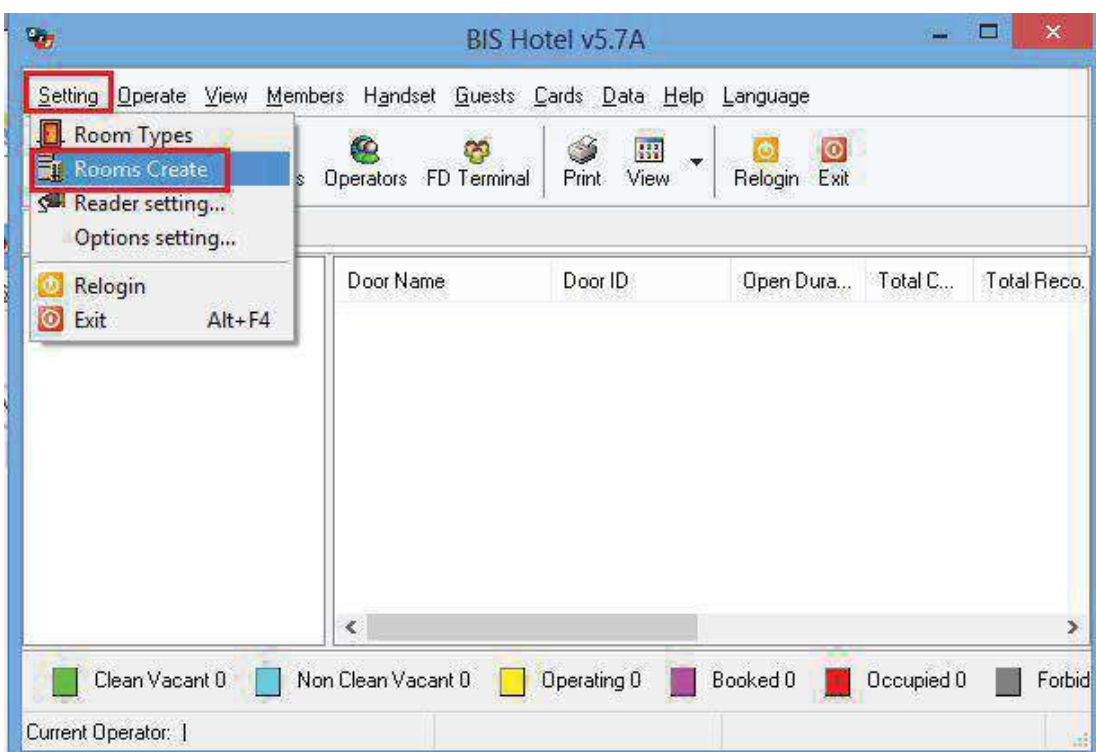



5.2.1. Create guest room

There are two types of room in the “Rooms Create”, one is “All Rooms” which is normally for guest room or some special rooms that allows specified person to getting in; the other is “All Public Doors”

which allows all guests and hotel staffs to get in, please find out the “MJM instruction” for further instructions.


“All rooms” is normally for setting guest room.

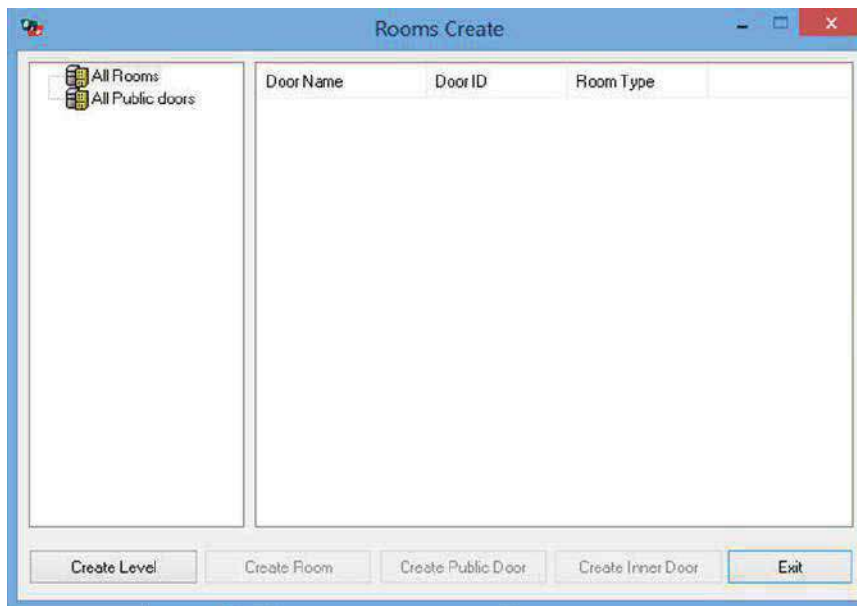


Left click “All Rooms” to make the ground color is blue  , and then click “Create Level”, the “New Building” is created. If you want to create more buildings, return to left click “All Rooms” to make the ground color is blue and click “create level”. Right click “New Buildings” to delete or rename.



, but “All Room” is only can be renamed, can’t be deleted.

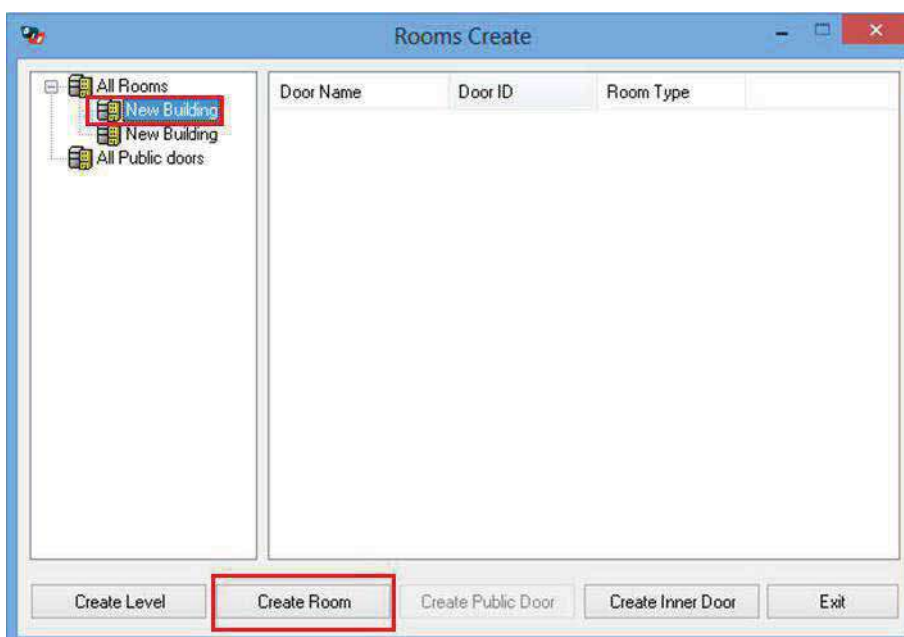


Left Click “New Building” to make the ground color is blue  , and then click “create room”

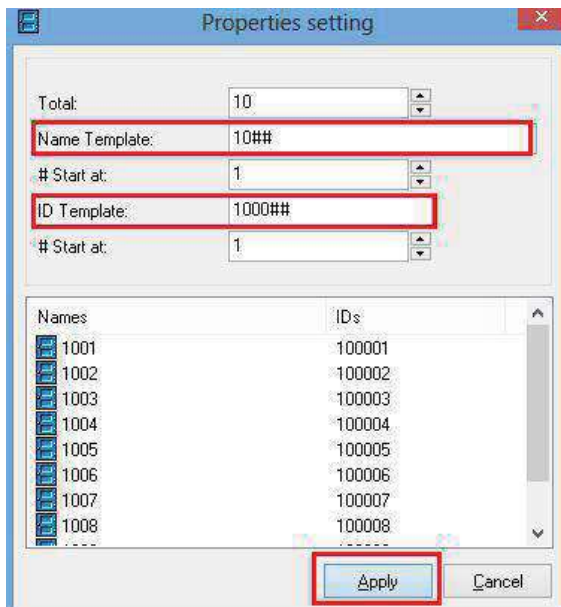


You can change “Name Template” and “ID Template”

Due to every floor own 10 rooms that we should set the total number to 10. The door name set to “10##”, the door ID set to “1000##”, both of their start number is “1”. Click the **Apply** button to finish the operation. Follow the above steps to add all the rooms of each floor.



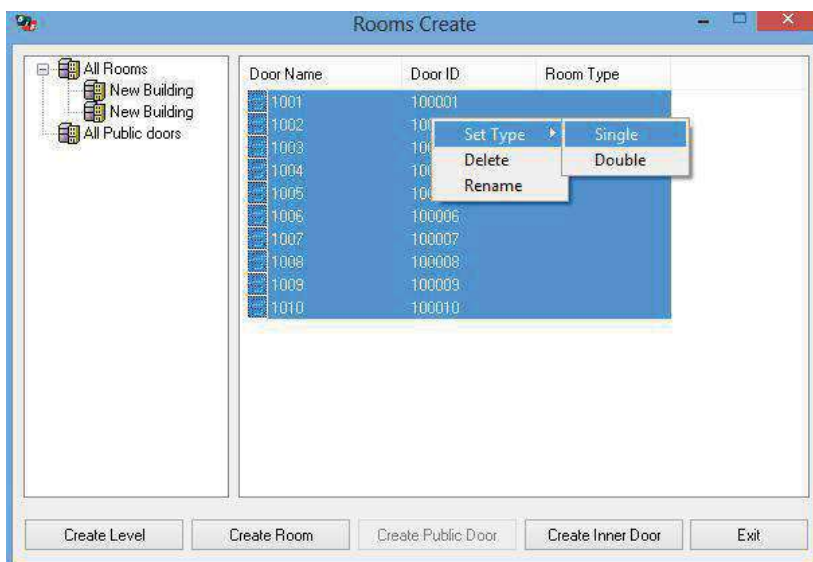


Choose the room and right click, setup the room type. You can select all rooms or one by one.

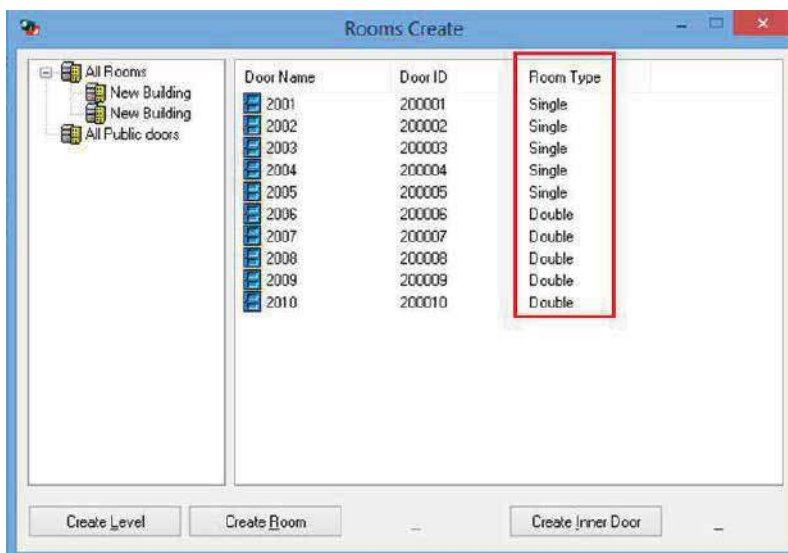



5.2.2. Create inner door

The inner door function is normally for some big room which has an inner room. Choose the room which has the inner room and click to make the ground color is blue, and then click “create inner room

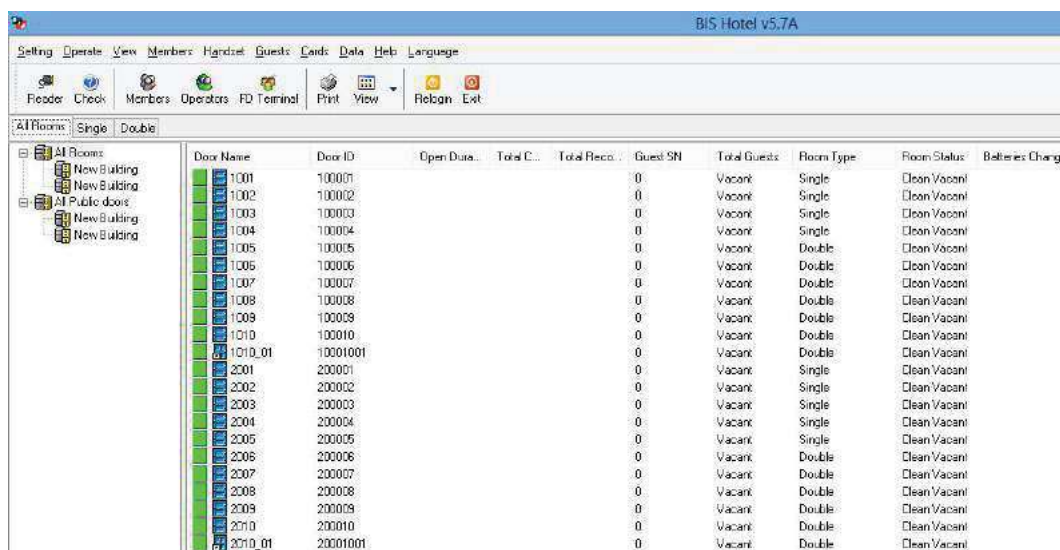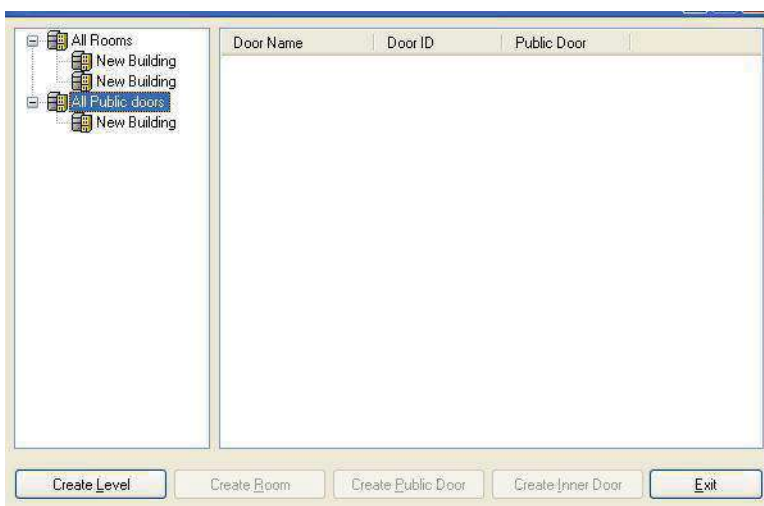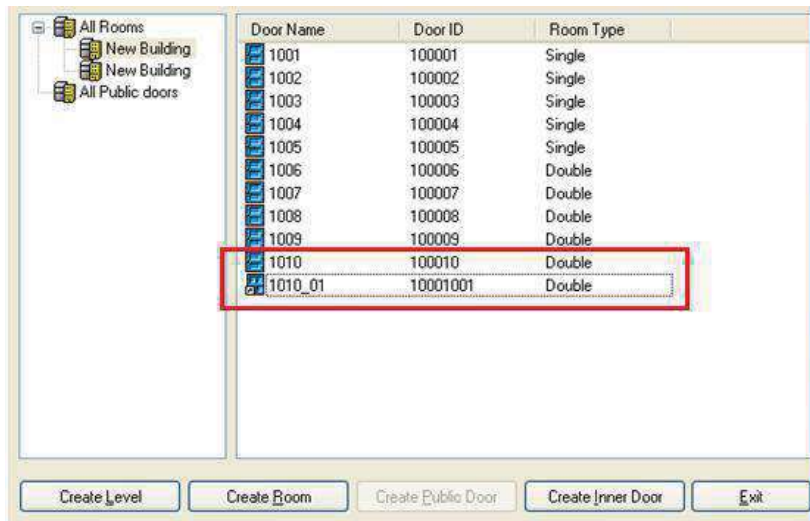

5.3. Create Members


Click “Members”, choose “Member Management”

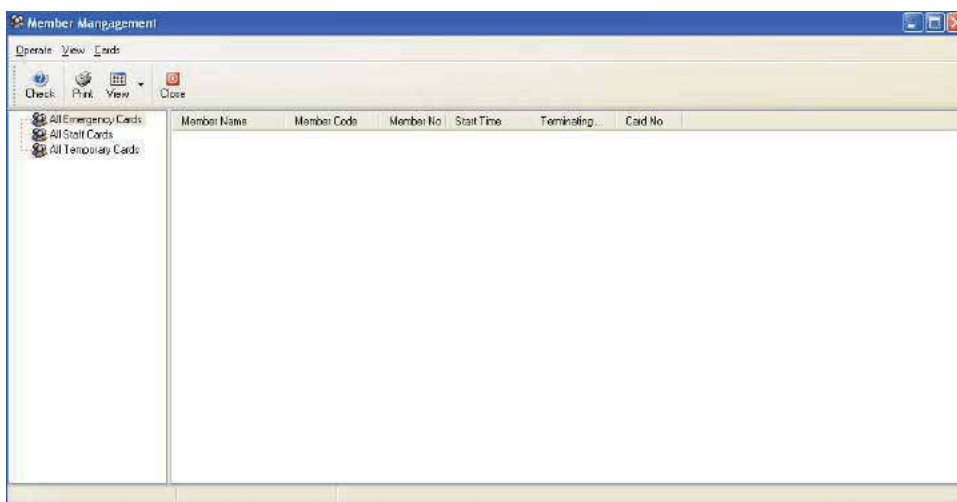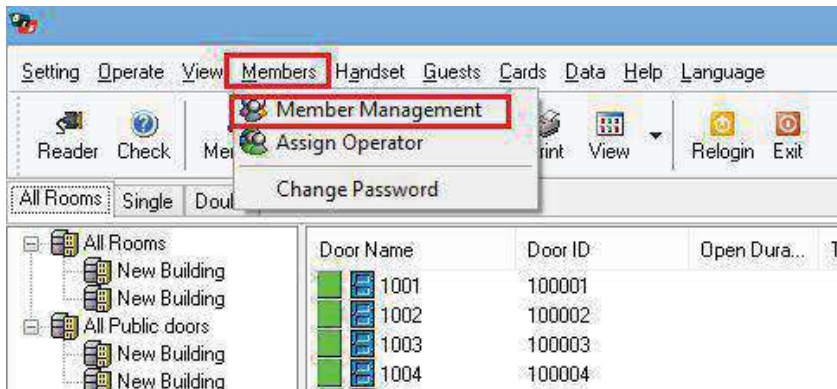


There are three items in “member Management”

All Emergency cards, All staff cards, All temporary card

5.3.1. Create Emergency cards (Master key)

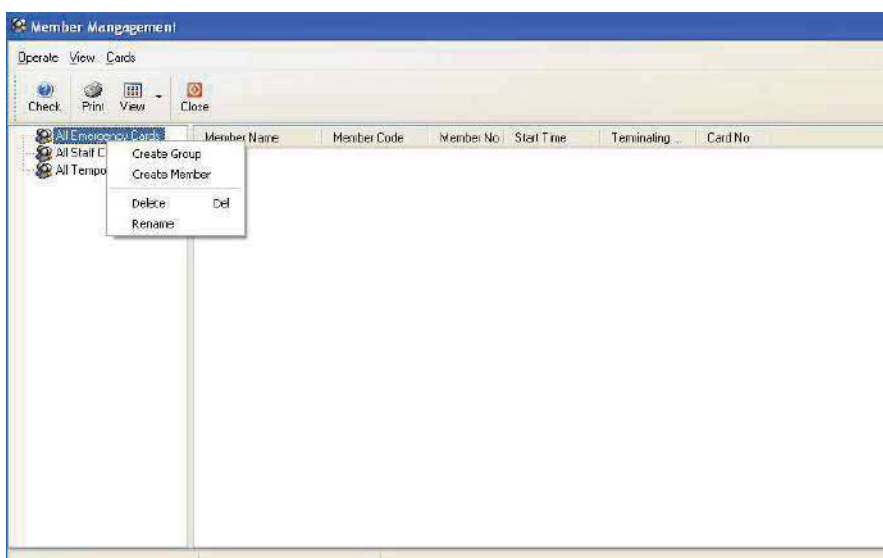

Right Click “All Emergency Cards”, you will see the options, and then click “Create Group”, “new group” is created. The cards in this group can open locks freely, without any limitations.

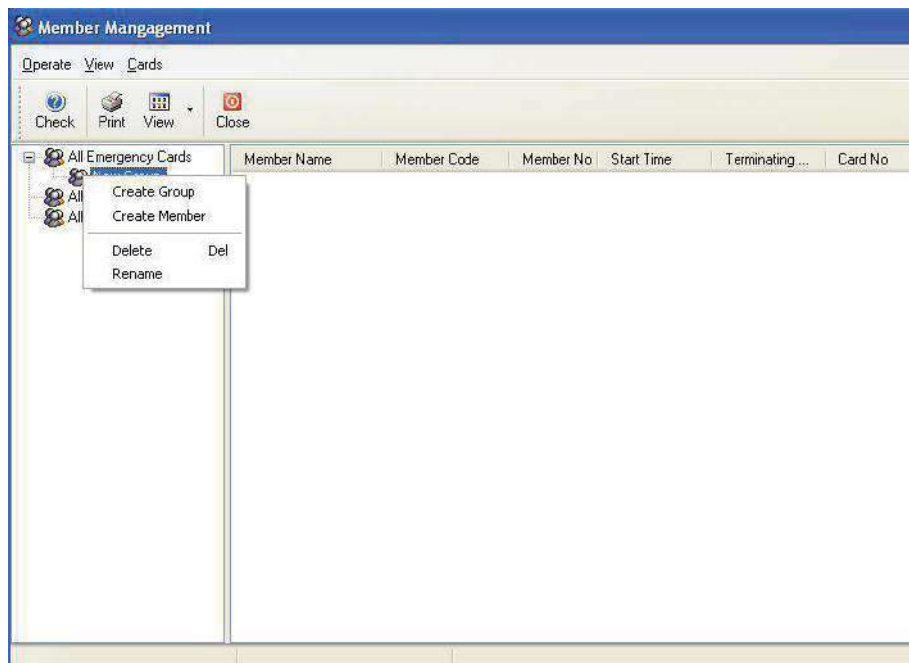

The 'Create Members' dialog box has a 'Member Setting' section with the following fields:

- Total number: 2
- Member name template: 00##
- Start #: 1
- Member code template: 00000000##
- Start #: 1


Below the settings is a table showing the generated members:

Member Name	Member Code
0001	0000000001
0002	0000000002

At the bottom are 'Apply' and 'Cancel' buttons.

Create the members of “All Emergency Cards”


A window will turn up, now the window requires you to fill in the member information. After all the information has been registered, click the **Apply** button to finish the procedure and click the **Cancel** button to return to the system. Follow the above steps to add all the members into the system.

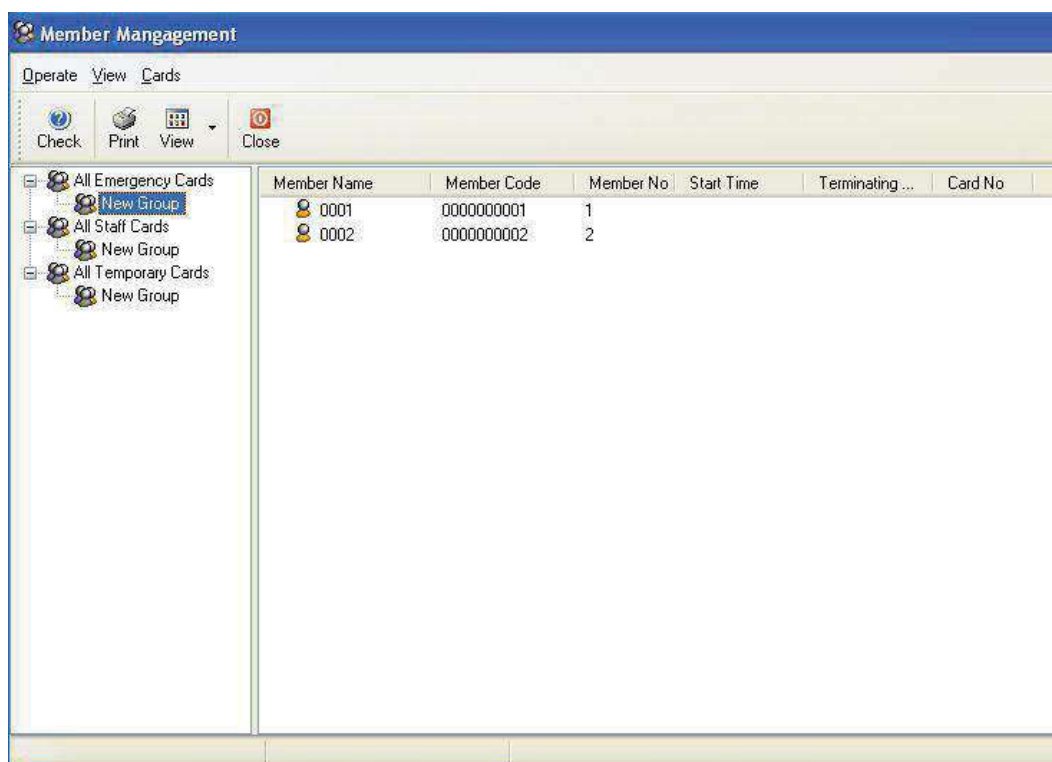

Notice:

Every Member code template is the unique and it is a sign of member. So before the adding, please assign the code template to every member by a plan.

5.3.2. Staff card

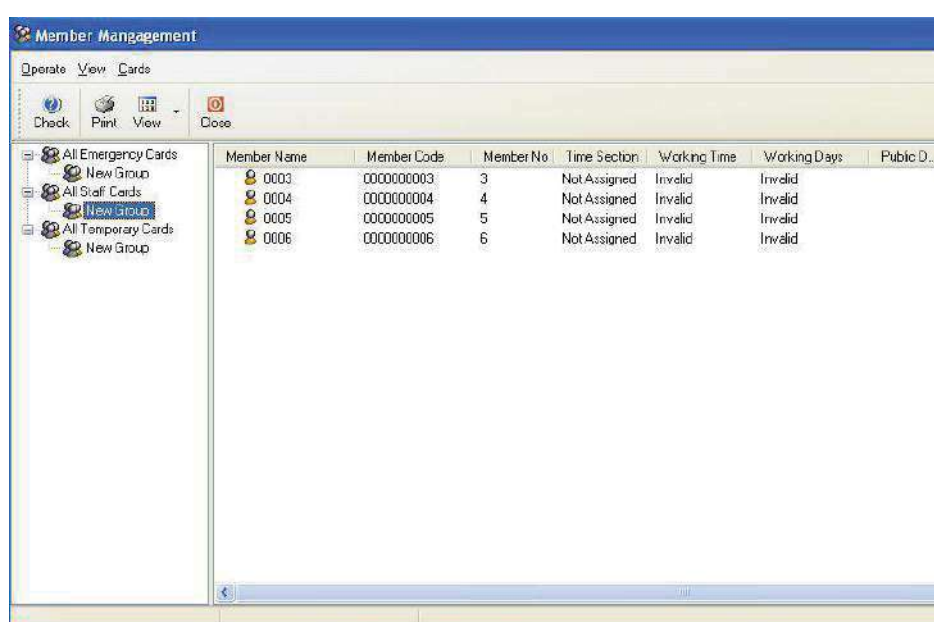


Staff cards are normally for the employees in the hotel, like house keeping, it is controlled by time and Door numbers.

Only 50 groups of staff card number can be recognized by door lock.


5.4. Time card

Time section is use to analyze the work time. Only the corresponding work time could be accepted to open the door. At this case, we divide the Sunshine hotel work time into six sections like this:

Morning shift	Middle shift	Night shift	Morning shift	Middle shift	Night shift
8:00-16:00	16:00-00:00	00:00-8:00	8:00-16:00	16:00-00:00	00:00-8:00
Monday to Friday	Monday to Friday	Monday to Friday	Sat Sun	Sat Sun	Sat Sun


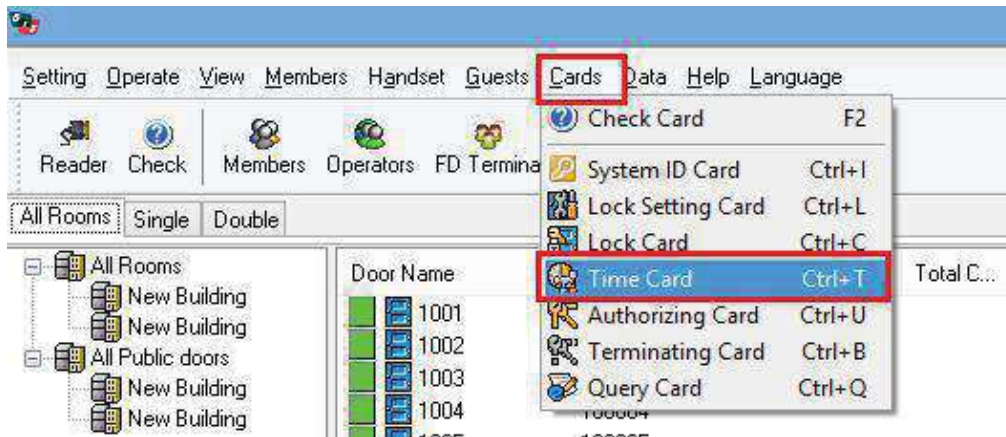



Time card menu pop up, Time Section1 is defaulted as 24 hours. Press the **Issue** button to make a time card for lock's time setting. You can set other Time Sections and choose working time 16:00-24:00, click + ,the day select the Monday to Friday, make all the left time sections like the above procedures

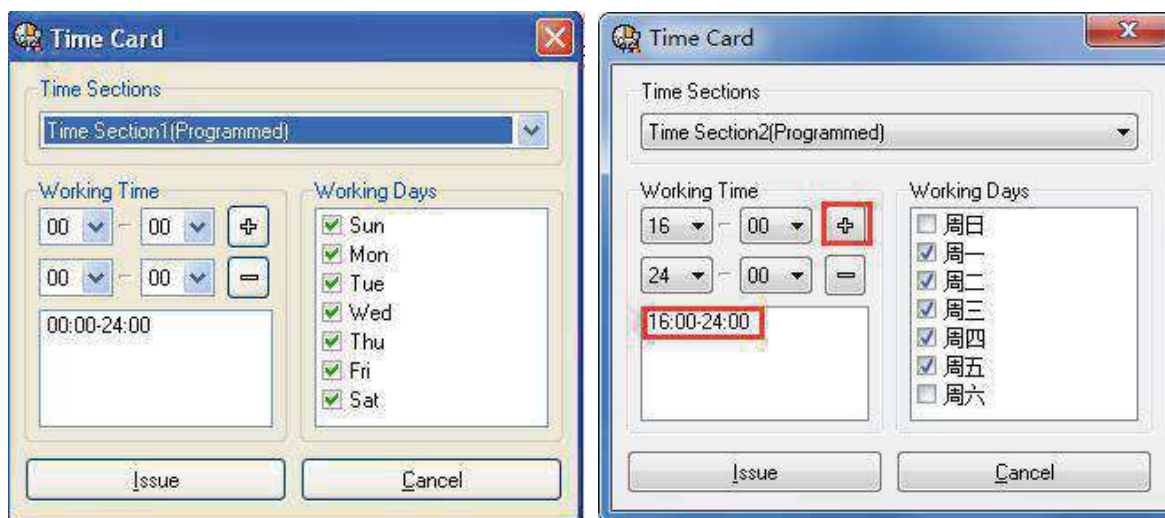


5.5. Encoder driver installation

Insert the encoder, there will be a window popping up “found new hardware”, you need to install the driver, if there is nothing popping up, you need to find out device manager to fix the driver installations.

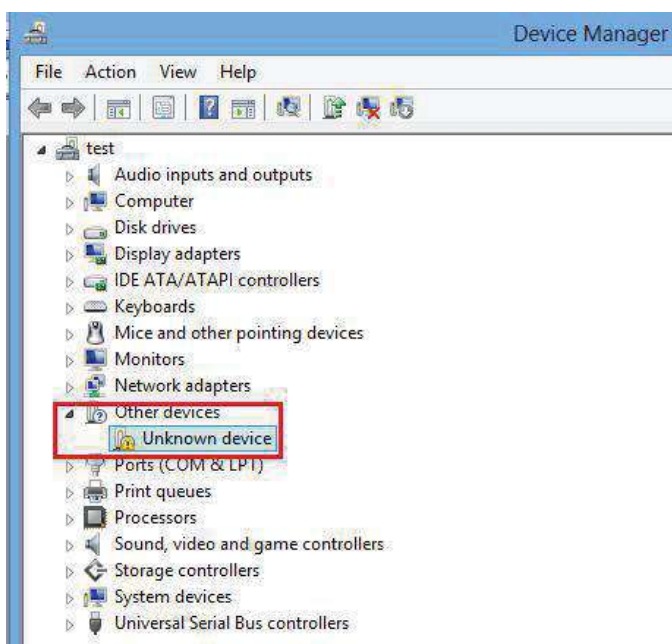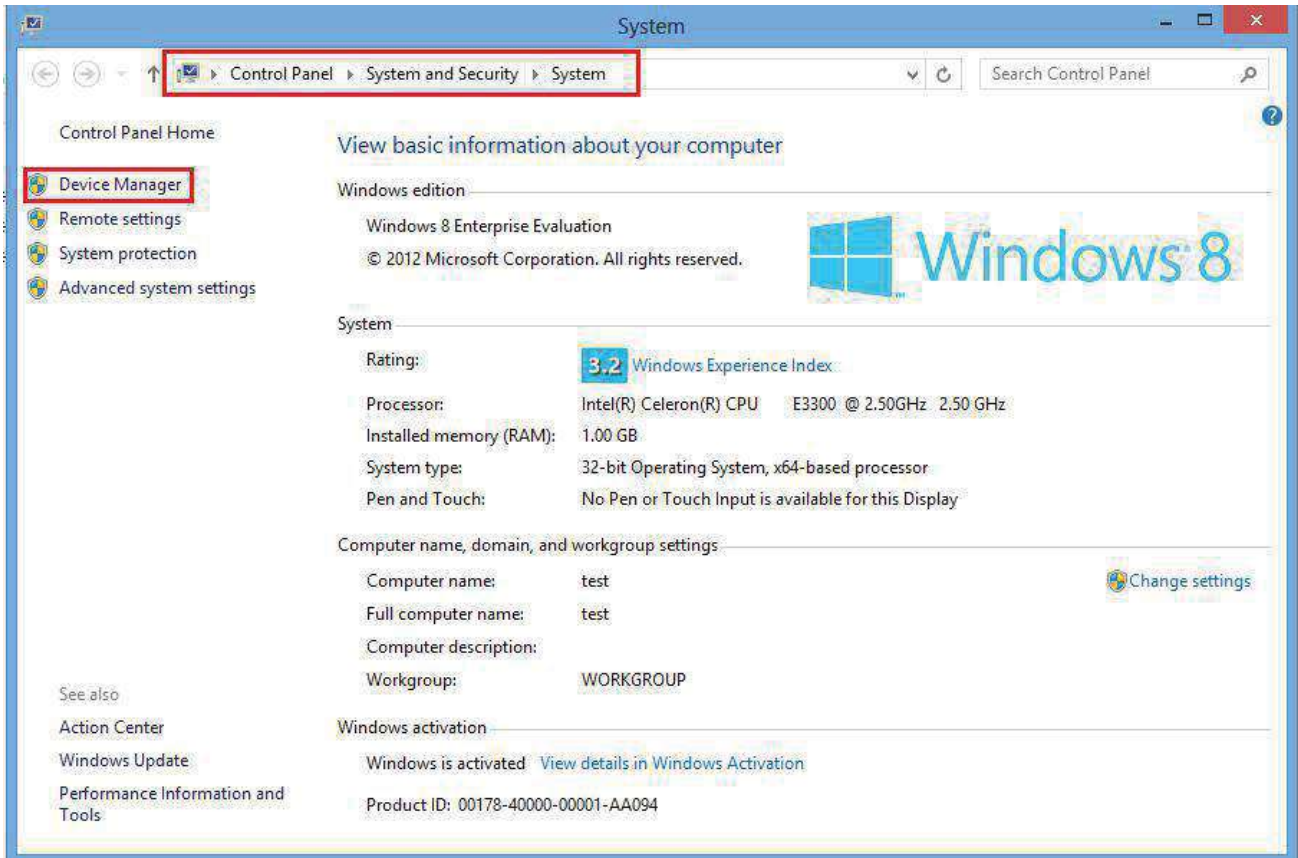

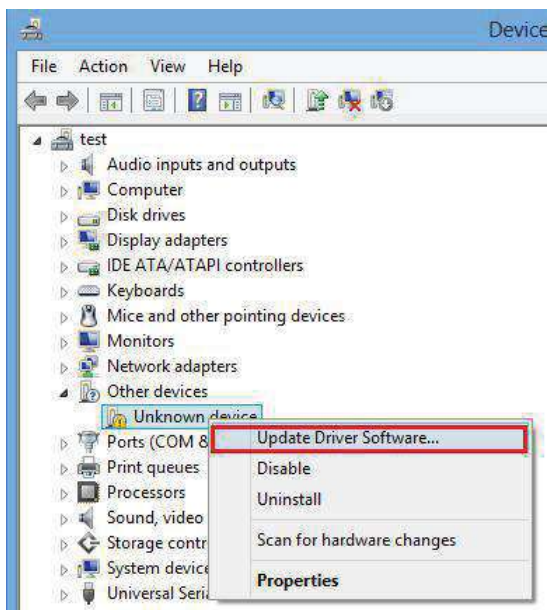


Right click

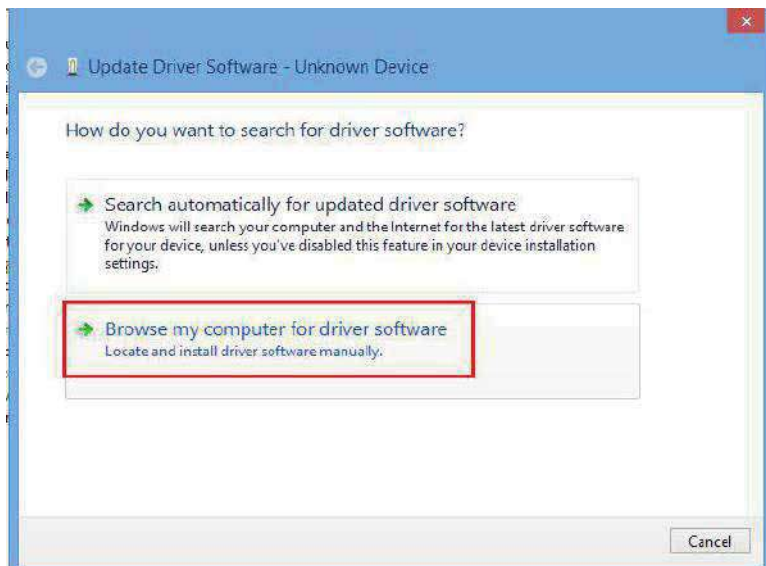


Follow the guidance to find out the **RW-41** folder.



After a while, driver installs complete, you will see the encoder details in the Device Manager

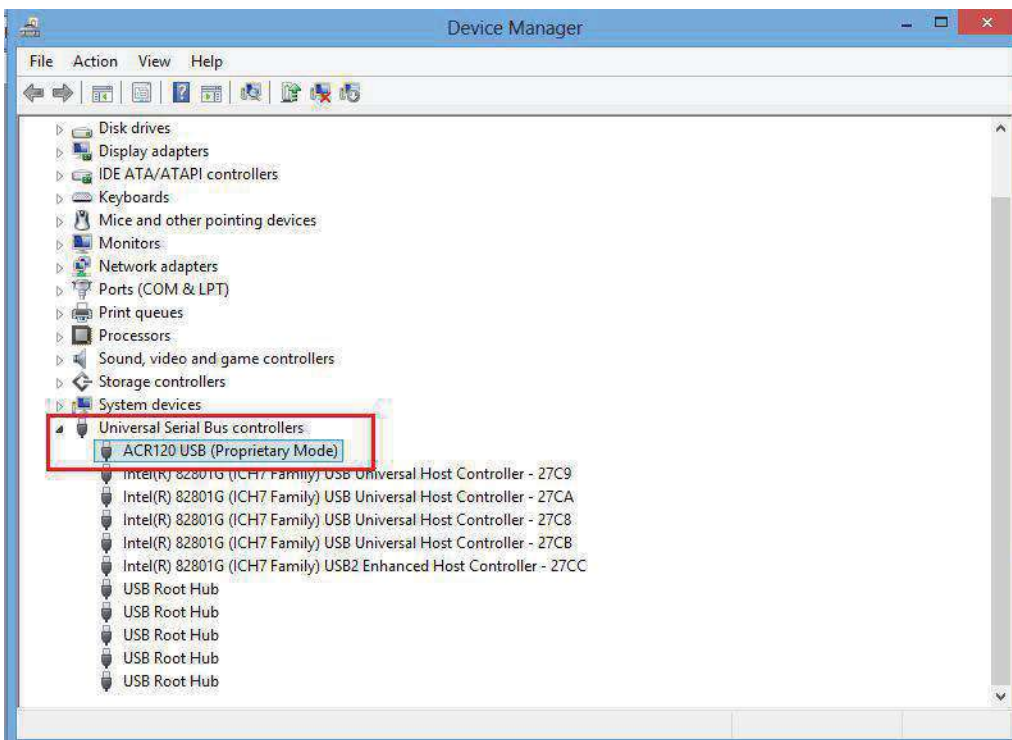

5.6. Encoder selection

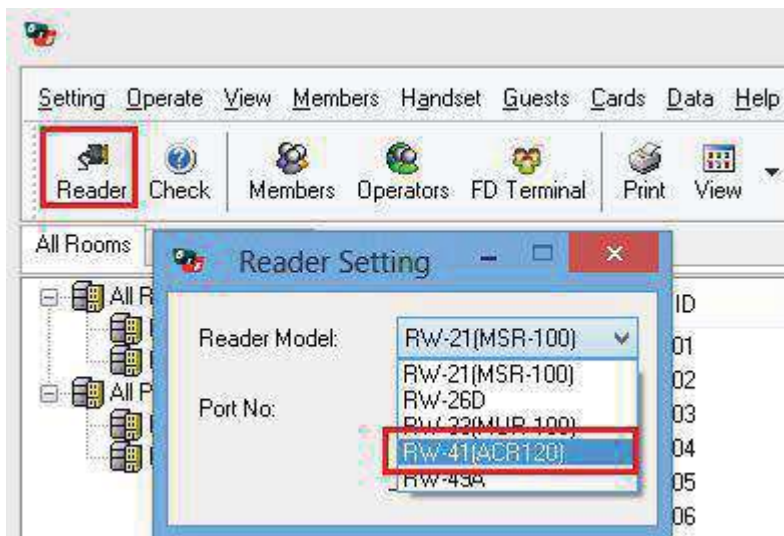



6. Main steps to program a lock (With Cards)

Making a lock accept key cards, there are four key points are required.

1. System ID card
2. Lock setting card
3. Time card
4. Authorizing card

6.1. System ID card (S50)

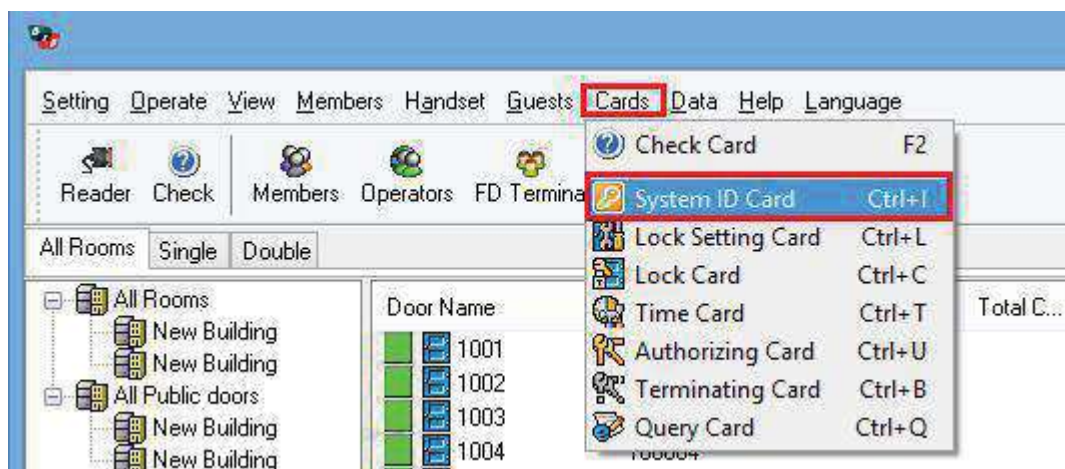

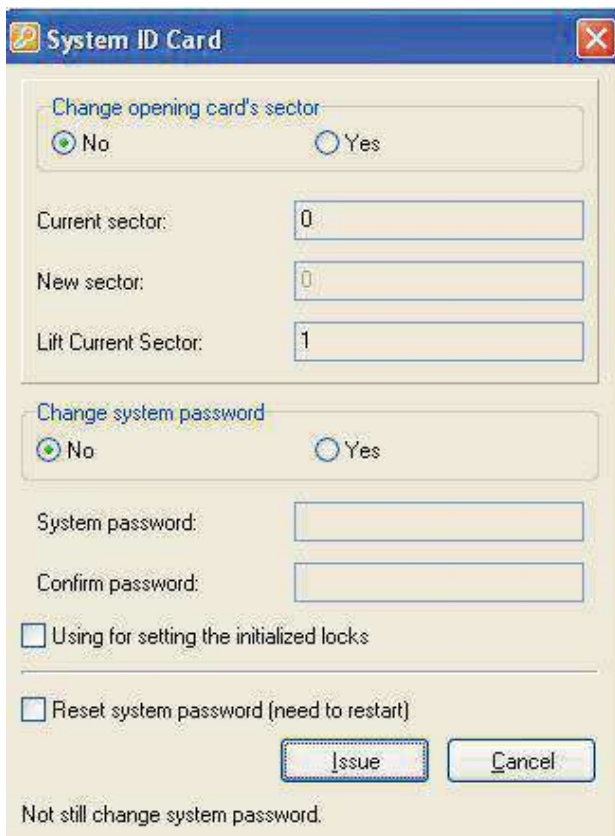

System ID Card

Change opening card's sector
☒ No ☐ Yes

Current sector: 0
 New sector: 0
 Lift Current Sector: 1

Change system password
☒ No ☐ Yes

System password:
 Confirm password:

☐ Using for setting the initialized locks

☐ Reset system password (need to restart)

Issue **Cancel**

Not still change system password.

- **Sector**


what we use for our locking system are 0.1.2 sectors, normally defaulted sector is “0” which is for locking system, “1” is for lift control system, “2” is spare sector.

- **Using for setting the initialized locks**

It needs to be selected as the lock is reset or the lock is newly installed.

- **Reset system password (need to restart)**

The system returns to Be-tech’s password.

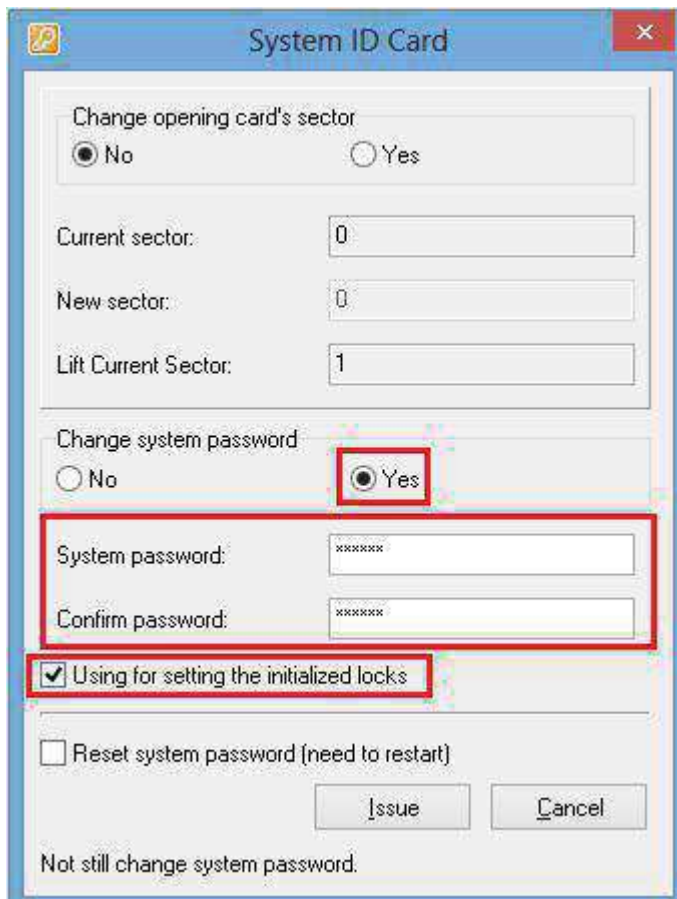

System ID Card

Change opening card's sector
☒ No ☐ Yes

Current sector: 0
 New sector: 0
 Lift Current Sector: 1

Change system password
☐ No ☒ Yes

System password: xxxxxx
 Confirm password: xxxxxx

☒ Using for setting the initialized locks

☐ Reset system password (need to restart)

Issue **Cancel**

Not still change system password.

Enter 6 digits system password (numbers only), and click using for setting the initialized locks, and then click “issue”.

Note:

1. If you just test something of the lock, please do not change the system ID, otherwise the cards can not be used anymore in new software.
2. Issuing a system ID card with changing password is normally for the hotel that has been completed already.
3. The previous cards without changing system ID can not be used to open the doors in the same hotel after new system ID is set.



Card Information

Card Information

Card Type:	System ID Card
Card No:	Not Issued
Issuer ID:	Unknown Issuer ID
Issued Time:	2011-03-25 14:31:18

OK Cancel

Click "OK"



Information

System ID Card issued, please take out the smart card.

OK

Click "OK"




Information

The handset must update system password, because the system password changed.

OK

Click 'OK'

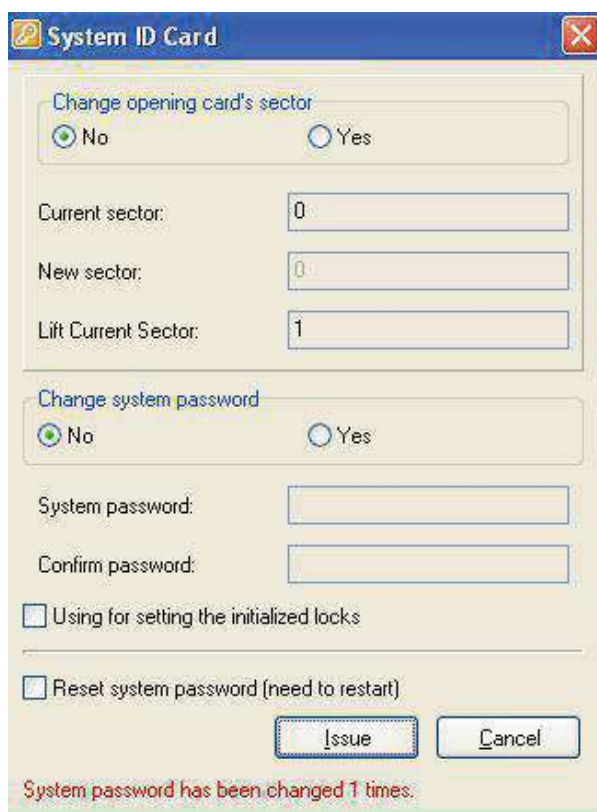

System ID Card

Change opening card's sector

☒ No ☐ Yes

Current sector: 0

New sector: 0

Lift Current Sector: 1

Change system password

☒ No ☐ Yes

System password:

Confirm password:

☐ Using for setting the initialized locks

☐ Reset system password (need to restart)

Issue Cancel

System password has been changed 1 times.

If you already changed the password, you will see red words saying "system password has been changed 1 times", it means you have already changed the password for 1 time


Explanation of System password: Software, key card, lock, and hand held, their original system password has been set; we call it “***password”. (However, clients no need to know what the original password is).

Why we need to change the system password?


Due to there are so many clients all over the world, all locks are with “Be-tech password”, they are not safe that we can open all doors as if we keep a general card, we have to issue a new system ID card to change the system ID, then new system is no more “ *** password”. The system ID is changed, and all relative components must be matched with system ID so that the whole system is working.

6.2. Lock setting card (S50)

Lock setting card is used for setup lock's information, such as lock number, lock memory, motor parameter.

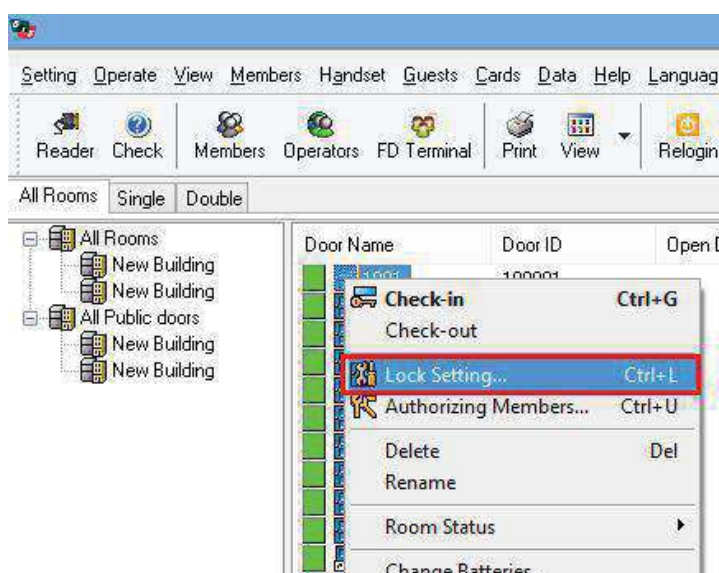

Select one room, right click and find out “lock setting”

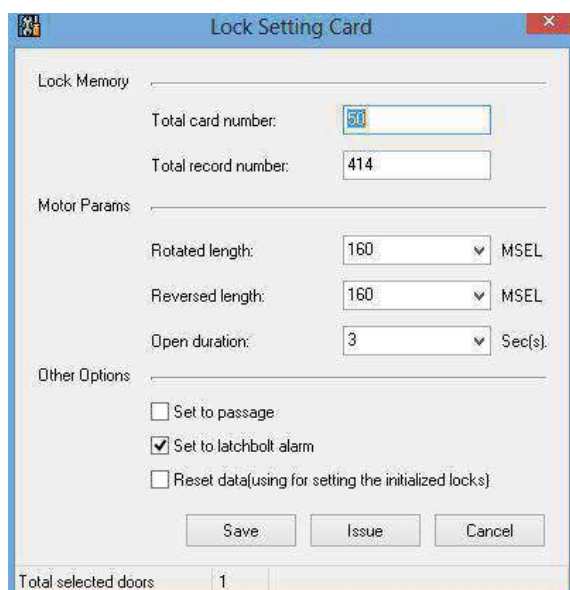

- **Lock memory**

It is used for setting up staff card and access records' amount. Total card number is for staff card amount, the defaulted value is 50.

- **Motor parameter**

It is for setup mortise parameters, no need to change them.

- **Set to passage**


Passage means the lock won't lock automatically after unlocking.

- **Set to latch bolt alarm**

Latch bolt alarm is for avoiding door does not close well. If latch is hanged, lock will sound “Be, Be.....”


- **Reset data (using for setting initializing locks)**

Reset previous records and data, such as access records, guest SN, staff card amount.....

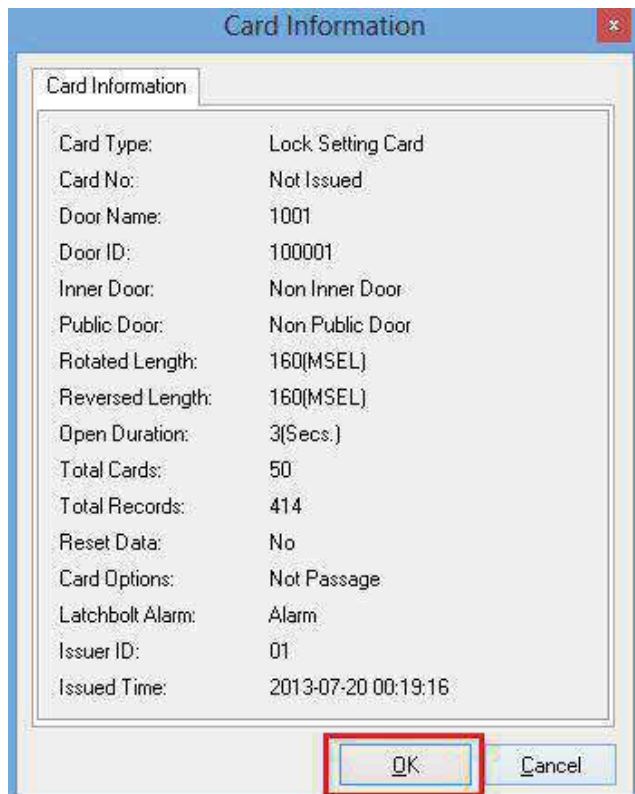


You can see all information before you issue the card

Click "OK" to issue card.

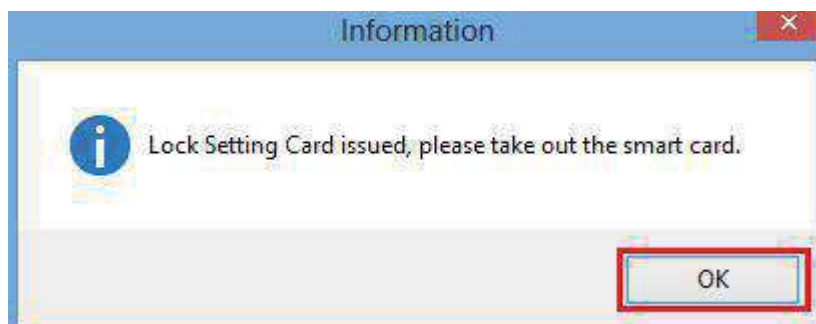



Scan the lock with lock setting card, green light and 1 beep from the lock means lock ID is set to the lock.


Note: If you have 100 rooms, you have to issue 100 times lock setting card, because every door with different room NO, we have to issue different cards to set up different rooms. However, 100 times is not meaning 100 cards, you can issue the lock setting cards with only 1 card. For example, you already issued the lock setting card for room 000001, and then take the card to scan the door, 1 beep, green light, setting is OK, and at this time the room is 000001. To setup room 000002, we can use a new card or the 000001 lock setting card, after issuing, the door ID would be changed as 000002, at this time the lock setting card is 000002. And then scan the door, 1 beep, green light, setting is OK, and the door ID is 000002. Even though the previous ID is 000001, after scanning the ID 000002 and the door will change into ID 000002

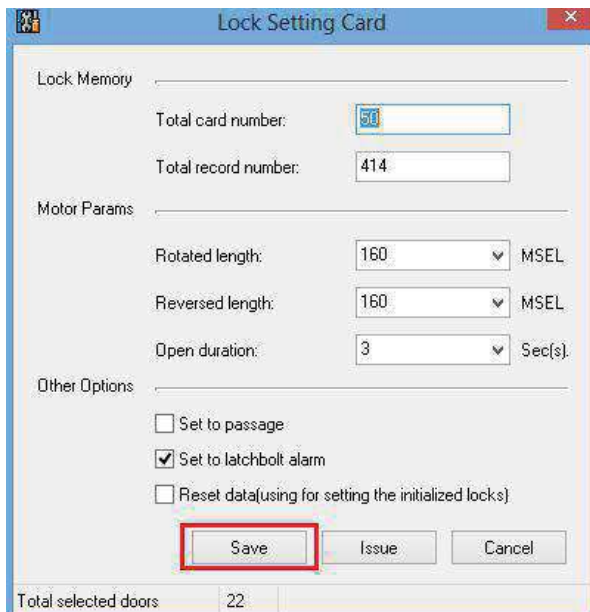



If you use handset, you can select all rooms and click "locking setting card", and then click "Save", you will see all rooms have been set.

6.3. Setup lock's time with Time card (S70)

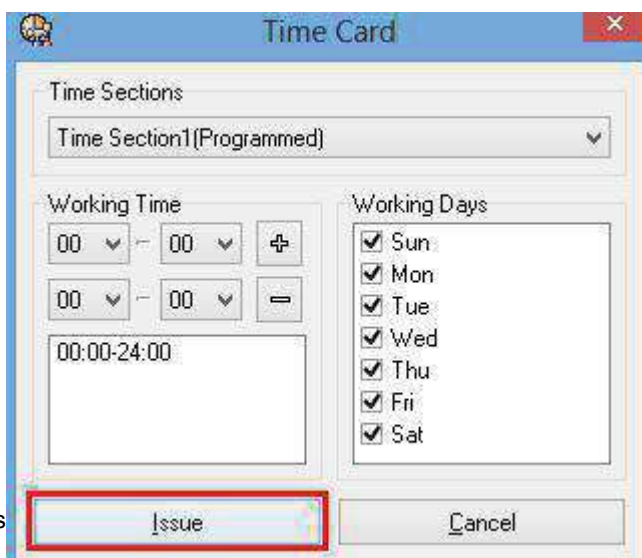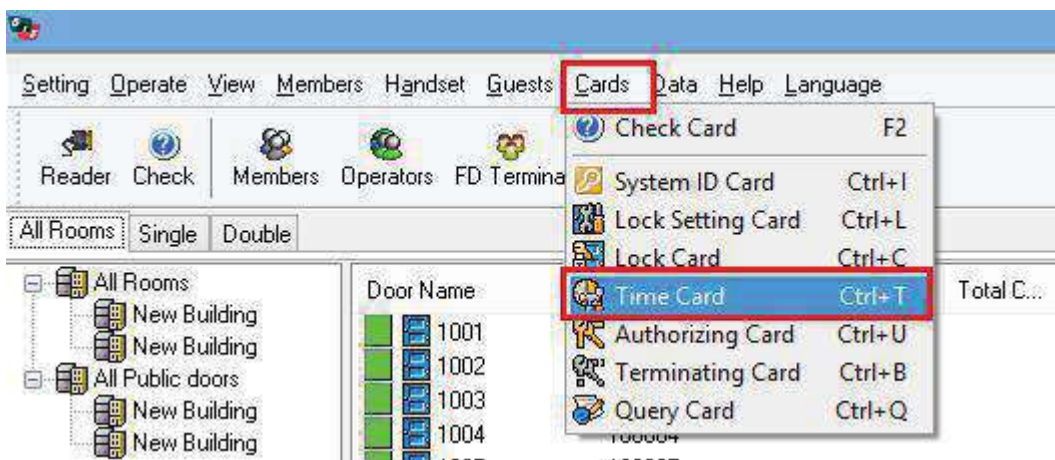

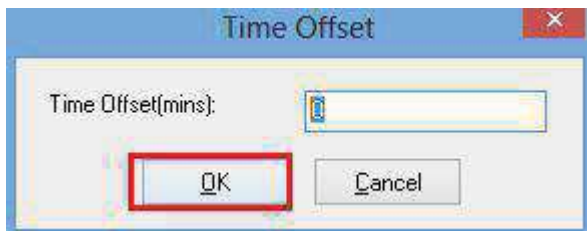




Time offset is the time you would spend to get to the room after issuing Time card.

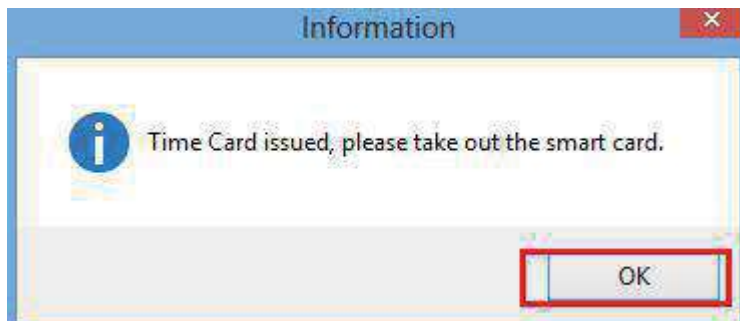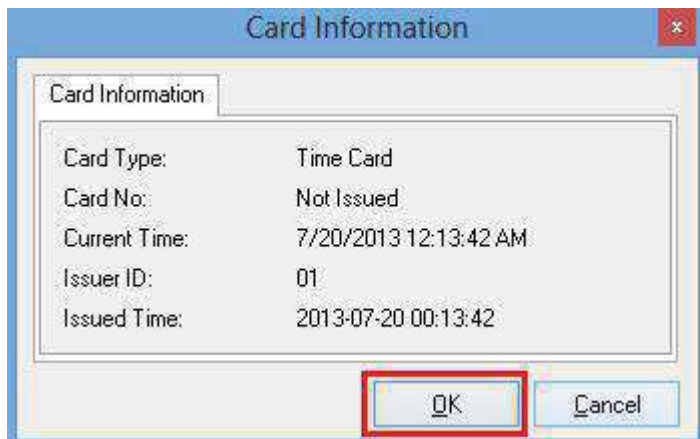




Note: The time in the card will not move. You need to scan all of the locks within 10 minutes, otherwise, you need to re-issue time card. Green light and 1 beep from the lock mean Time is set to the lock.

6.4. Emergency cards (S50)

Emergency cards: it can open the door without any limitations.

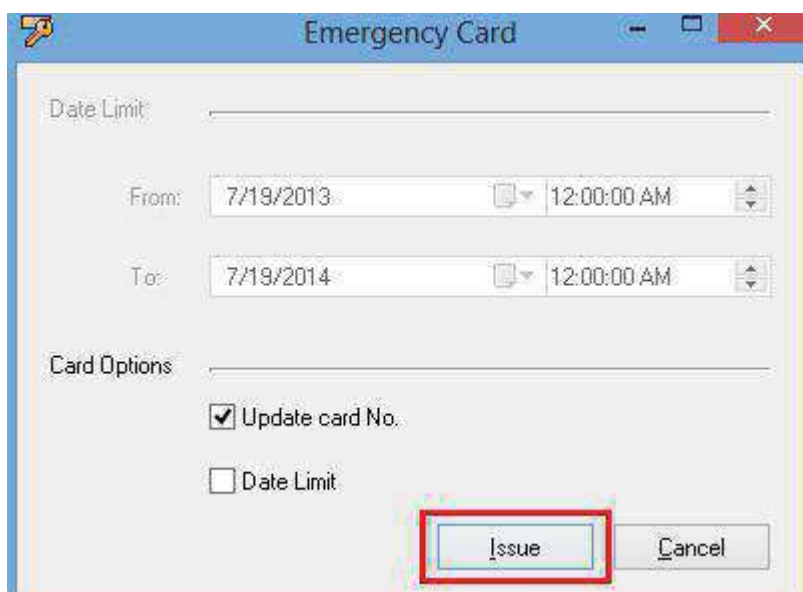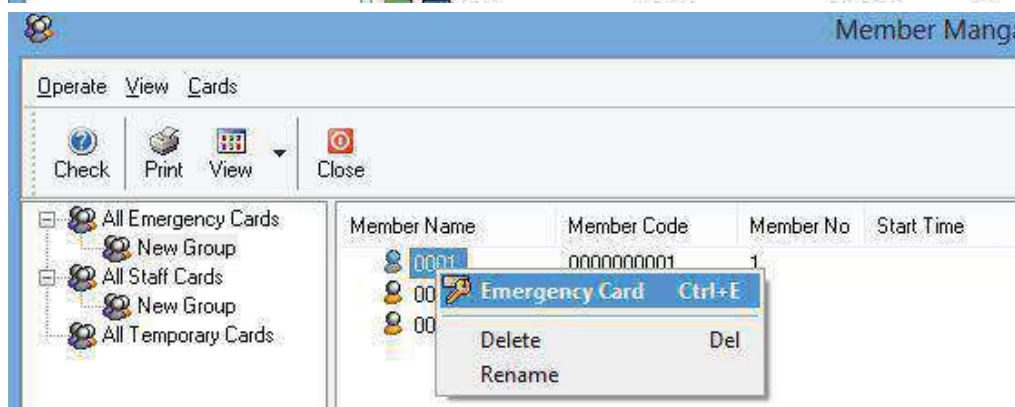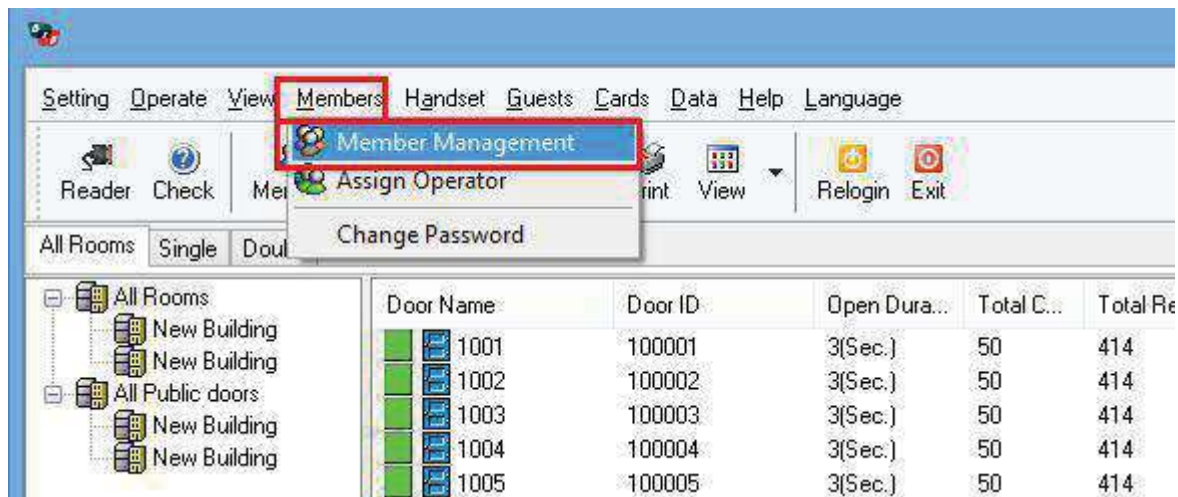

Update card No.: if the software is newly installed without any data, so the option is chosen as default. After issuing, there will be a card NO.

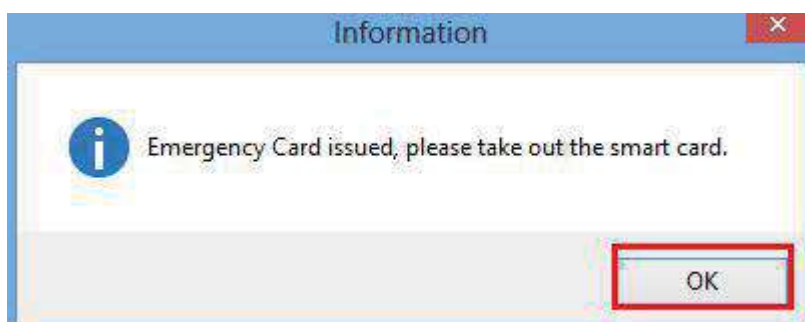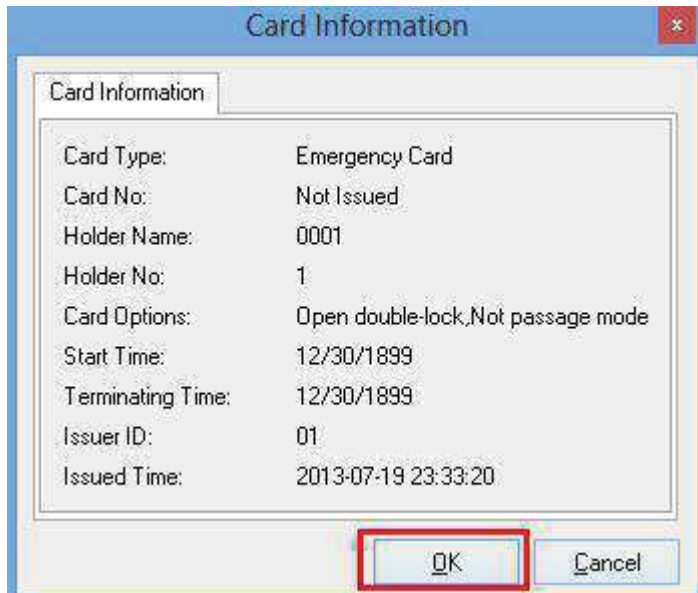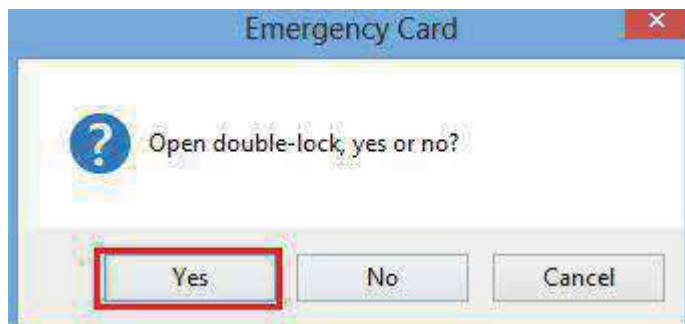



Member Mangagement						
Operate View Cards						
<div> <div>Check</div> <div>Print</div> <div>View</div> <div>Close</div> </div>						
<div> <div>All Emergency Cards</div> <div>New Group</div> <div>All Staff Cards</div> <div>New Group</div> <div>All Temporary Cards</div> </div>	Member Name	Member Code	Member No	Start Time	Terminating Ti...	Card No
	0001	00000000001	1			427592023
	0002	00000000002	2			427592061
	0003	00000000003	3			427592068

After issuing the cards, these cards are able to open door.



6.5. Staff card (S50)

Staff card is normally for house keeping. To setup staff card successfully, you have to setup the **time section**, and **authorizing information**.

6.5.1. Setup Time section for staff cards

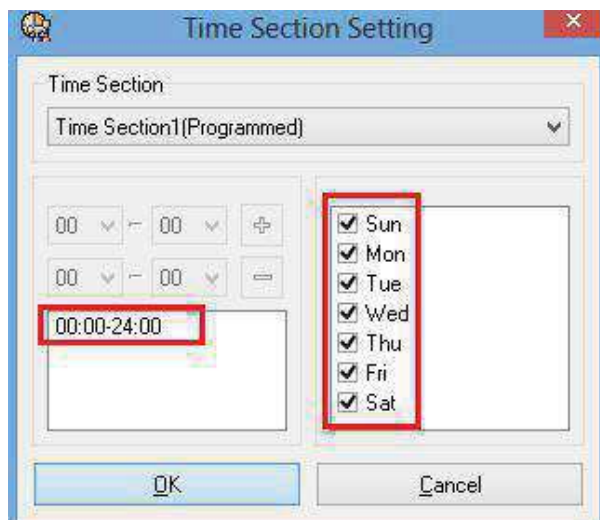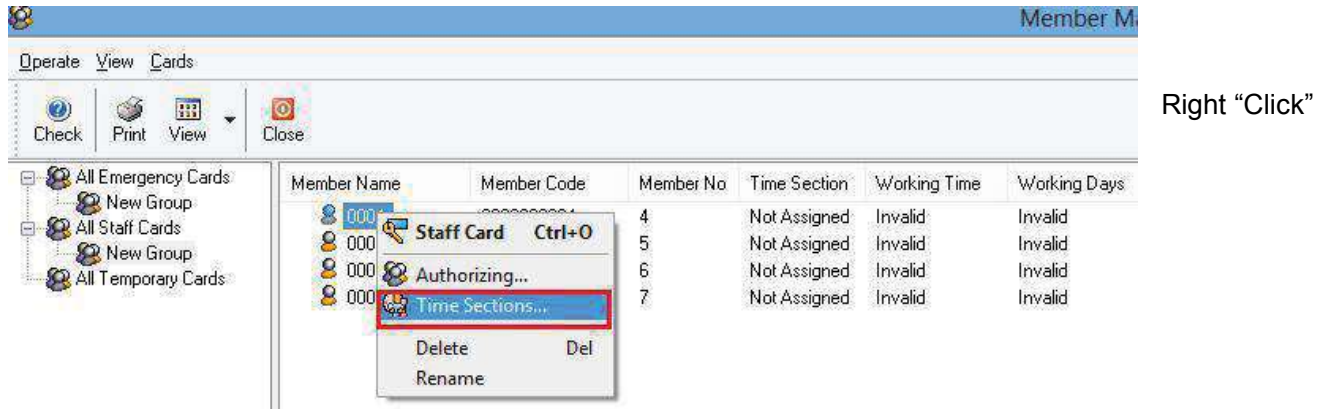

This time section is already set in time card.

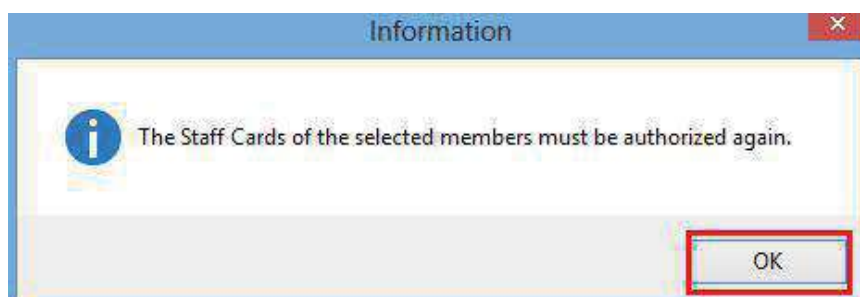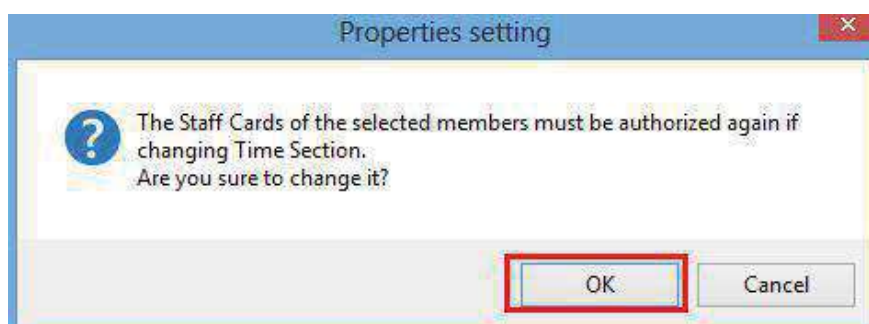

Member

Operate View Cards

Check Print View Close

☐ All Emergency Cards
☐ New Group
☐ All Staff Cards
☐ New Group
☐ All Temporary Cards

Member Name	Member Code	Member No	Time Section	Working Time	Working Day
0004	0000000004	4	Time Section1	00:00-24:00	All Days
0005	0000000005	5	Time Section1	00:00-24:00	All Days
0006	0000000006	6	Time Section1	00:00-24:00	All Days
0007	0000000007	7	Time Section1	00:00-24:00	All Days

You can select all staffs to setup the time section if they are in a same work section.

6.5.2. Issue "Staff card",

Staff Card

Date Limit

From: 7/16/2013 12:00:00 AM

To: 7/16/2014 12:00:00 AM


Public Doors

Card Options

☒ Update card No.
☐ Passage mode
☐ Can open double-lock
☐ Can enable Temporary Card

Issue Cancel

Confirm


 The Staff Cards of the selected members must be authorized again if changing Card No.
 Are you sure to issue card?

Yes No

Card Information

Card Information

Card Type: Staff Card

Card No: Not Issued

Holder Name: 0004

Holder No: 4

Public Door: Unable to open

Card Options: Cannot open double-lock, Cannot ena

Start Time: 7/16/2013

Terminating Time: 7/16/2014

Issuer ID: Unknown Issuer ID

Issued Time: 2013-07-16 00:26:20

OK Cancel

Information

Staff Card issued, please take out the smart card.

OK

Information

The Staff Cards of the selected members must be authorized again.

OK

Member Management

Operate View Cards



Check Print View Close

All Emergency Cards	Member Name	Member Code	Member No	Time Section	Working Time	Working Days	Public Do...	Start Time	Terminating Ti...	Card No
New Group	0004	0000000004	4	Time Section1	00:00-24:00	All Days	Cannot O...	7/16/2013	7/16/2014	427249605
All Staff Cards	0005	0000000005	5	Time Section1	00:00-24:00	All Days	Cannot O...	7/16/2013	7/16/2014	427249686
New Group	0006	0000000006	6	Time Section1	00:00-24:00	All Days	Cannot O...	7/16/2013	7/16/2014	427249694
All Temporary Cards	0007	0000000007	7	Time Section1	00:00-24:00	All Days	Cannot O...	7/16/2013	7/16/2014	427249701

However, card can't open the door right now; even you already issued the card.

6.5.3. Authoring staffs

Right click and choose “Authoring.....”

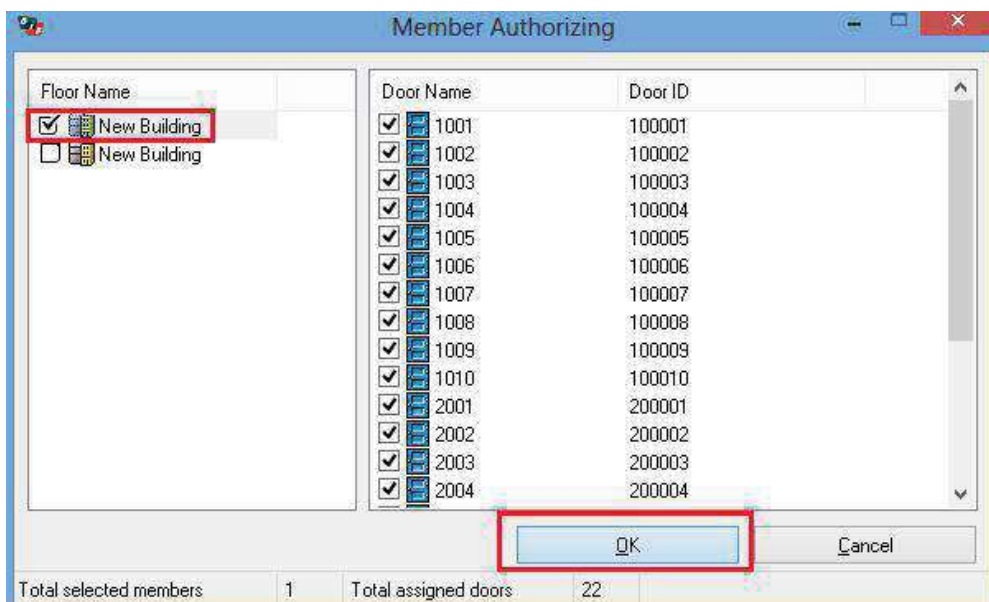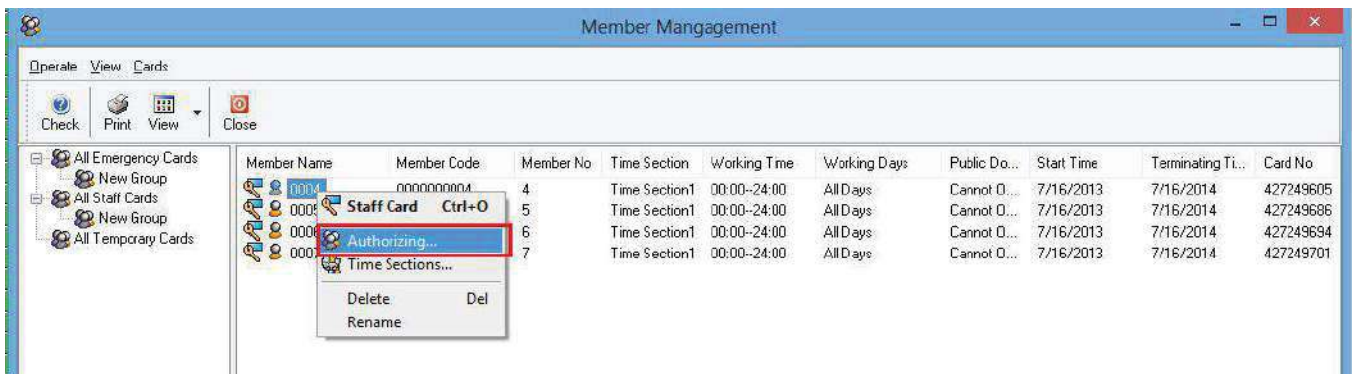


If you want to authorize staff 1 to open new building 1, just click new building

If you want to authorize staff 1 to open some of the rooms, so you need to select the door name as you want on the right.





Then, go back to “All rooms”, choose all rooms and right click, find out “authorizing members” and click, you will see the members under the rooms, it means the one can open the room.

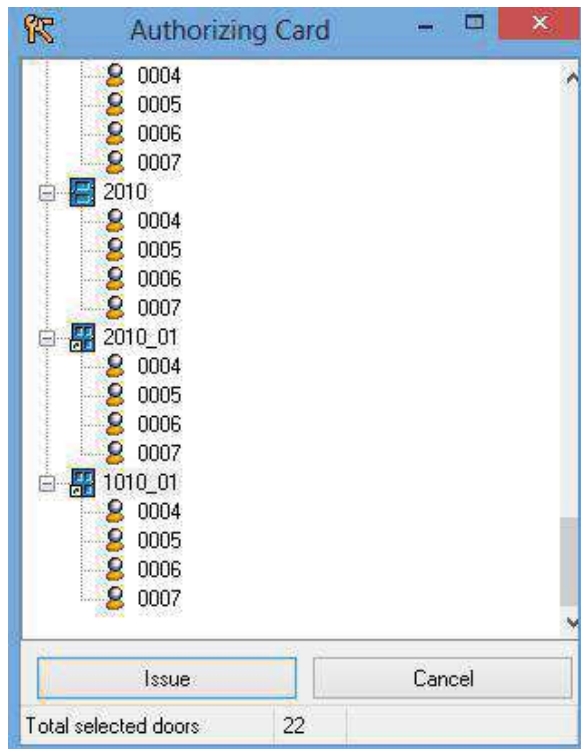

However the staff card can't open the door right now, even though you have issued the card, so you need to issue authorizing card to scan the door, after that the staff card can be used. Please find out the authorizing card.

6.6. Authorizing card (S70)

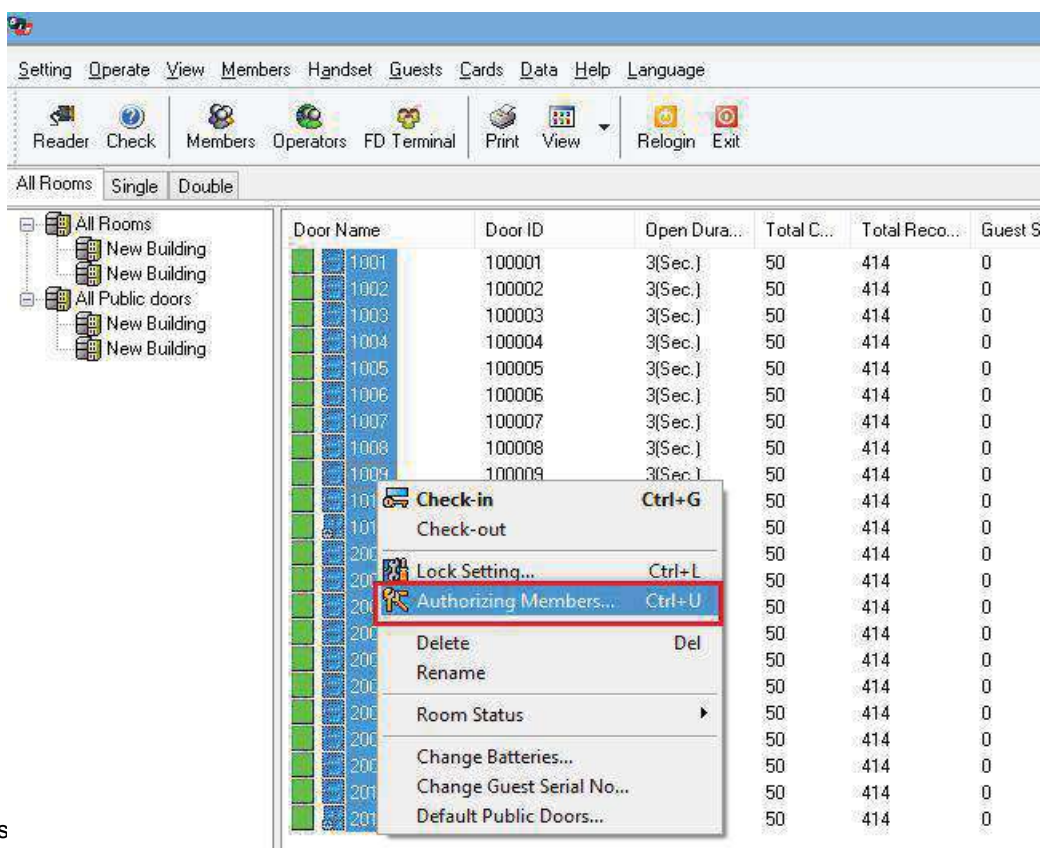


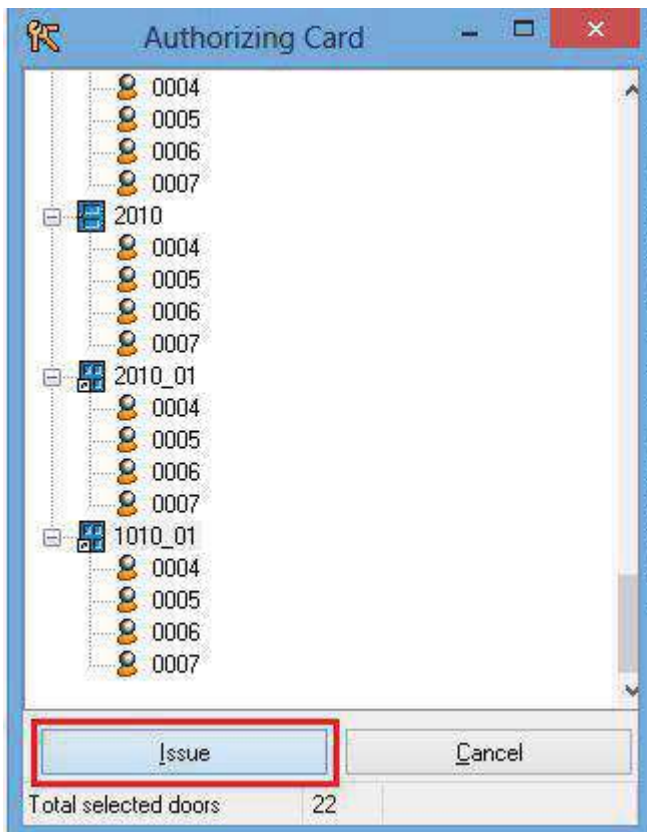

Click "Issue", and take the card to scan the door, after that staff cards are able to open the door.

6.7. Assign member (Operator log in)

You can setup operator's permission

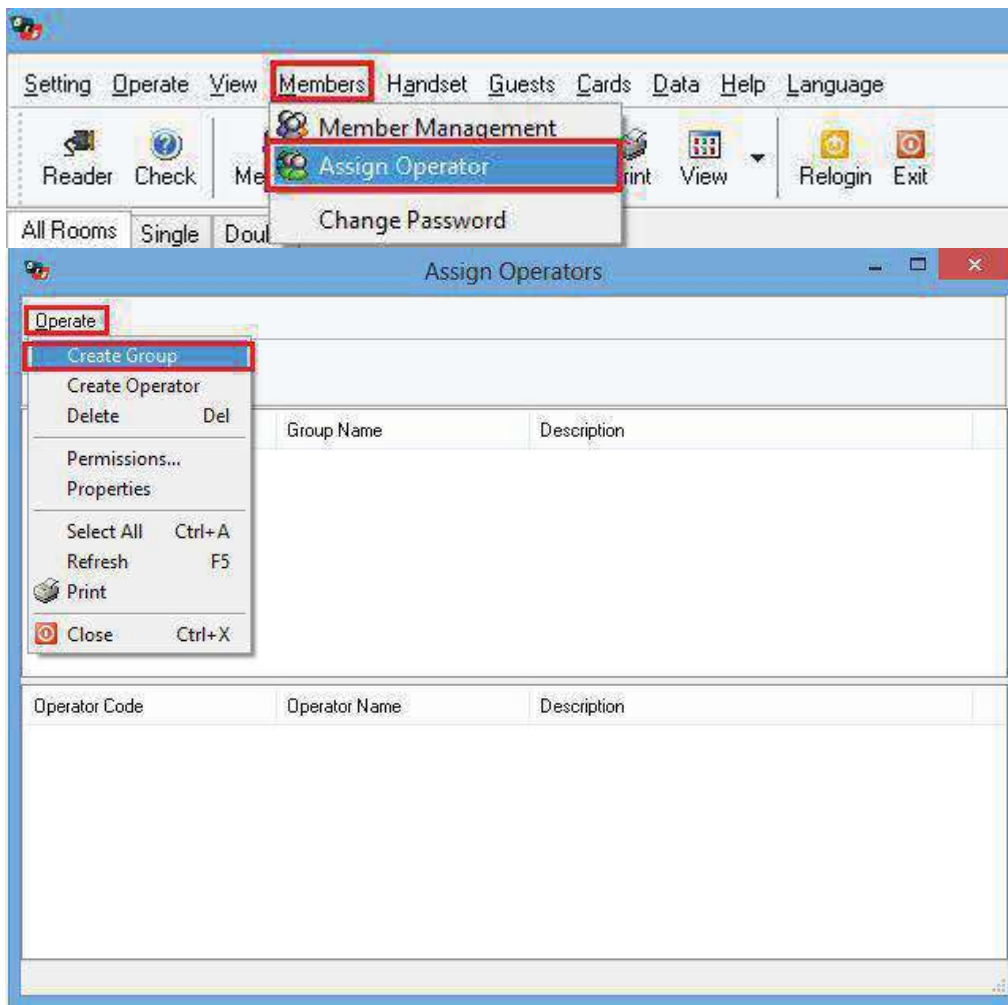

Operator Group Properties [X]

Group code:

Group name:

Description:

OK Cancel

Operator Group Properties [X]

Group code:

Group name:

Description:

OK Cancel


Assign Operators [X]


Operate

Print Close


Group Code	Group Name	Description
001	GM	1


Operator Code	Operator Name	Description
---------------	---------------	-------------

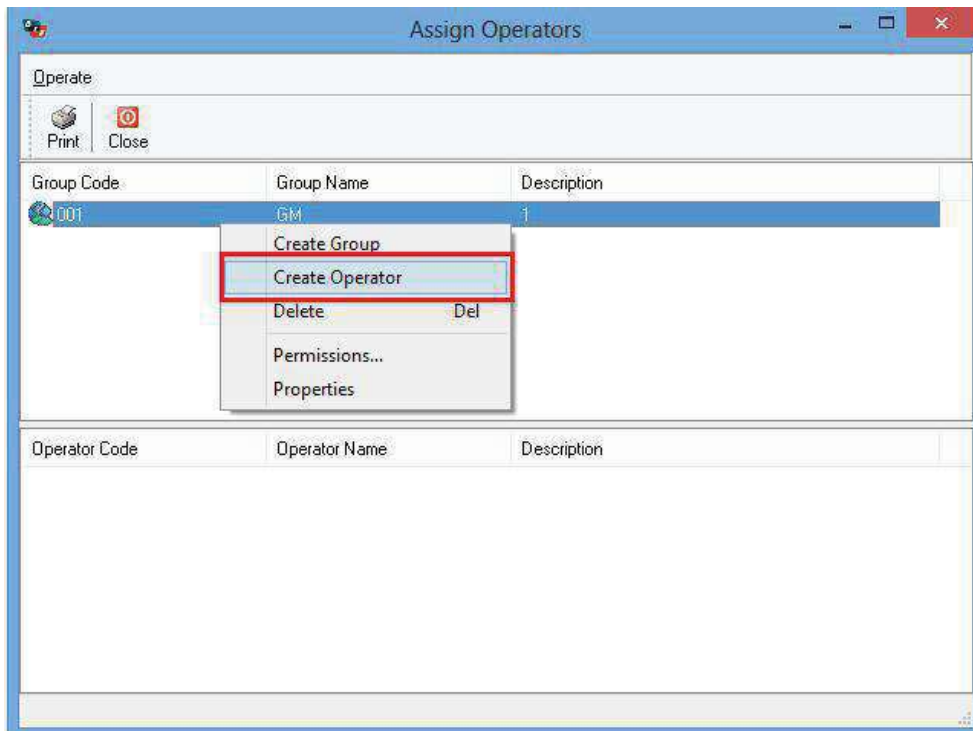

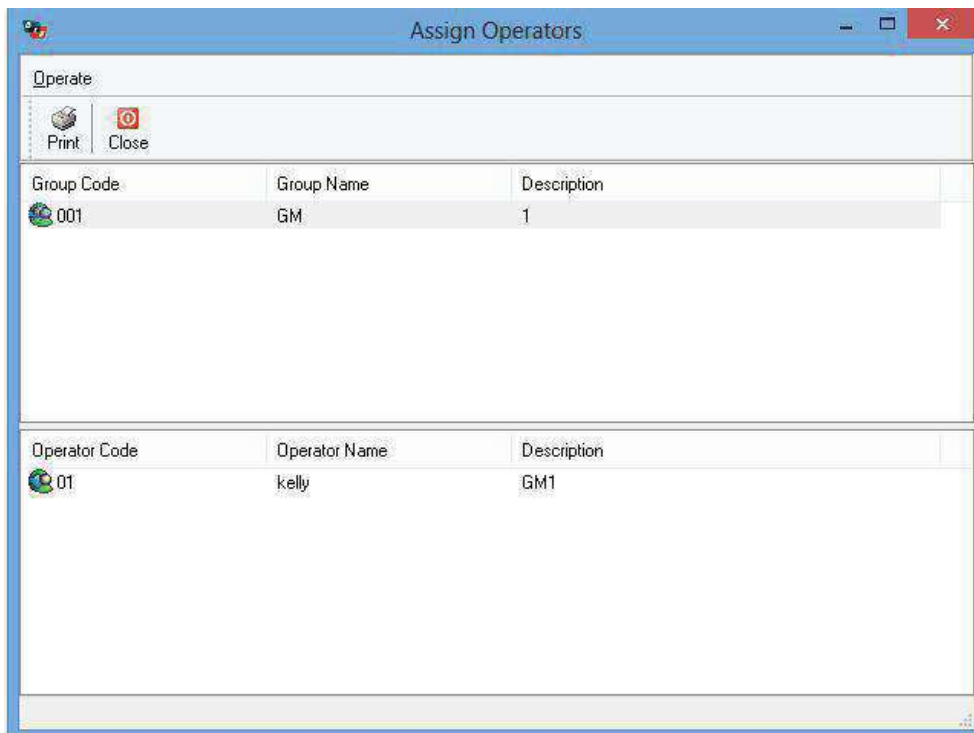


Set the permissions of operator.

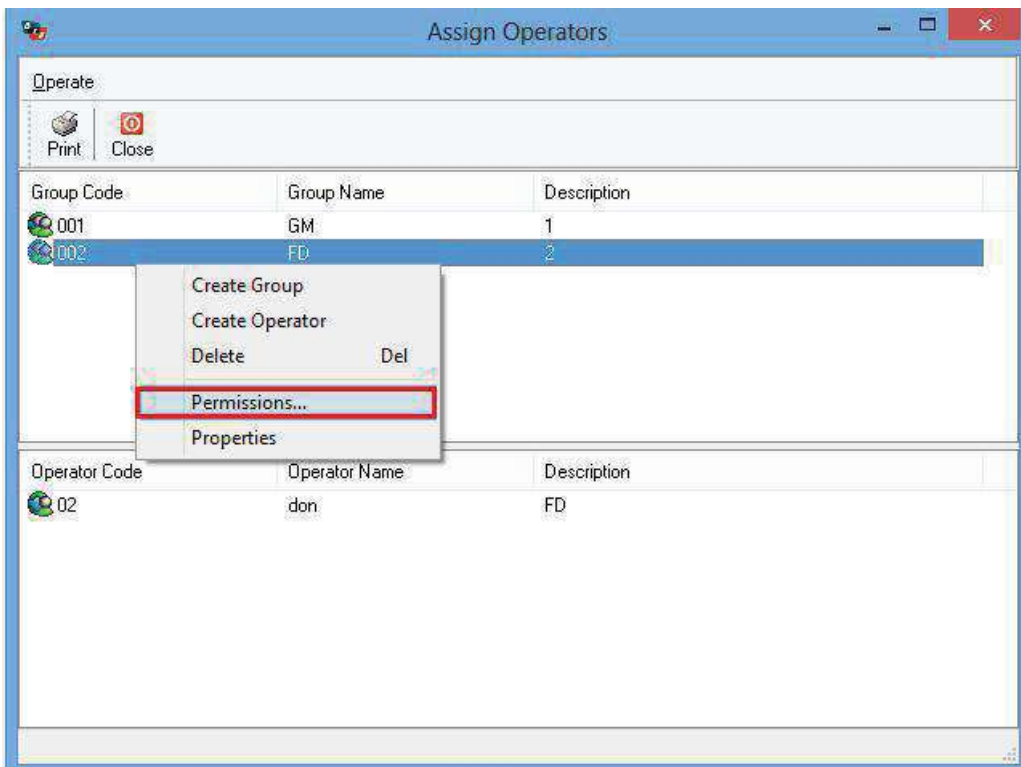

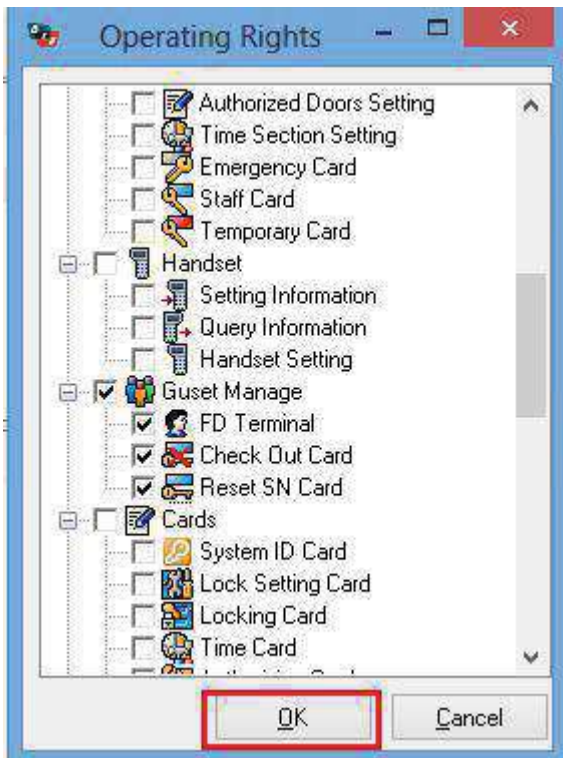


According to customer's requirement, you can set the permissions of the user.

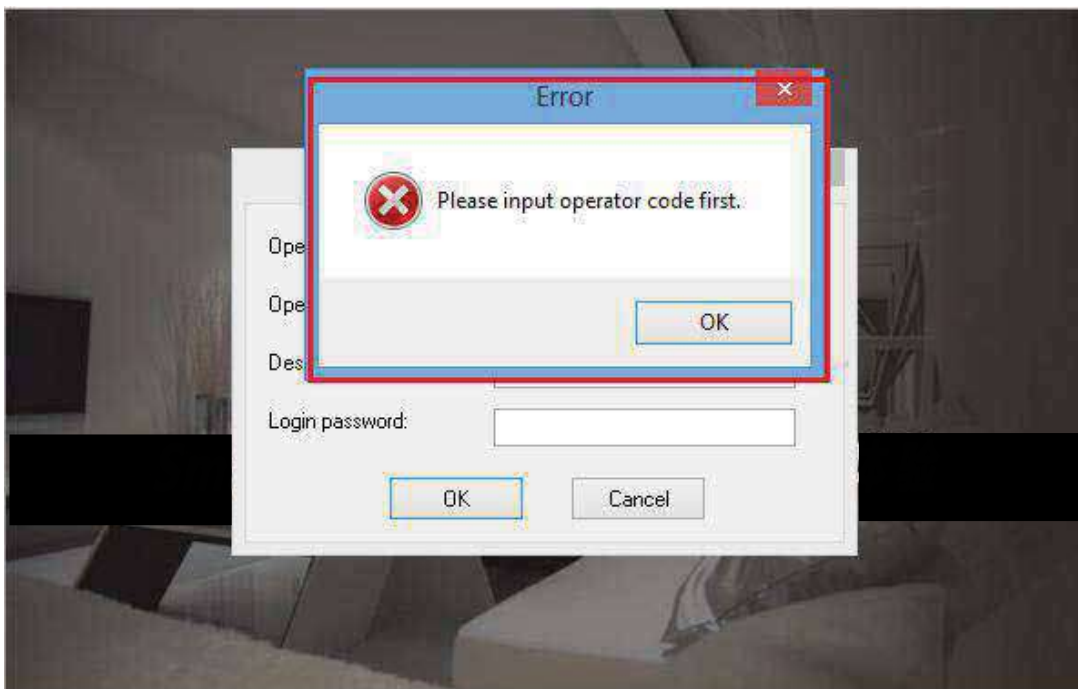

After setup the operators, you have to enter operator code and login password to access software

- No permission

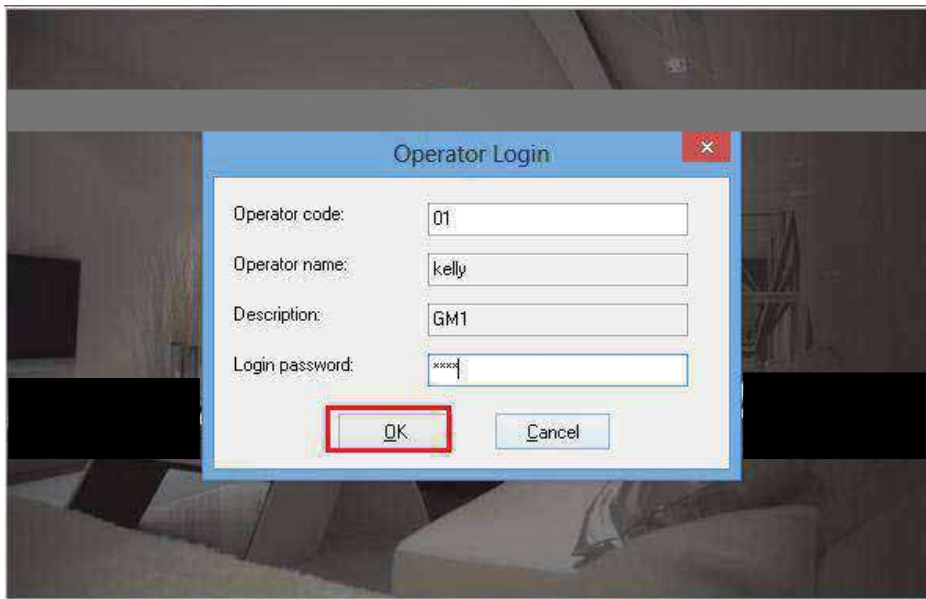

You can operate all of the options in the software.

BIS Hotel v5.7A


Setting Operate View Members Handset Guests Cards Data Help Language

Reader Check Members Operators FD Terminal Print View Regin Exit

All Rooms Single Double

	Door Name	Door ID	Open Dura...	Total C...	Total Room...	Guest SN	Total Guests	Room Type	Room Status
	1001	100001	3(sec.)	50	414	0	Vacant	Single	Clean Vacant
	1002	100002	3(sec.)	50	414	0	Vacant	Single	Clean Vacant
	1003	100003	3(sec.)	50	414	0	Vacant	Single	Clean Vacant
	1004	100004	3(sec.)	50	414	0	Vacant	Single	Clean Vacant
	1005	100005	3(sec.)	50	414	0	Vacant	Double	Clean Vacant
	1006	100006	3(sec.)	50	414	0	Vacant	Double	Clean Vacant
	1007	100007	3(sec.)	50	414	0	Vacant	Double	Clean Vacant
	1008	100008	3(sec.)	50	414	0	Vacant	Double	Clean Vacant
	1009	100009	3(sec.)	50	414	0	Vacant	Double	Clean Vacant
	1010	100010	3(sec.)	50	414	0	Vacant	Double	Clean Vacant
	1010_01	10001001	3(sec.)	50	414	0	Vacant	Double	Clean Vacant
	2001	200001	3(sec.)	50	414	0	Vacant	Single	Clean Vacant
	2002	200002	3(sec.)	50	414	0	Vacant	Single	Clean Vacant
	2003	200003	3(sec.)	50	414	0	Vacant	Single	Clean Vacant
	2004	200004	3(sec.)	50	414	0	Vacant	Single	Clean Vacant
	2005	200005	3(sec.)	50	414	0	Vacant	Single	Clean Vacant
	2006	200006	3(sec.)	50	414	0	Vacant	Double	Clean Vacant
	2007	200007	3(sec.)	50	414	0	Vacant	Double	Clean Vacant
	2008	200008	3(sec.)	50	414	0	Vacant	Double	Clean Vacant
	2009	200009	3(sec.)	50	414	0	Vacant	Double	Clean Vacant
	2010	200010	3(sec.)	50	414	0	Vacant	Double	Clean Vacant
	2010_01	20001001	3(sec.)	50	414	0	Vacant	Double	Clean Vacant

- With permissions

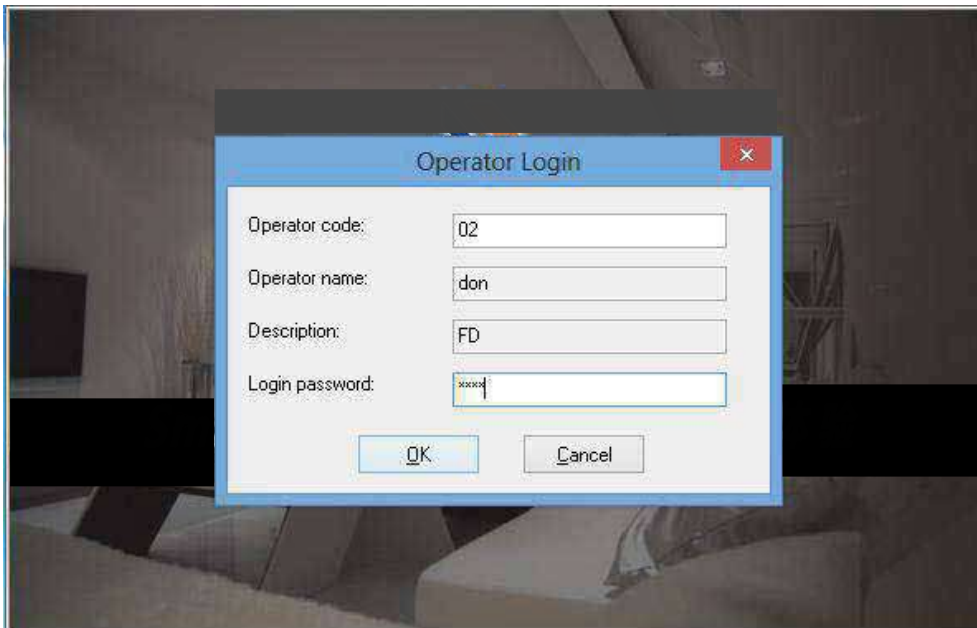

When you enter the operator that with permissions, so you will see there would be some options you can't run.

BIS Hotel v5.7A

Setting Operate View Members Handset Guests Cards Data Help Language

Reader Check Members Operators FD Terminal Print View Regin Exit

All Rooms Single Double

Door Name	Door ID	Open Dura...	Total C...	Total Reco...	Guest SN	Total Guests	Room Type	Room Status
1001	100001	3(Sec.)	50	414	0	Vacant	Single	Clean/Vacant
1002	100002	3(Sec.)	50	414	0	Vacant	Single	Clean/Vacant
1003	100003	3(Sec.)	50	414	0	Vacant	Single	Clean/Vacant
1004	100004	3(Sec.)	50	414	0	Vacant	Single	Clean/Vacant
1005	100005	3(Sec.)	50	414	0	Vacant	Double	Clean/Vacant
1006	100006	3(Sec.)	50	414	0	Vacant	Double	Clean/Vacant
1007	100007	3(Sec.)	50	414	0	Vacant	Double	Clean/Vacant
1008	100008	3(Sec.)	50	414	0	Vacant	Double	Clean/Vacant
1009	100009	3(Sec.)	50	414	0	Vacant	Double	Clean/Vacant
1010	100010	3(Sec.)	50	414	0	Vacant	Double	Clean/Vacant
1010_01	10001001	3(Sec.)	50	414	0	Vacant	Double	Clean/Vacant
2001	200001	3(Sec.)	50	414	0	Vacant	Single	Clean/Vacant
2002	200002	3(Sec.)	50	414	0	Vacant	Single	Clean/Vacant
2003	200003	3(Sec.)	50	414	0	Vacant	Single	Clean/Vacant
2004	200004	3(Sec.)	50	414	0	Vacant	Single	Clean/Vacant
2005	200005	3(Sec.)	50	414	0	Vacant	Single	Clean/Vacant
2006	200006	3(Sec.)	50	414	0	Vacant	Double	Clean/Vacant
2007	200007	3(Sec.)	50	414	0	Vacant	Double	Clean/Vacant
2008	200008	3(Sec.)	50	414	0	Vacant	Double	Clean/Vacant
2009	200009	3(Sec.)	50	414	0	Vacant	Double	Clean/Vacant
2010	200010	3(Sec.)	50	414	0	Vacant	Double	Clean/Vacant
2010_01	20001001	3(Sec.)	50	414	0	Vacant	Double	Clean/Vacant

7. Issue guest card

BIS Hotel v5.7A

Setting Operate View Members Handset Guests Cards Data Help Language

Reader Check Members Operators FD Terminal Print View Relogin Exit

All Rooms Single Double

Door Name	Door ID	Open Data	Total C...	Total Reco...	Guest SN	Total Guests	Room Type	Room Status
1001	100001	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant
1002	100002	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant
1003	100003	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant
1004	100004	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant
1005	100005	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant
1006	100006	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant
1007	100007	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant
1008	100008	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant
1009	100009	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant
1010	100010	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant
2010_01	10001001	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant
2001	200001	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant
2002	200002	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant
2003	200003	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant
2004	200004	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant
2005	200005	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant
2006	200006	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant
2007	200007	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant
2008	200008	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant
2009	200009	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant
2010	200010	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant
2010_01	20001001	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant

Make sure System ID, lock setting, Time, authorizing are done, double click the room number in the software, you will see guest card screen as below

Guest Card

Selected Rooms

Door Name	Door ID	Guest SN	Total Guests	Room Status
<input checked="" type="checkbox"/> 1001	100001	0	Vacant	Clean Vacant

Guest Index: Guest1

Card Information

Staying Days: 1

Arrival Time: 7/20/2013 12:29:08 AM

Departure Time: 7/20/2013 12:00:00 PM

Public Doors:

Holder Details

Guest ID:

Guest Name:

Nationality:

Date of Birth: 12/30/1899

ID Document Name:

Contact Address:

Zip Code:

Telephone No.:

Remark:

None ☒ Manual ☐

Sex: Married

Place of Birth:

ID Document No.:

E-Mail:

Fax No.:

>> Check-in Extend Check-out **Issue** Modify Confirm Cancel

Total selected room(s) 1 Total guest(s) 1 Operator


You can set the valid time of the guest, and click "Issue",

Card Information

Card Type:	Guest Card
Card No:	Not Issued
Guest ID:	None
Guest Name:	None
Guest SN:	427595503
Guest Index:	1
Door Name:	1001
Door ID:	100001
Inner Doors:	Unalbe to open
Public Door:	Unable to open
Start Time:	7/19/2013 11:59:00 PM
Terminating Time:	7/20/2013 12:30:00 PM
Card Options:	Cannot open double-lock
Issuer ID:	01
Issued Time:	2013-07-20 00:31:43

OK Cancel

Information



 Guest Card issued, please take out the smart card.

OK

Guest card is done, then take this card to the corresponding room, try to open the lock. Green light and 1 beep, motor run from the lock, so you can push the handle.

8. Back up database

When all of setup is done in the software, backup the database is necessary.

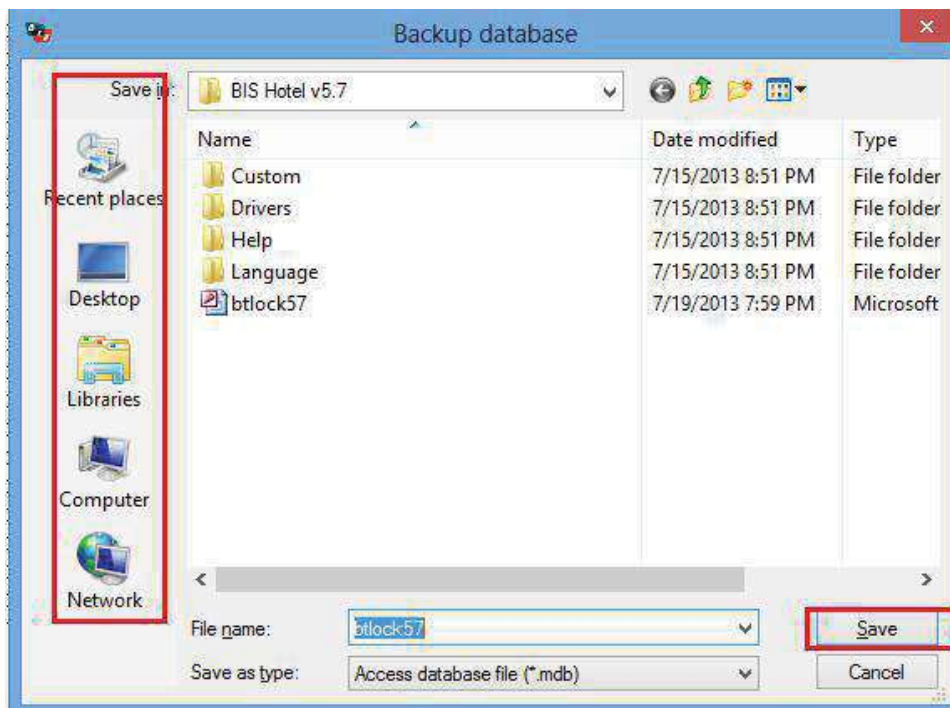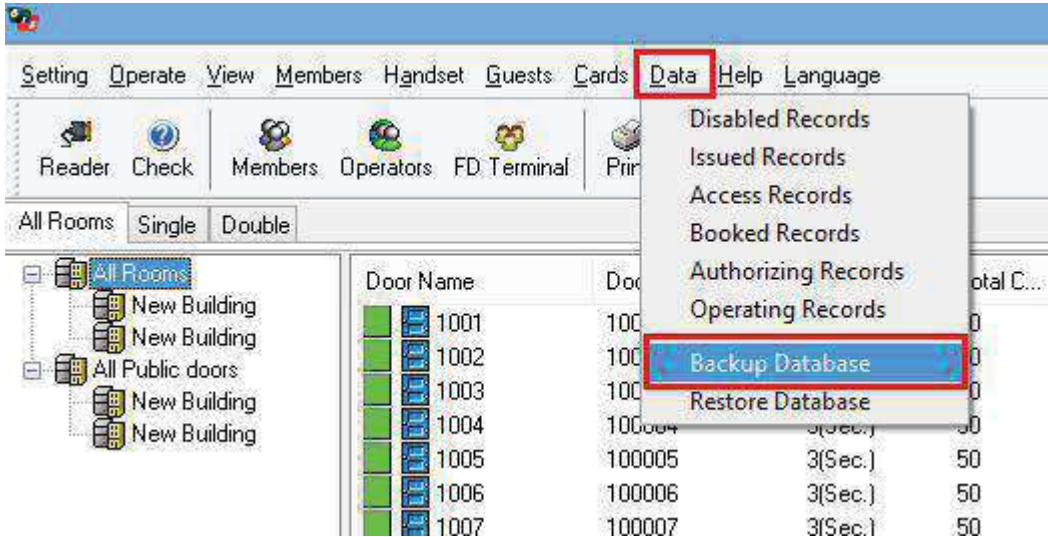

It is necessary to back up the database to another place, such as another computer or USB storage, in case that the computer is broken, you can get the back up in other place.

9. Software registration


Normally, there will be user register in 30 days after you install the software. In that case, you need to have the software registered; so please send this user code to Be-Tech for a registered code. Otherwise, you can't use the software anymore out of 30 days.

Note: The user code will be changed when close it and re-start. Different user code is required different registered code.



The 'User Register' dialog box has a blue title bar. It contains two rows of input fields. The first row is labeled 'User Code:' and contains four text boxes with the values '8138', '1378', '7375', and '6048'. The second row is labeled 'Registered Code:' and contains four empty text boxes. At the bottom right, there are 'OK' and 'Cancel' buttons.

If you want to have the software registered after software installed, you can click "Help" and "Register", then you will see the "User register"

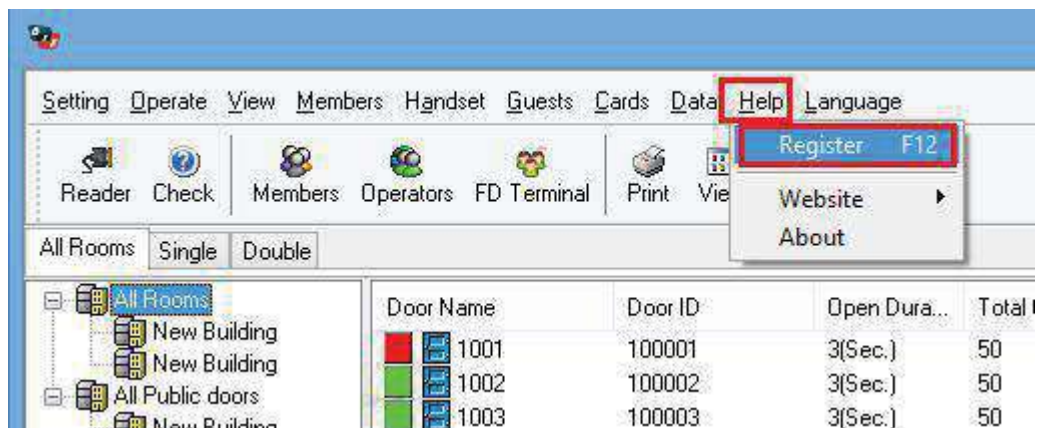

This is a duplicate of the 'User Register' dialog box shown above. It has a blue title bar, 'User Code' fields with values '8138', '1378', '7375', and '6048', 'Registered Code' fields, and 'OK' and 'Cancel' buttons.

10. Hand held Unit



Blue wire for PC, black one for lock



10.1. Hand held Unit profile

10.1.1. Function

Hand held unit is used for setting lock, and audit trail the information, it will make you more convenient to setup the lock, if you have hand held, and you no need to issue lock setting card, authorizing card, and time card.

10.1.2. Before Using

First, before using hand held, make sure SID card, all the rooms and members have been setup.

Second, our handheld is available for Win XP/VISTA/7/8/10, window server 2012

10.1.3. How to open and shut down

Turn on: Press "*" about 3 seconds. After one "beep", the LCD shows entry window meaning that handheld is on.

Turn off: Press "*" about 3 seconds. After one "beep", the handset is off.

10.1.4. Manu of the hand held

When open the handheld, there is a Be-tech logo, Press "OK" key in entry window, and then follow the indication to enter the correct password and press "OK" key for logging in, you will see 8 options:

- **Change password of handset (change pw of handset)**
- **Communicate with PC (communicate with PC)**
- **Setup system password (setup sys pw)**
- **Setup lock's information (setup lock's info)**
- **Check lock's time (check lock's time)**
- **Adjust lock's time (adjust lock's time)**
- **Check lock's battery (check lock's battery)**
- **Download lock's info(download lock's information)**



10.1.5. Hand held operating steps for programming door lock



Driver installation---handset settings---Setting information



Please follow the detailed instructions to make all of the steps done as below.



10.2. Driver installation

Connect the handheld to the computer, and find out the “communicate with PC, there will be a screen pops up.

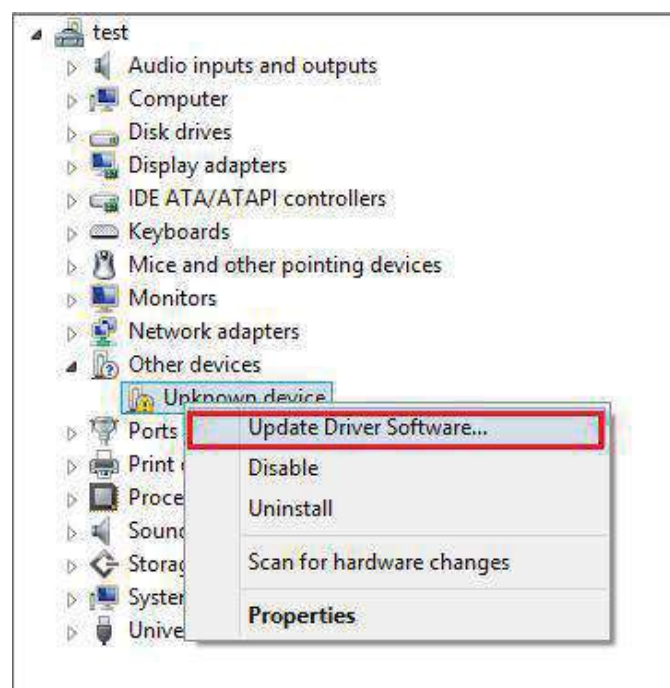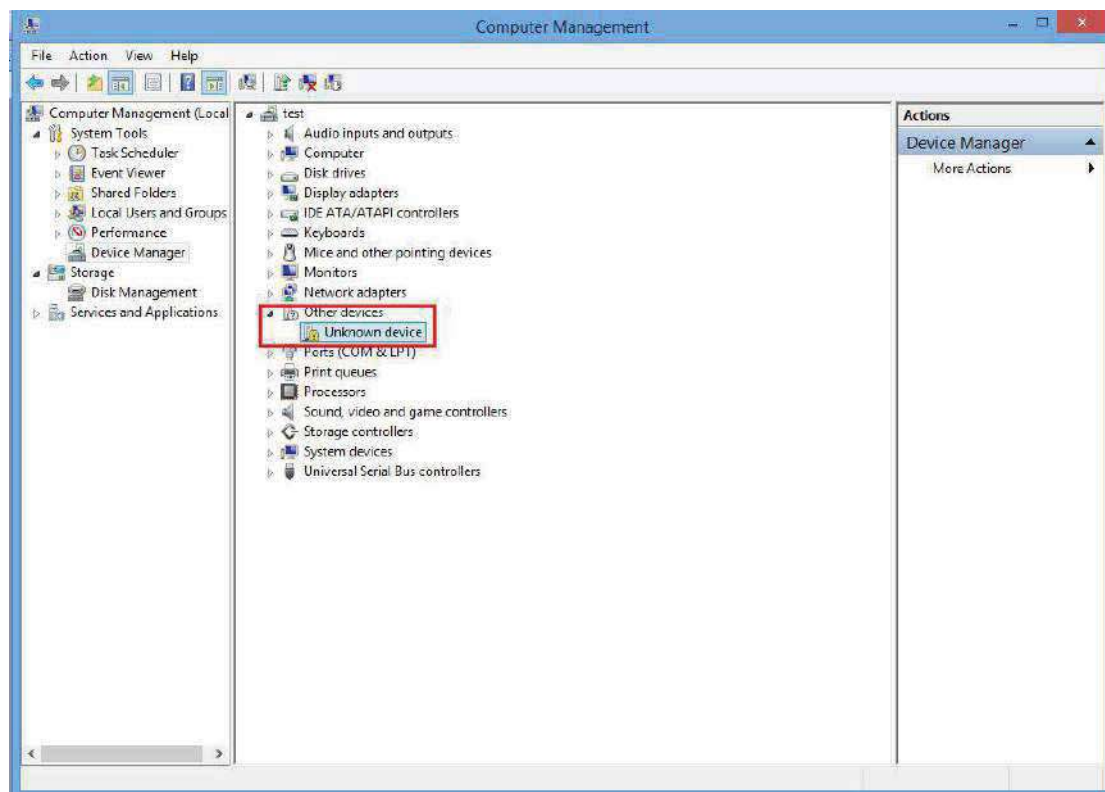

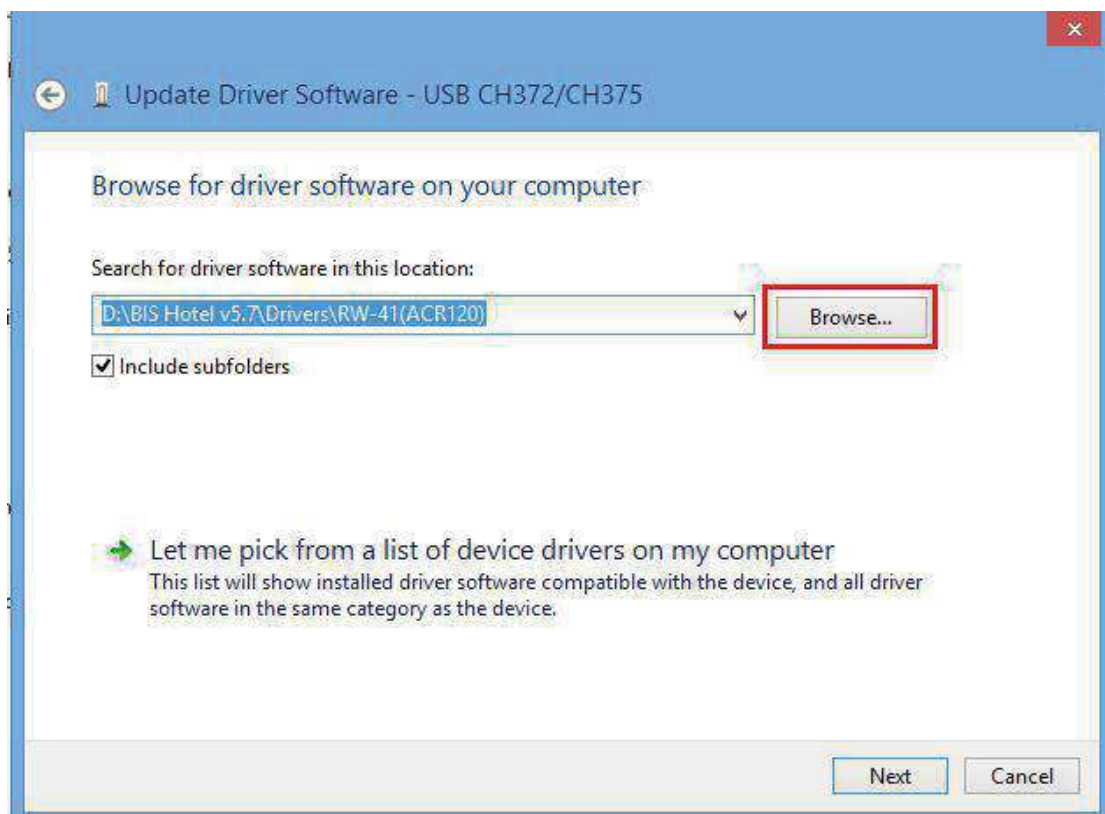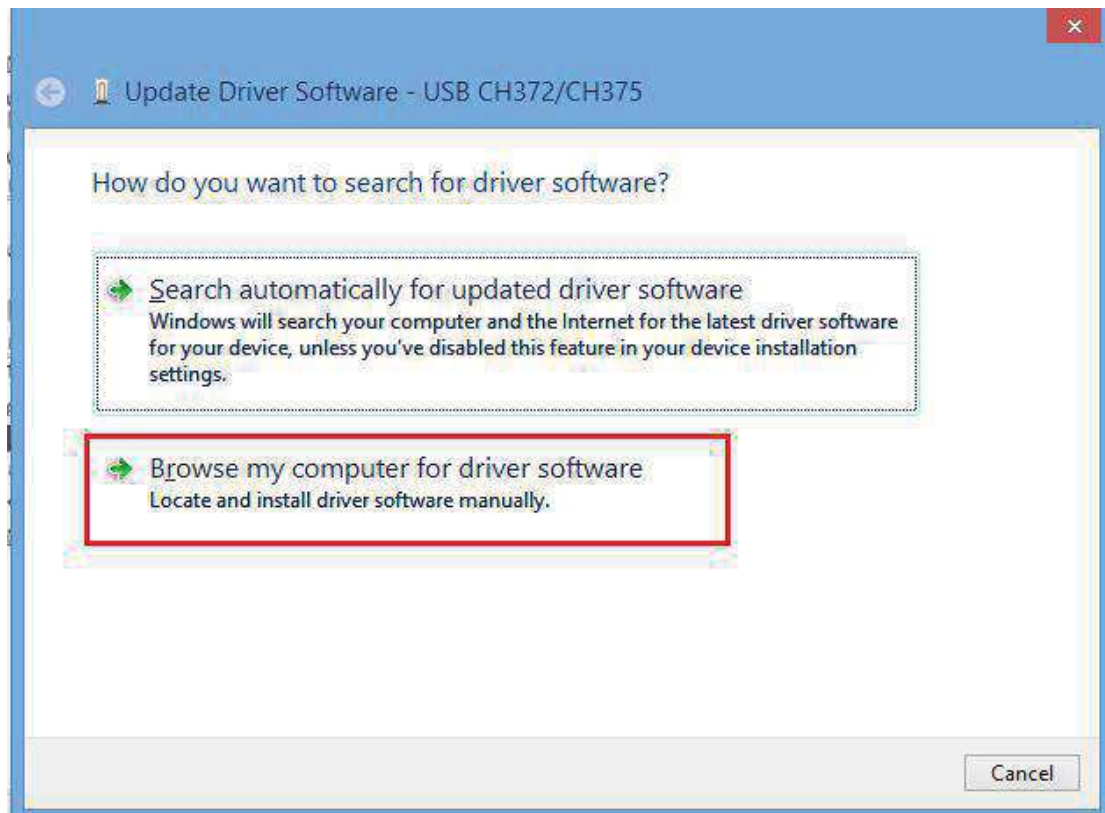

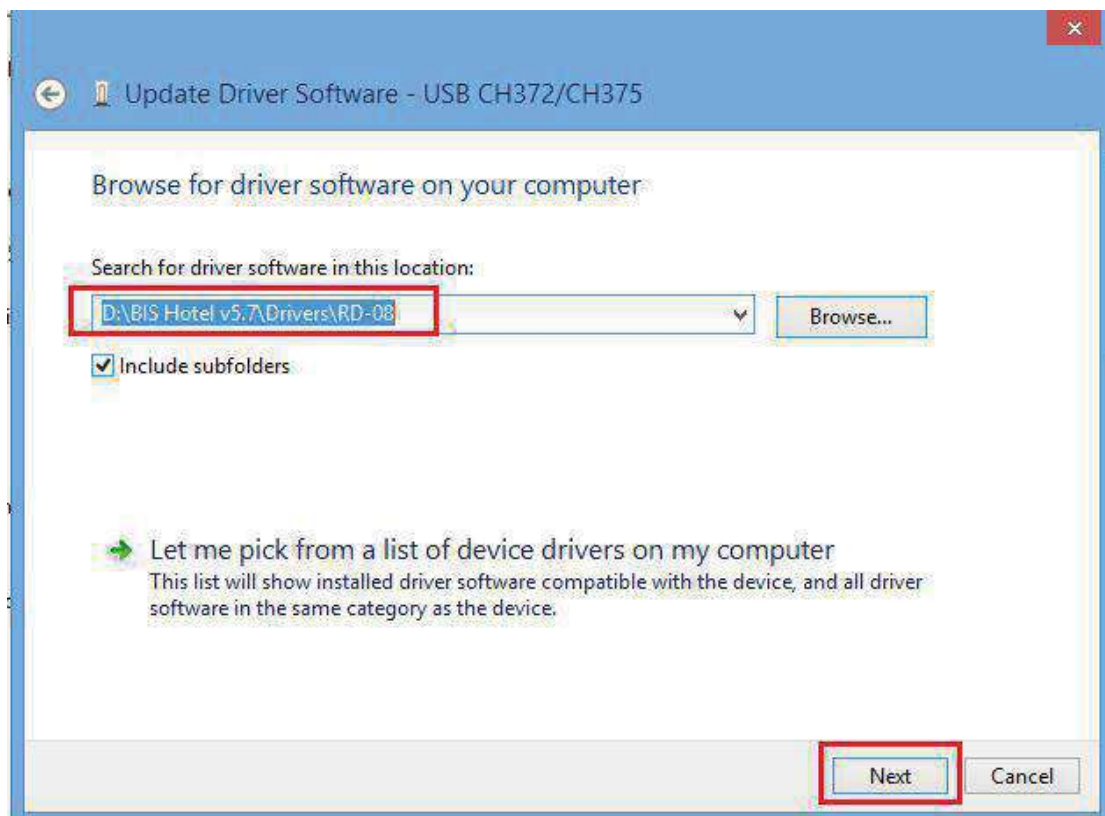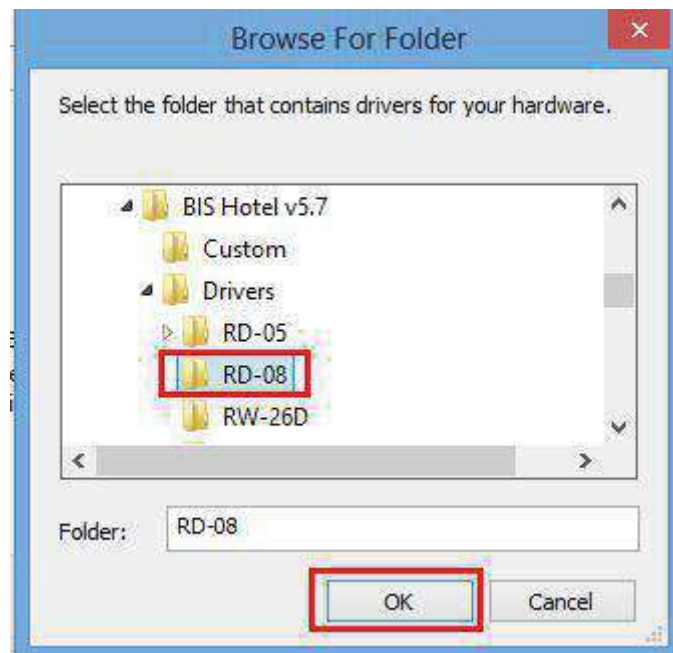

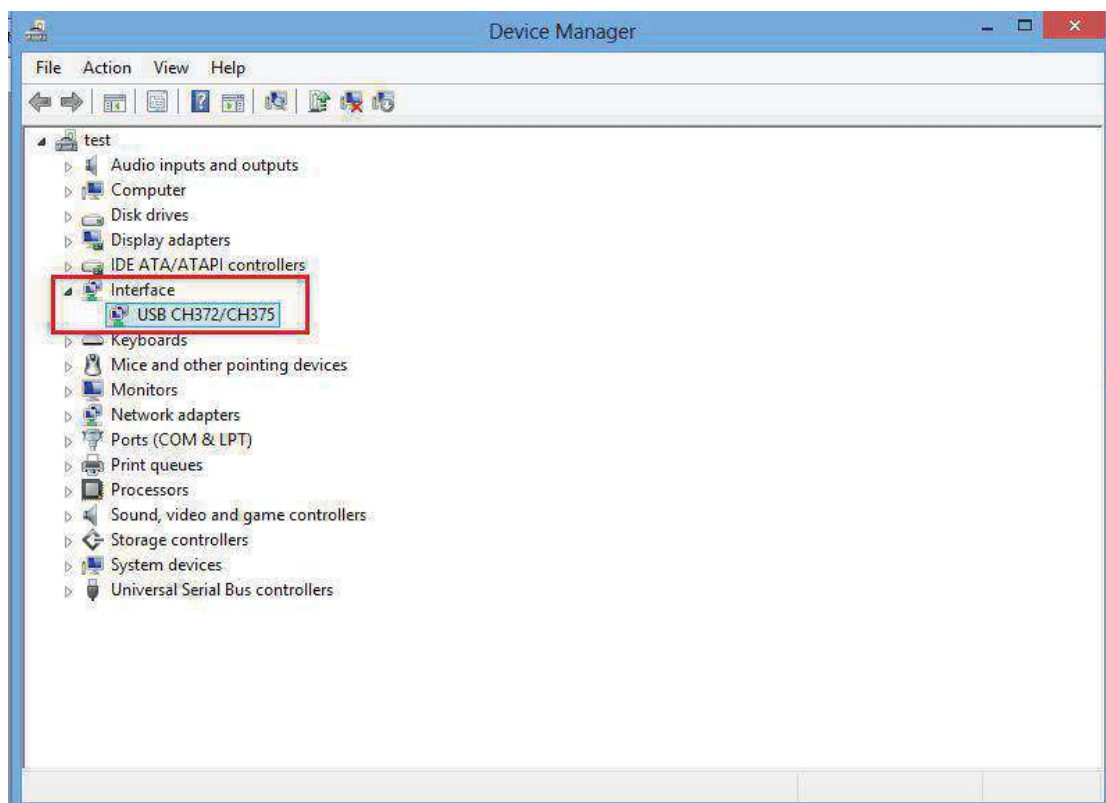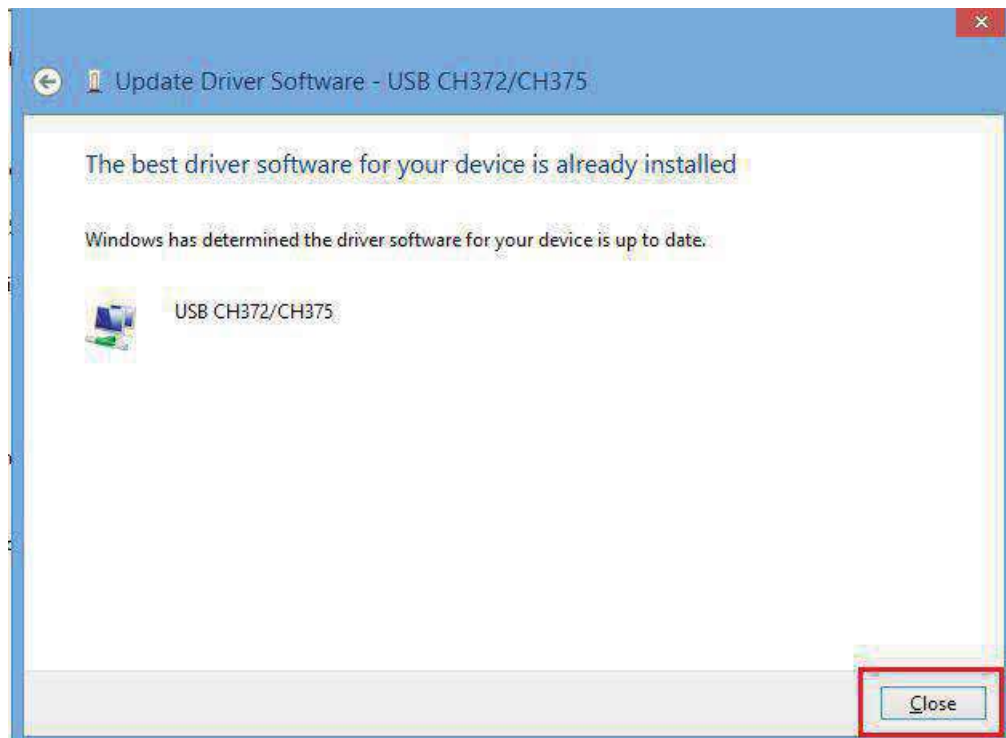

10.3. Options operation

10.3.1. Change password of handset (change pw of handset)

Function: The default password of handset is blank. After changing password of handset, users must access to handset with the correct password next time.

Operation: choose this option, press "OK", enter a new password, press "OK", confirm the new password, press "OK", done.

10.3.2. Communicate with PC (communicate with PC)


Function: setup the handset on PC such as setting time, querying information, deleting date and so on.

Operation: connect with pc with appropriate line, and then choose this option, press "OK", done.

And the LED will show "Waiting for communication.....", if connection is faulty, it will show "connection failure"

10.4. Handset setting

Make sure handset is communicating with PC and showing "Waiting for communication....." Then go back to the software, find out the handset, select "handset setting"

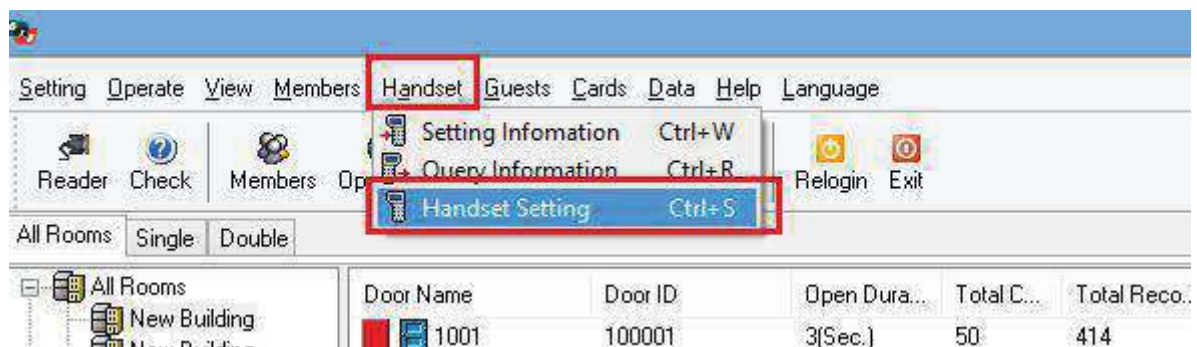


10.4.1. Set time

Set up handset's time




10.4.2. Get time

Check handset's time

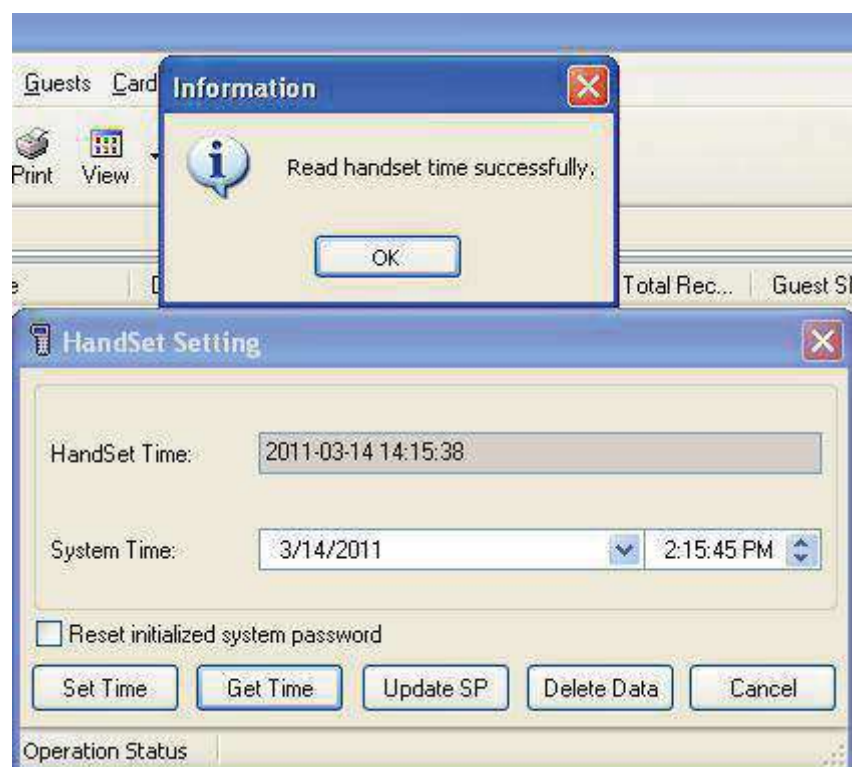


10.4.3. Update SP

Update handset's SID as software SID, it means that the handset must have the same SID with software, if their SID is different, the key cards issued for encoder could not open the door.

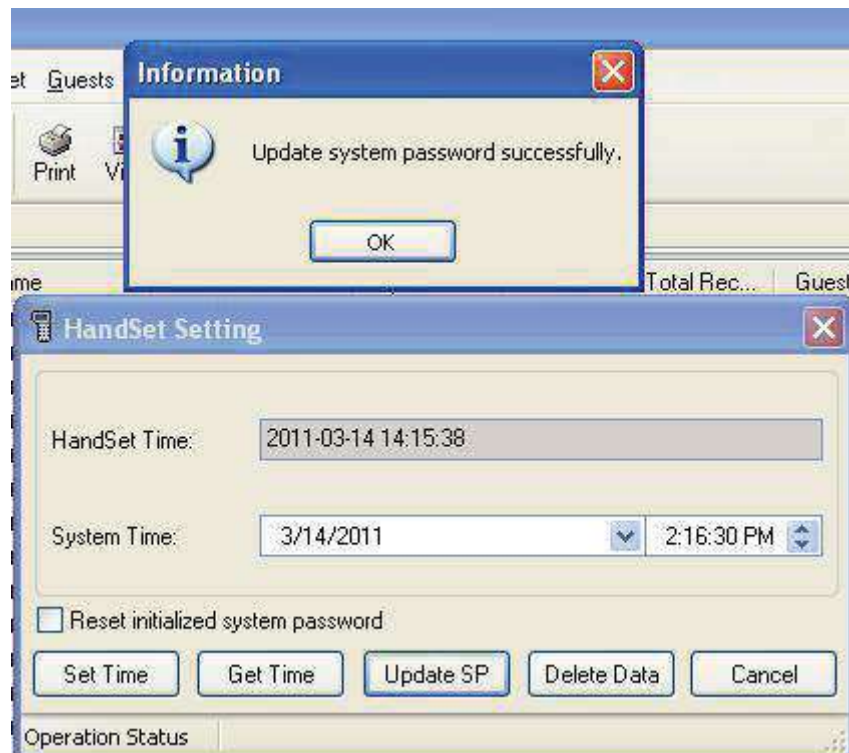

10.4.4. Delete data

Delete the old data of the handset, it will take about couples minutes.

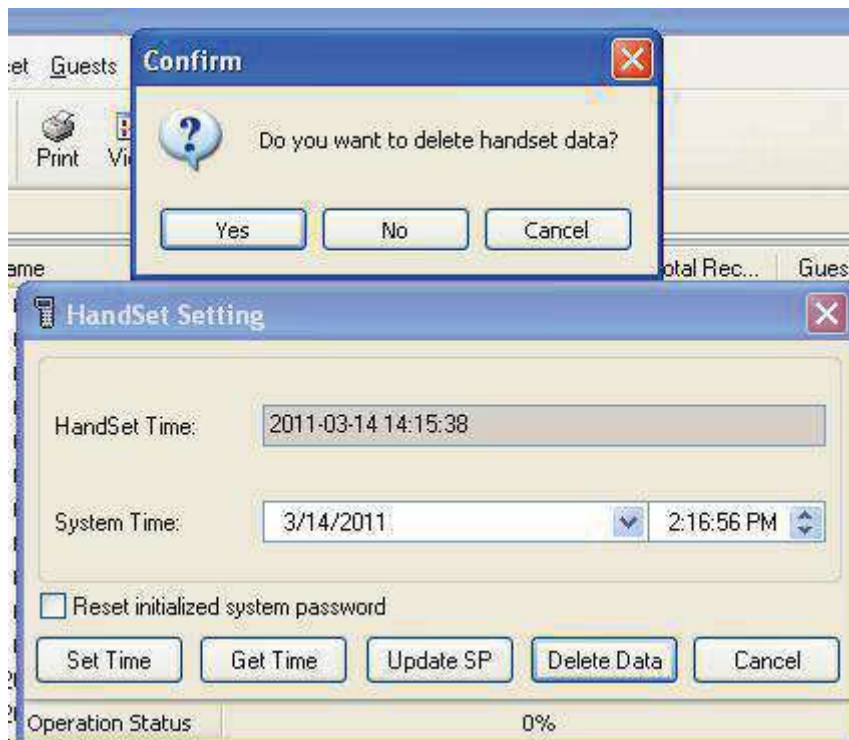

HandSet Setting

HandSet Time: 2011-03-14 14:15:38

System Time: 3/14/2011 2:17:08 PM

☐ Reset initialized system password

Set Time Get Time Update SP Delete Data Cancel

Operation Status 7%

10.5. Setting information

Make sure handset is communicating with PC and showing “Waiting for communication.....”

It is used for writing information from the software to handset. Before write handset, make sure all of the rooms information is done, such as room information, authorization information.


10.5.1. Correct room information

Room information must be set as below; otherwise you can not see the rooms when you are going to write the handset. (Please find out the settings in BIS Hotel 5.7)

Door Name	Door ID	Open Dura...	Total C...	Total Raco...	Guest SN	Total Gueste	Room Type	Room Status	Batteries Chang...
1001	100001	3(Sec.)	50	414	427595503	1	Single	Occupied	
1002	100002	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant	
1003	100003	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant	
1004	100004	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant	
1005	100005	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant	
1006	100006	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant	
1007	100007	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant	
1008	100008	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant	
1009	100009	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant	
1010	100010	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant	
1010_01	10001001	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant	
2001	200001	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant	
2002	200002	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant	
2003	200003	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant	
2004	200004	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant	
2005	200005	3(Sec.)	50	414	0	Vacant	Single	Clean Vacant	
2006	200006	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant	
2007	200007	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant	
2008	200008	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant	
2009	200009	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant	
2010	200010	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant	
2010_01	20001001	3(Sec.)	50	414	0	Vacant	Double	Clean Vacant	


10.5.2. Correct authorization

Authorization information must be set as below; otherwise you can not use the staff card to open the door. (Please find out the settings in BIS Hotel 5.7)

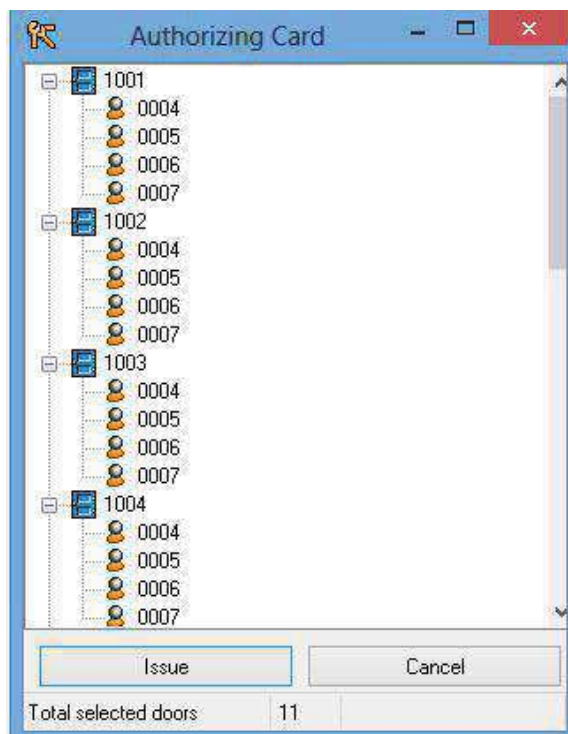


10.5.3. Write handset

Then you can set information to handset.

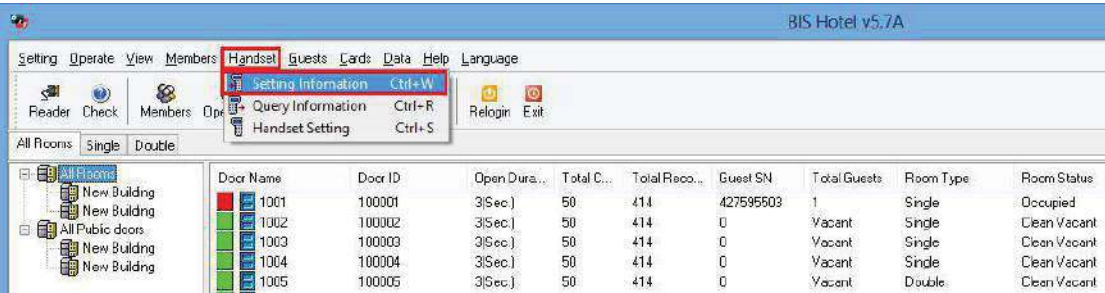

When you press “OK”, you will see all rooms on the left, basically, we choose all room and move

them to right, so you press “>>>”

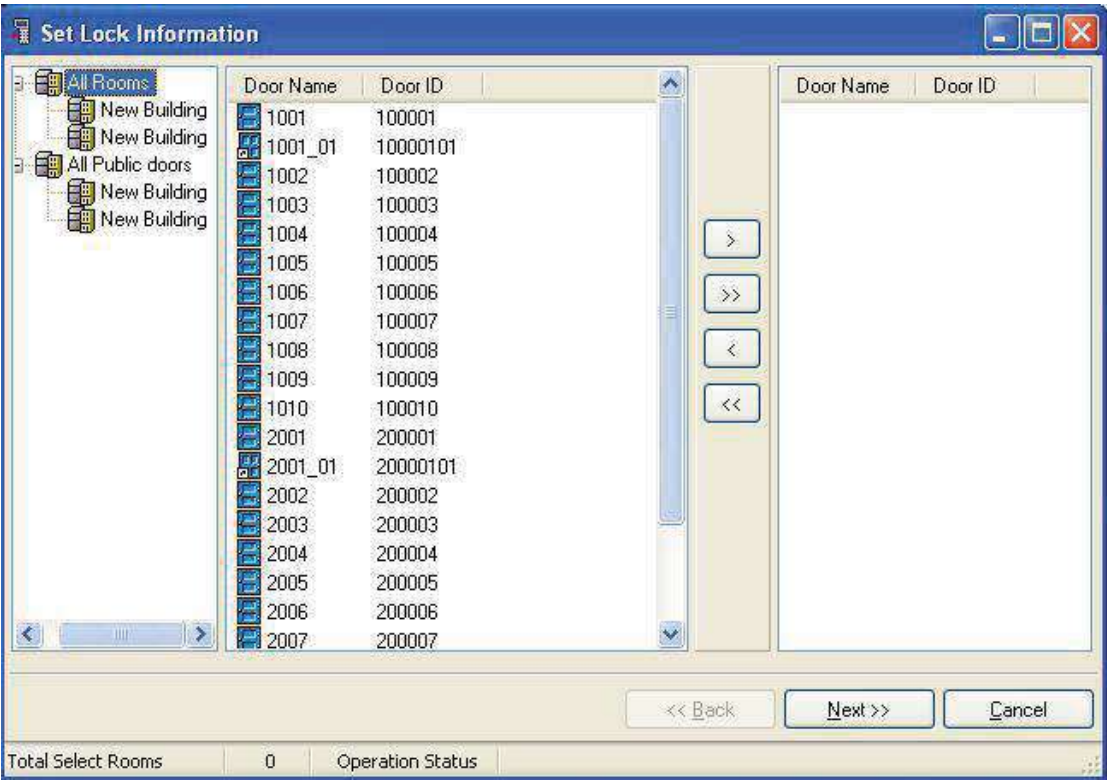

If you want to choose only one room, press “>”

Set Lock Information

Left Panel (Tree View):

- All Rooms
 - New Building
 - New Building
- All Public doors
 - New Building
 - New Building

Center Panel (Table):

Door Name	Door ID
1001_01	10000101
1002	100002
1003	100003
1004	100004
1005	100005
1006	100006
1007	100007
1008	100008
1009	100009
1010	100010
2001	200001
2001_01	20000101
2002	200002
2003	200003
2004	200004
2005	200005
2006	200006
2007	200007
2008	200008

Right Panel (Table):

Door Name	Door ID
1001	100001

Buttons: > >> < <<

Bottom Buttons: << Back Next >> Cancel

Footer: Total Select Rooms: 1 Operation Status

Press "next"

Set Lock Information

Left Panel (Tree View):

- All Rooms
 - New Building
 - New Building
- All Public doors
 - New Building
 - New Building

Center Panel (Table):

Door Name	Door ID
-----------	---------

Right Panel (Table):

Door Name	Door ID
1001	100001
1001_01	10000101
1002	100002
1003	100003
1004	100004
1005	100005
1006	100006
1007	100007
1008	100008
1009	100009
1010	100010
2001	200001
2001_01	20000101
2002	200002
2003	200003
2004	200004
2005	200005
2006	200006
2007	200007

Buttons: > >> < <<

Bottom Buttons: << Back Next >> Cancel

Footer: Total Select Rooms: 22 Operation Status

10.5.3.1. Time sections setting

Press “set”, there is many time sections you can set, it is like the “time card”, choose “Reset guest information” if locks are newly installed. And other two options depend on requirement.

Time Section	Working Time	Working Days
Time Section1	00:00-24:00	All Days

Other Options:

☐ Set to passage ☒ Set to latchbolt alarm ☐ Reset guset information

Set

<< Back Next >> Cancel

Total Select Rooms: 22 Operation Status

10.5.3.2. Blacklist setting

If some card is lost, in that case, you need to choose the lost card, and take it into right, and that card can not be used as all the information is transmitted into the locks. Then, press “next”,

Card Type	Card No	Door ID	Holder Nam
Emergen...	353428280		0001
Staff Card	353428969		0002
Staff Card	353428393		0005
Staff Card	353428387		0004
Staff Card	353428378		0003
Staff Card	334416583		0002

Total Blacklists: 0

Set Conditions...

<< Back Next >> Cancel

Total Select Rooms: 22 Operation Status

Set Lock Information

Blacklist setting:

Card Type	Card No	Door ID	Holder Nam
Emergen...	353428280		0001
Staff Card	353428969		0002
Staff Card	353428393		0005
Staff Card	353428387		0004
Staff Card	353428378		0003
Staff Card	334416583		0002

>

>>

<

<<

Card Type	Card No	Holder N
-----------	---------	----------

<

>

Total Blacklists: 0

Set Conditions...

<< Back

Next >>

Cancel

Total Select Rooms

22

Operation Status

Confirm

Do you want to write handset?

Yes

No

Cancel

Set Lock Information

Blacklist setting:

Card Type	Card No	Door ID	Holder Nam
Emergen...	353428280		0001
Staff Card	353428969		0002
Staff Card	353428393		0005
Staff Card	353428387		0004
Staff Card	353428378		0003
Staff Card	334416583		0002

>

>>

<

<<

Card Type	Card No	Holder N
-----------	---------	----------

<

>

Total Blacklists: 0

Set Conditions...

<< Back

Next >>


Cancel

Total Select Rooms

22

Operation Status

34%

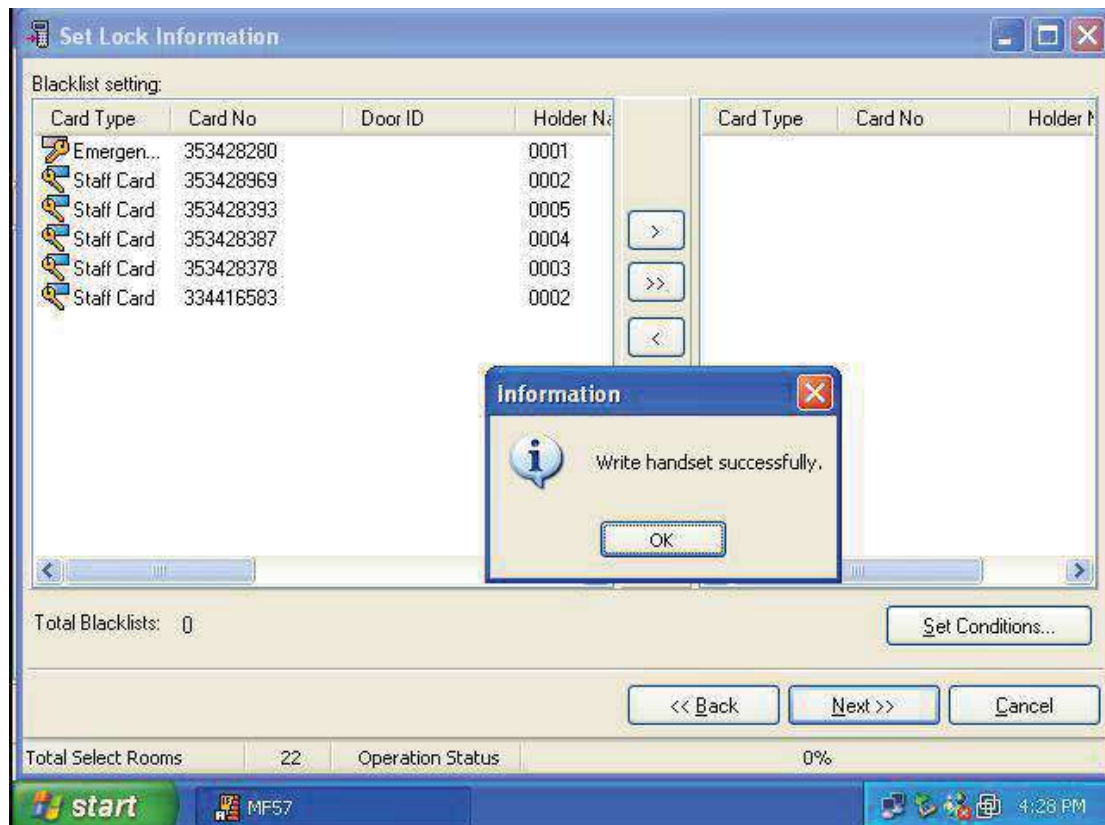

When you see “write handset successfully”, all the information of the hotel has been transmitted in the handset. The next step is going to set up the locks.

10.6. Program the lock with handset

10.6.1. Setup system password (setup sys pw)

Function : Setup/change system password of the lock.

Operations:

Insert the USB-Mini USB wire, then go in front the lock, there is Mini USB socket at the bottom, connect handset with lock, then choose “ setup sys pw”---- “OK” ----“1 beep, green light” comes from lock, setting is successful. Then move to “setup lock’s info”

10.6.2. Setup lock's information (setup lock's info)

Function: setup/change lock's information including lock's memory, motor's parameter, authorizing staffs, blacklist and so on.

Operation:

Choose “setup lock’s info”, press “OK”, you will see enter lock’s No., in that case, you can enter the locks’ No, and press “OK”, the lock’s No. is with 8 digits, the ahead 6 digits is same as “Door ID” in the software, and the last two digits are for inner door, without inner door is “00”, for example, if you want to find out the door ID is 100001 to set, the Door ID in the software is 100001, there is no inner door in this room, so you enter 10000100; if there is one inner room in Door ID 200002, then you can enter 20000201 to find out that room No. And then, press “OK”----“1 beep, green light” comes from lock, done.

In another case, once you see “enter lock No.”, keep pressing “OK”, you will see all the rooms; find out the corresponding room, press “OK”----“1 beep, green light” comes from lock, done.

10.6.3. Check lock's time (check lock's time)

Function: Check lock's current time.

Operation: Connect the lock with appropriate line, then choose this option, press "OK", done.

10.6.4. Adjust lock's time (adjust lock's time)

Function: Set the current time to the lock.

Operation: connect with lock with appropriate line, and then choose this option, press "OK", confirm the time and press "OK", done.

This is another important step for setting the lock, it is used for setting lock's time, then choose "adjust lock's time"---- "OK" ----"1 beep, green light" comes from lock, setting is successful, if you want to sure if the time has been set, you can use "check lock's time".

10.6.5. Check lock's battery (check lock's battery)

Function: Check lock's current battery.

Operation: Connect the lock with appropriate line, then choose this option, press "OK", it will display normal/low.

10.7. Audit trail lock's access records

10.7.1. Download lock's info (download lock's information)

Function: download the current opening record of lock to handset

Operation: connect with lock with appropriate line, then choose this option, press "OK", wait for a moment, done.


Connect the lock with handset, choose the option, and press "OK", it will take couples seconds to download the information from the lock.

After downloading the information, connect the handset with PC, and choose "communicate with PC",

Go back to the software, find out the "Handset", and choose "query information", you will see the screen as below, and then press "OK".



Press “read data”

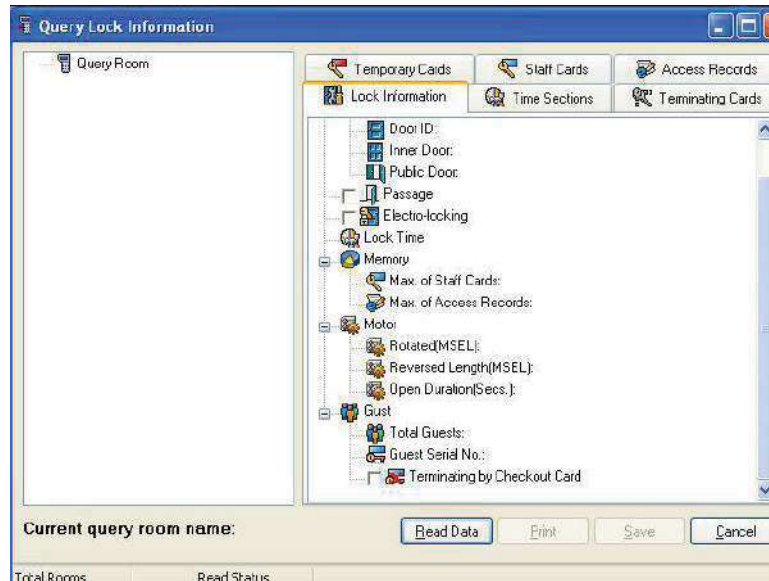


Press “Yes”.




Notice: Do not move the device or load any other operation in PC when downloading the information.

After downloading the information, you will see the screen as below, click the room you want, and then press “Query”,

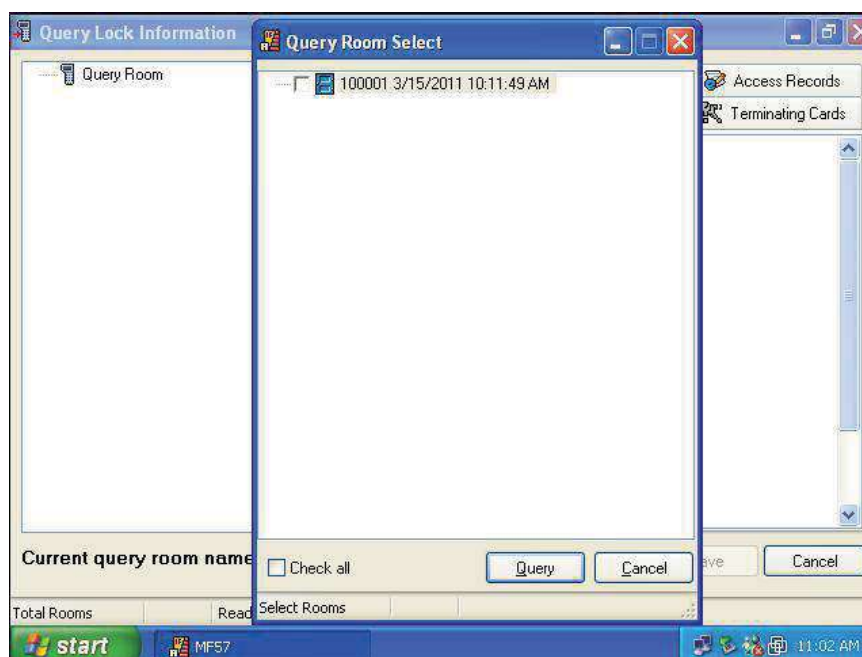





When “Read handset successfully” pops up, press “OK”, you will see another screen as below,

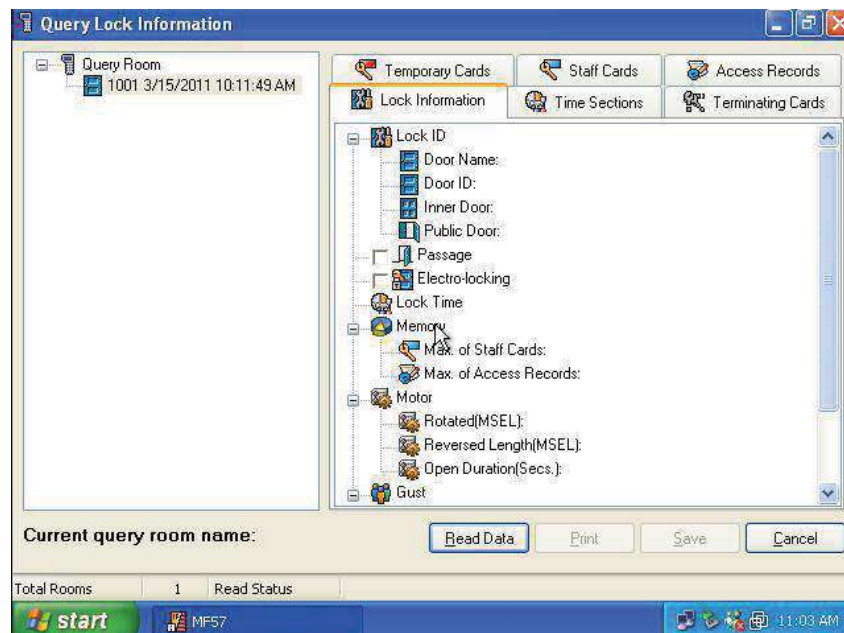

Choose the room and right click the mouse, and you will see “view”, press “view”, finally, you can see all the information of the lock.

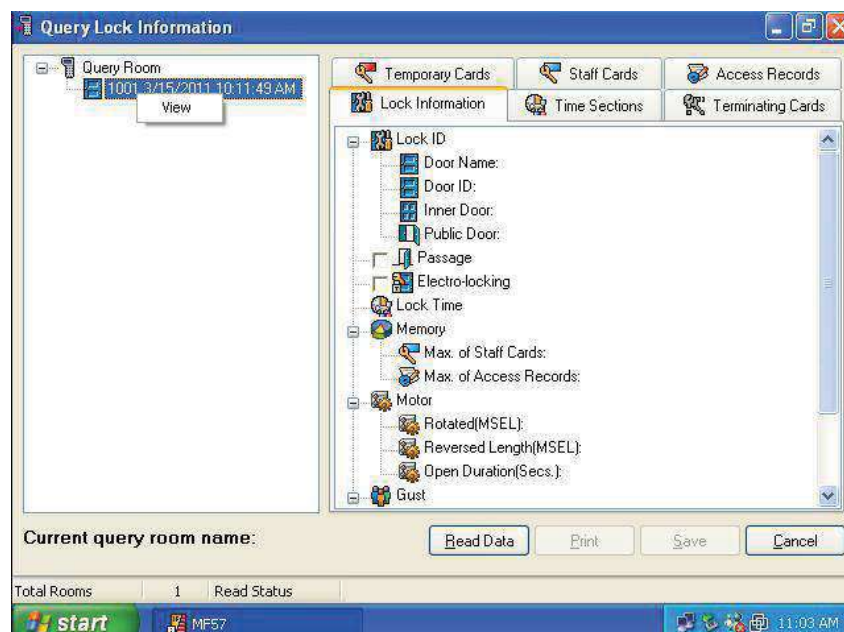


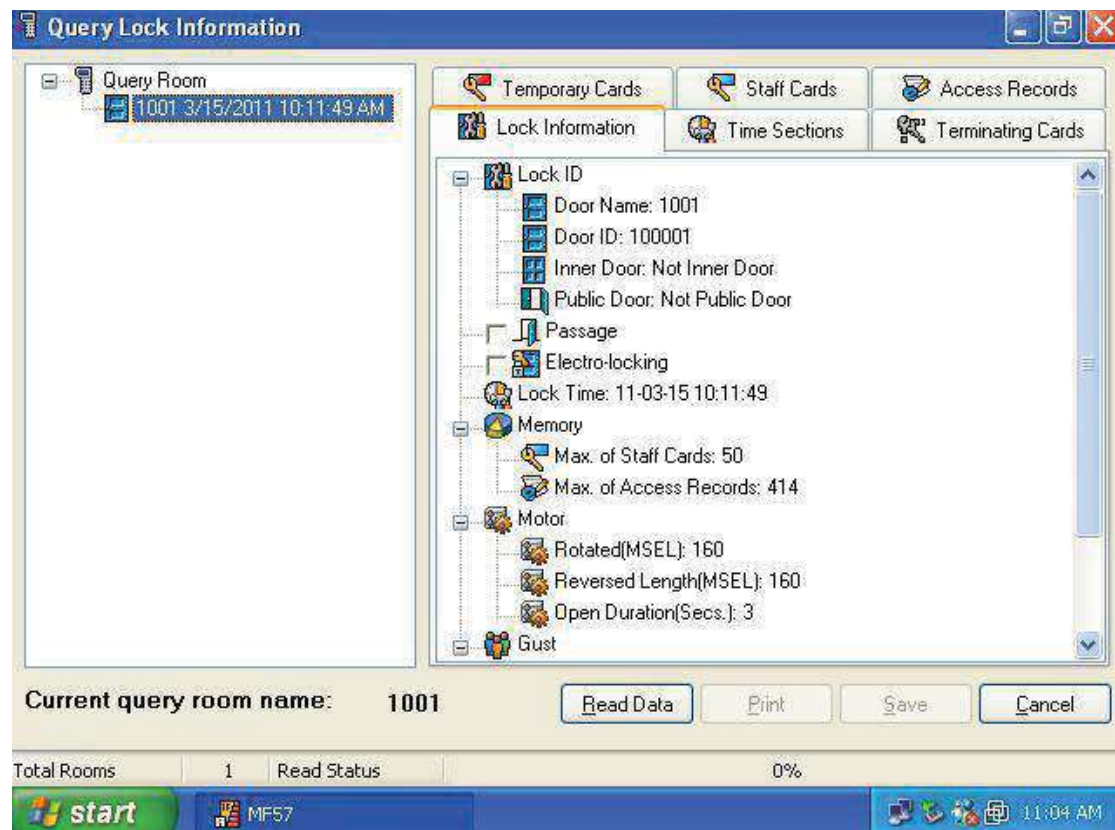

Notice: one handset can download several locks' information. But need to view the information one by one.

11. Trouble and Shooting

11.1. Run software error

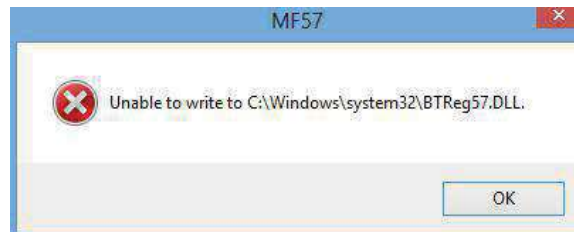

Solution: Close the UAC following "2. Before software installation"

11.2. Encoder is not working



Solution: Check if the driver is installed


Check if the card is put on the encoder

Check if the encoder model is correct

11.3. illegal card error




Reason: The card's system ID is different from software's. Check if the software is changed system ID. If the software is not changed system ID (as below), the card is ever changed system ID. In this case, you have to use another new cards.

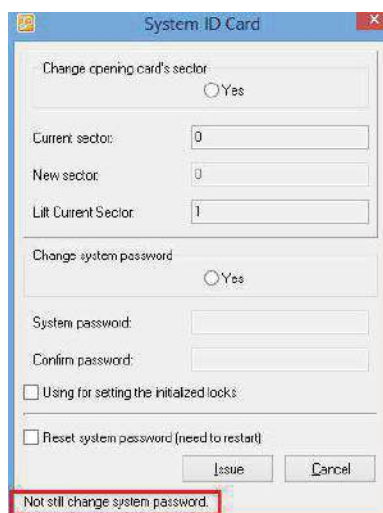


12. Emergency solution for lock

There are error indications for our lock; different sound and different light are indicating different errors.

12.1. Frequently errors and Trouble Shooting Guide for Guest Card

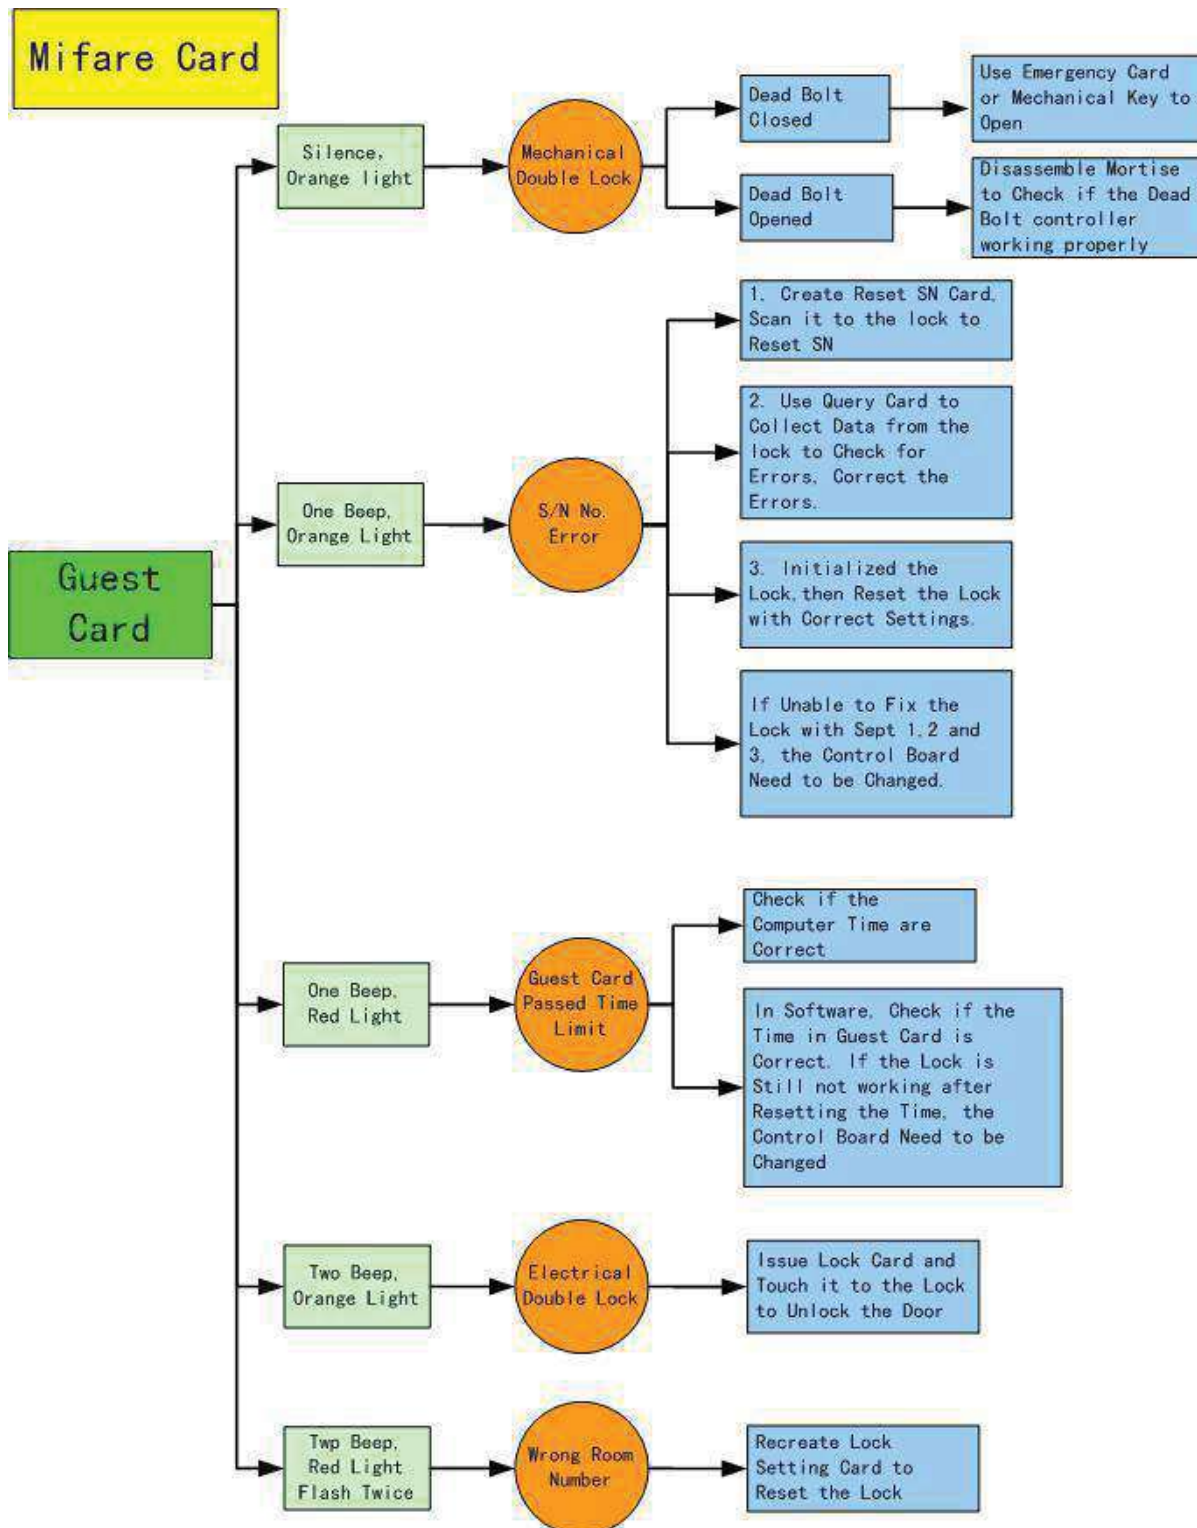


12.2. Frequently errors and Trouble Shooting Guide for staff Card

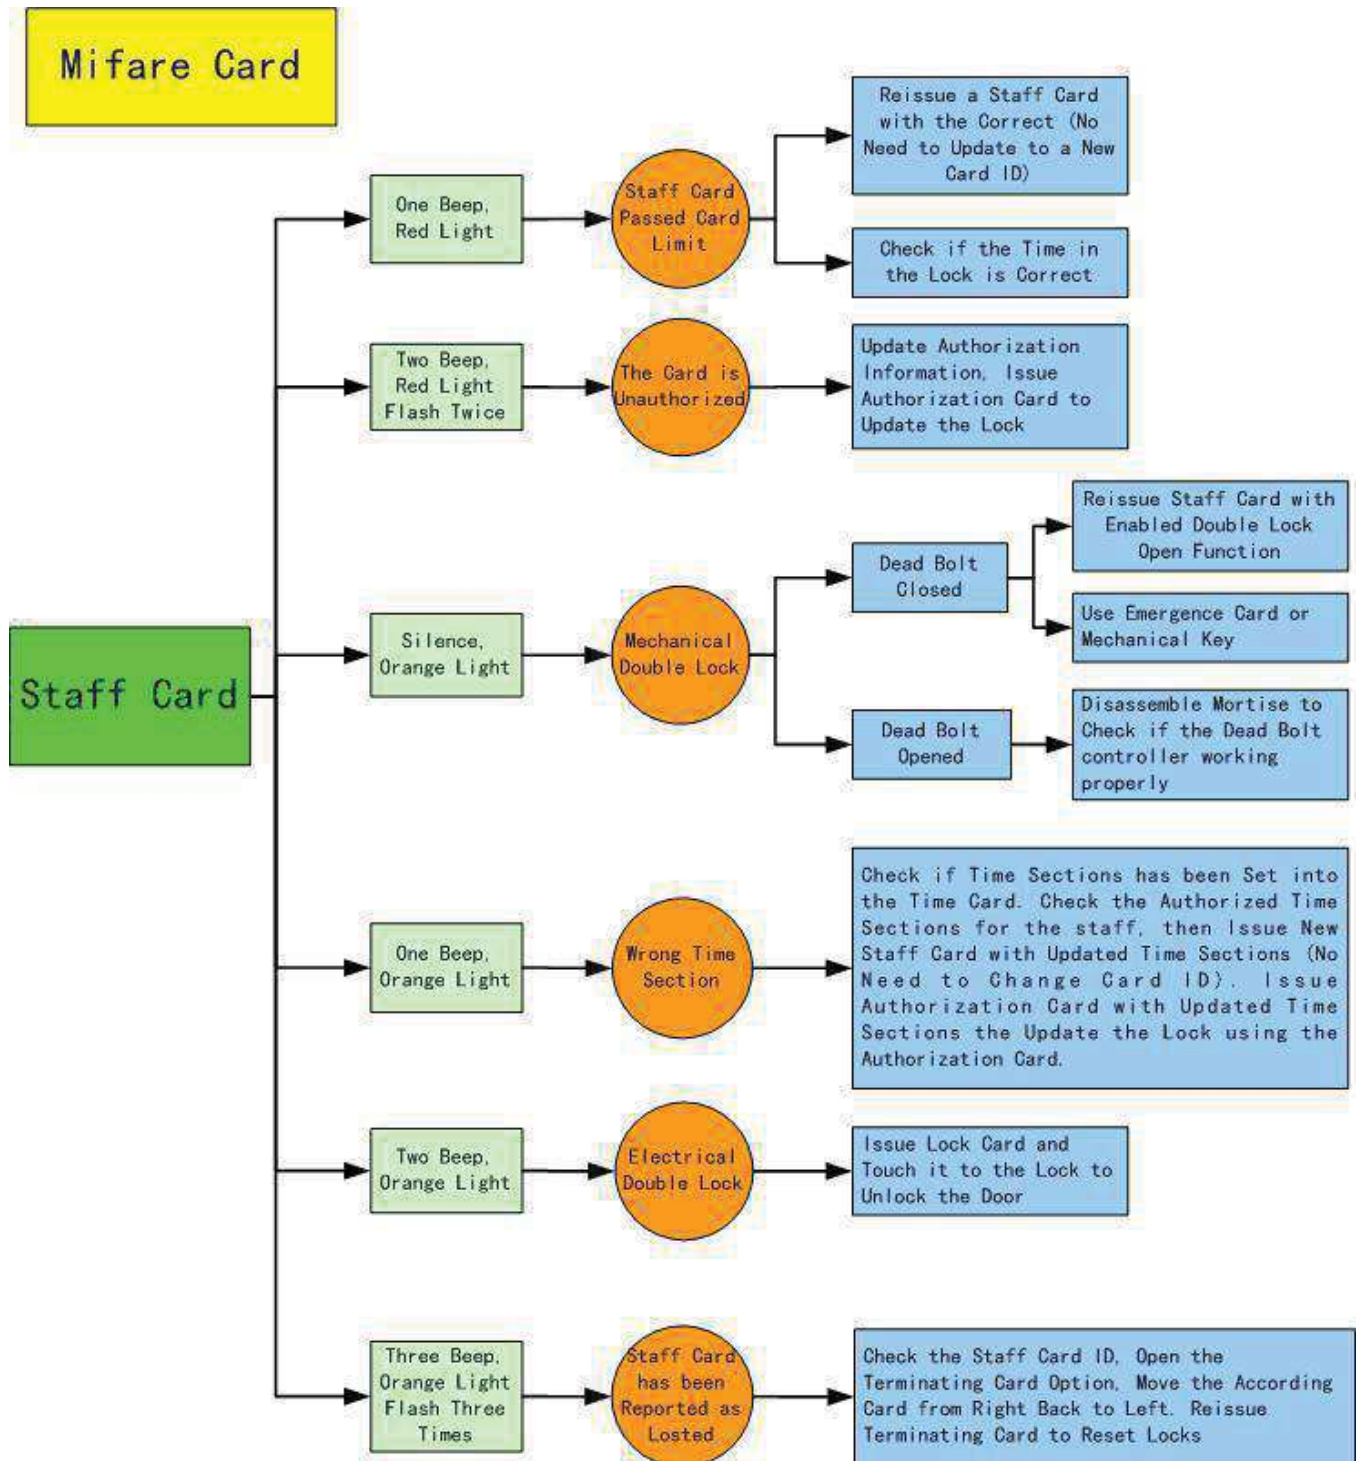



13. Database type selection

When you login to the software, wrong database type is selected, in that case, follow the instructions as below to re-select the database.

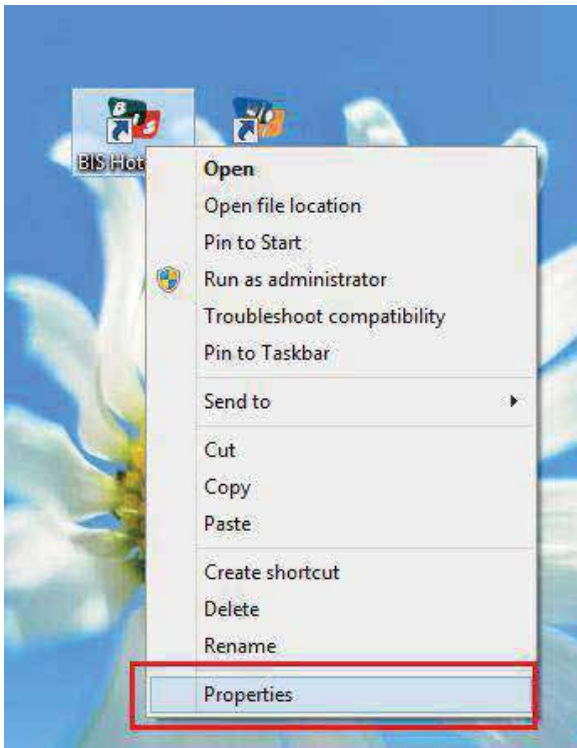

Right click the Icon.

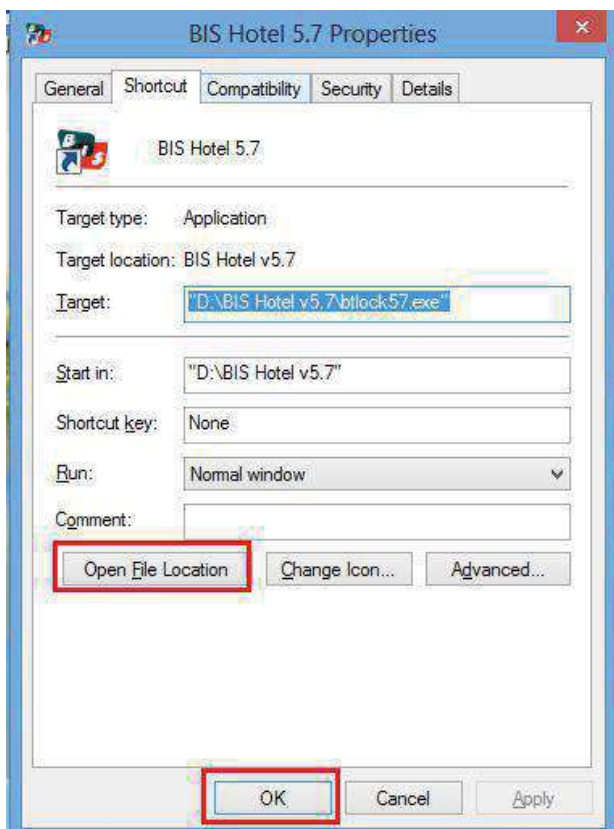

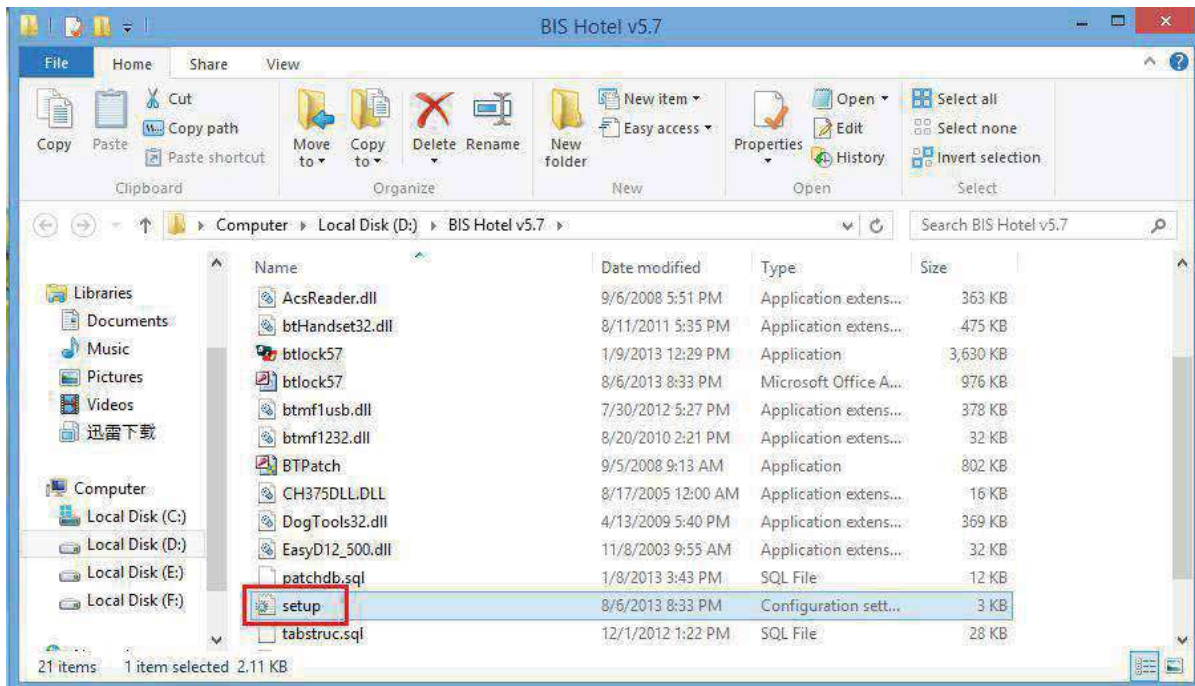

Delete
“setup”,
and
re-run the
software,
you will
see the
database
selection.

13.1. Forget the operator password

13.1.1. Solution 1

Please send to us the database, and we will get it for you.

13.1.2. Solution 2

Open the database, find out “Operator”, delete the operators inside the table, and re-create the operator.

13.2. Forget the system ID that ever set

Please send the database to us via e-mail with a compressed file, be-tech will give you respond soon


13.3. Audit trail lock's information

Each door lock maximum can keep 414 opening records. If opening exceed 414 record then it will automatically renew the latest record.


13.3.1. Audit trail with Query card (S70)

13.3.1.1. Issue query card

There are total 3 cards need to be issue, because only one card is not large enough capacity to contain all information of lock.

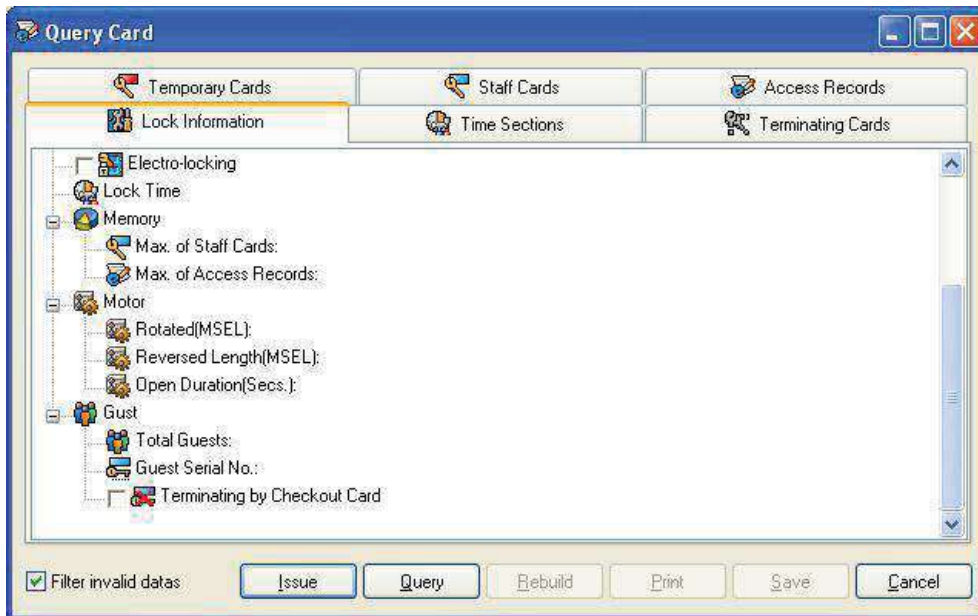


Click "Issue"

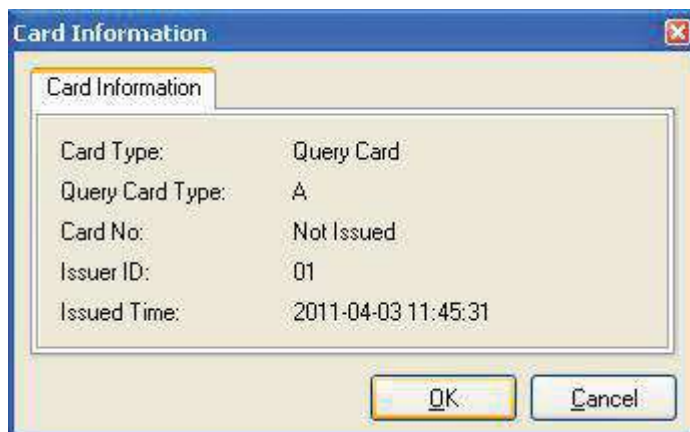

Click "OK",




Click "OK", in about 1 min

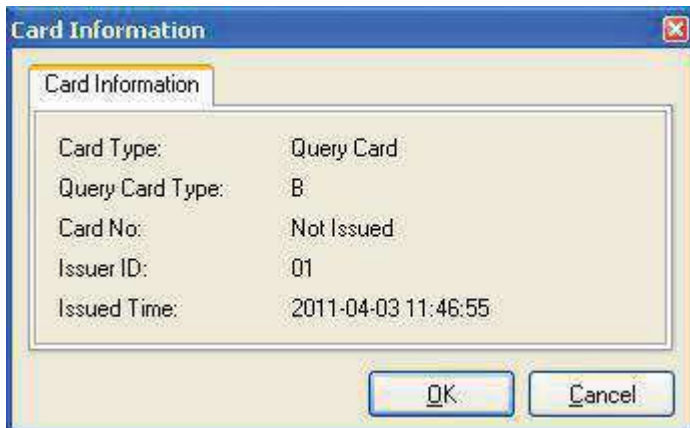

Click "OK",



Click "OK", in about 1 min

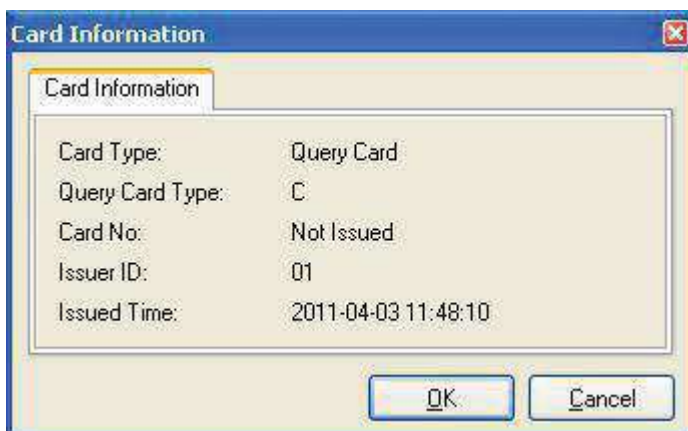


Click "OK"




Click "OK", in about 1 min

Take the three cards from A to C to scan the lock. The lock will be "1 beep, green light" after scanning the lock meaning read data successfully. However one of them is fail, please re-try again.


13.3.1.2. Read query card

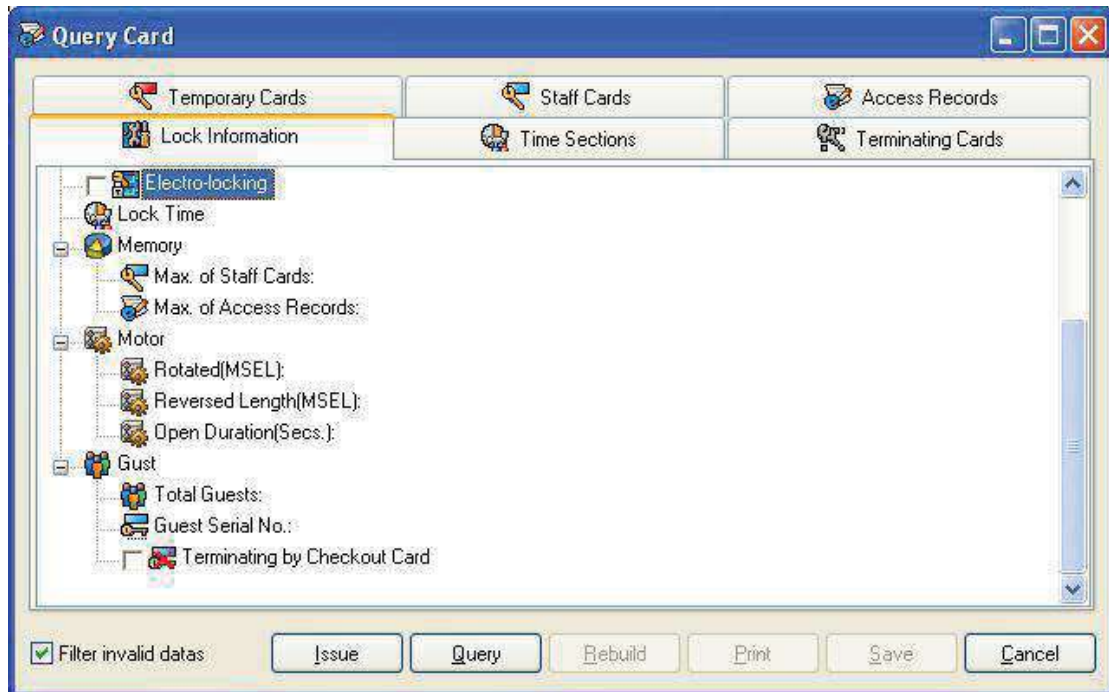


Click "Query"

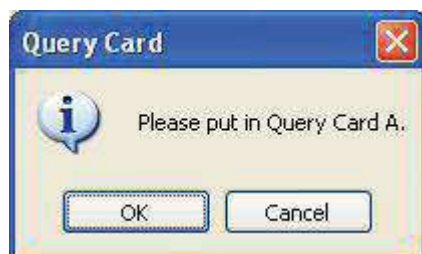

Click "OK"

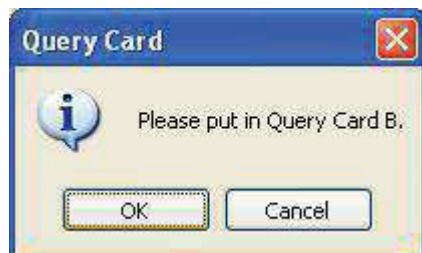

Click "OK"

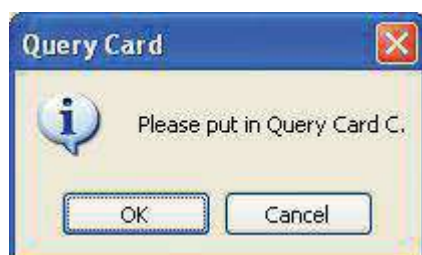

Click "OK"

Note: If one of them can't be read, the audit trail is unsuccessful. In that case, please re-try again.

Query Card

Temporary Cards Staff Cards Access Records

Lock Information Time Sections Terminating Cards

- Electro-locking
 - Lock Time: 4/3/2011 1:30:00 PM
- Memory
 - Max. of Staff Cards: 50
 - Max. of Access Records: 414
- Motor
 - Rotated(MSEL): 160
 - Reversed Length(MSEL): 160
 - Open Duration(Secs.): 3
- Guest
 - Total Guests: 1
 - Guest Serial No.: 355146793
 - Terminating by Checkout Card

☒ Filter invalid datas Issue Query Rebuild Print Save Cancel

You will see the six pieces information as below,

Query Card

Temporary Cards Staff Cards Access Records

Lock Information Time Sections Terminating Cards

Index	Valid Time	Valid Days
Time Section1	00:00-24:00	ALL Days
Time Section2	Invalid	Invalid
Time Section3	Invalid	Invalid
Time Section4	Invalid	Invalid
Time Section5	Invalid	Invalid
Time Section6	Invalid	Invalid
Time Section7	Invalid	Invalid
Time Section8	Invalid	Invalid
Time Section9	Invalid	Invalid
Time Section10	Invalid	Invalid
Time Section11	Invalid	Invalid
Time Section12	Invalid	Invalid

Start address 0x0050 Total number 24

☒ Filter invalid datas Issue Query Rebuild Print Save Cancel

Query Card

☒ Lock Information
 ☒ Time Sections
 ☒ Terminating Cards

☒ Temporary Cards
 ☒ Staff Cards
 ☒ Access Records

Card No	Holder No	Time Section	Holder Name
354986640	7	Time Section1	0002
354986714	8	Time Section1	0003

Start address: 0x0490 Active pointer: 0x04A0 Max number: 50 Total number: 2

☒ Filter invalid datas

Query Card

☒ Lock Information
 ☒ Time Sections
 ☒ Terminating Cards

☒ Temporary Cards
 ☒ Staff Cards
 ☒ Access Records

Card No	Terminating Time	Holder Name
---------	------------------	-------------

Start address: 0x0300 Active pointer: 0x0300 Max number: 50 Total number: 0

☒ Filter invalid datas

13.3.2. Audit trail with Hand held

Please find out “10. Hand Held Unit—10.7 Audit trail lock’s access records”

13.4. For a lost key card

13.4.1. Guest card

Just check out the room, and issue a new guest card to open the door, the lost one is canceled.

13.4.2. Staff card

- **Solution 1**

Re-issue a staff card by update card number to open the doors, the lost one is canceled



- **Solution 2**

Re-issue a staff card by update card number to open the doors, if the card can't open the door, you need to authorize again.


13.4.3. Emergency card

Terminating card (S70 card) or hand held is required

- **Terminating card (S70)**

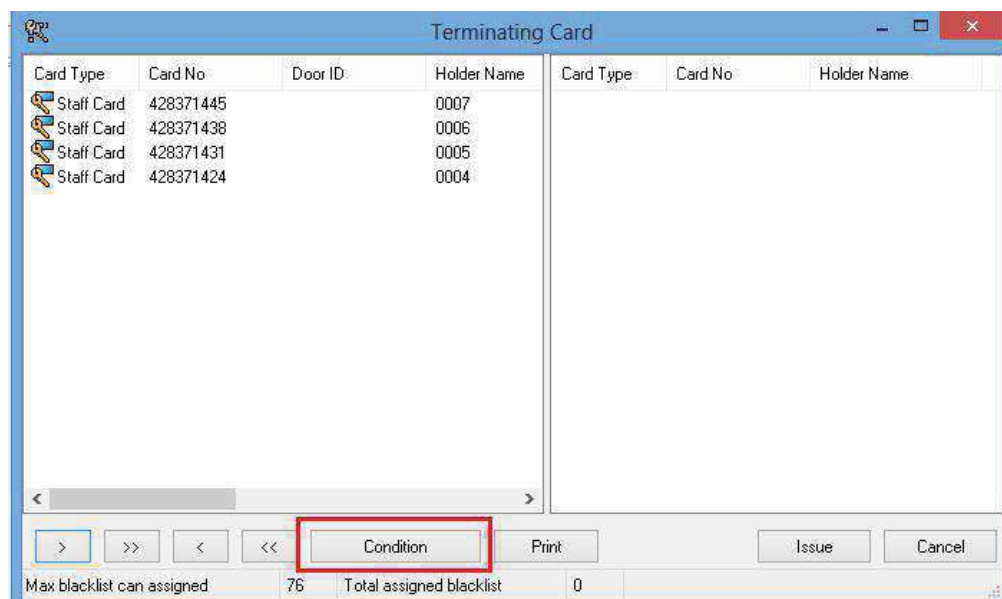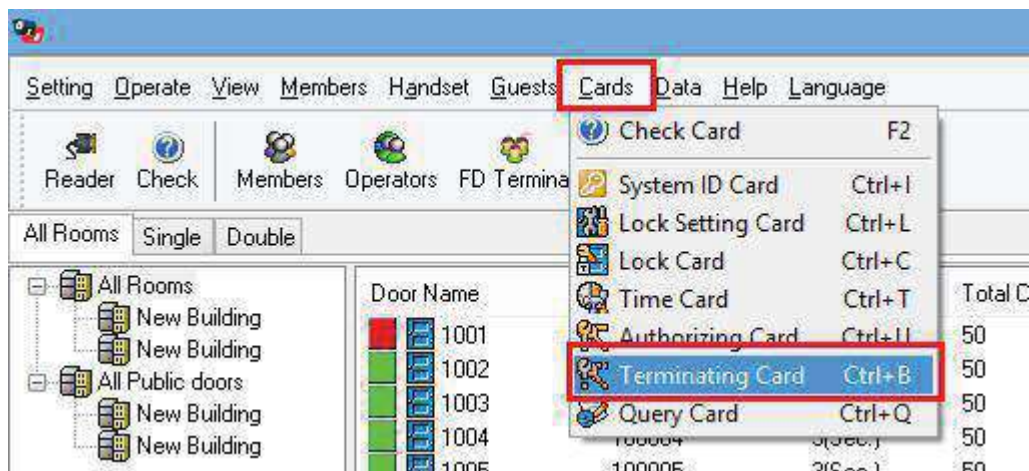


Find out the card that lost

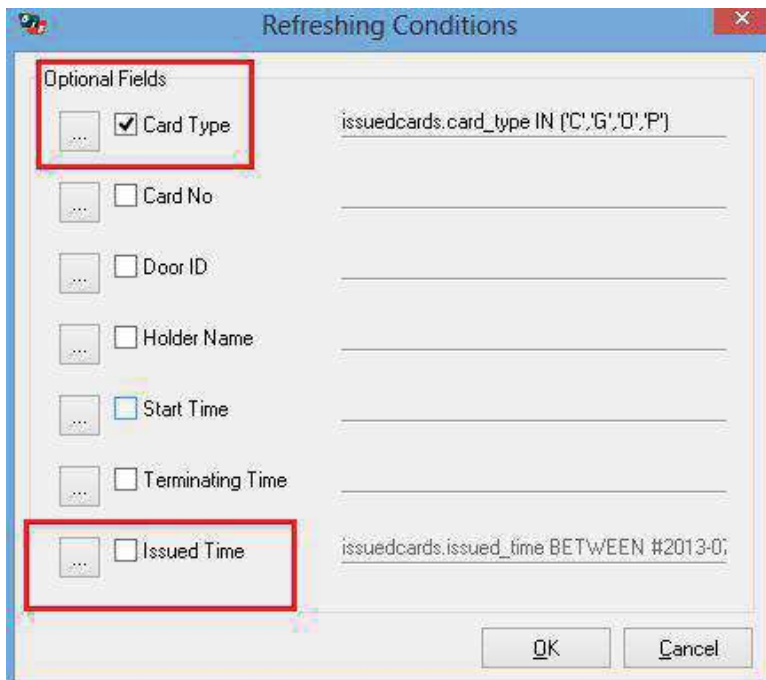


The "Refreshing Conditions" dialog box contains a list of optional fields. The "Card Type" checkbox is checked, and the "Issued Time" checkbox is unchecked. Both checkboxes are highlighted with red boxes. The "Card Type" field has a corresponding SQL query: `issuedcards.card_type IN ('C','G','D','P')`. The "Issued Time" field has a corresponding SQL query: `issuedcards.issued_time BETWEEN #2013-0;`. The "OK" and "Cancel" buttons are at the bottom right.

Do not click "Issued Time"

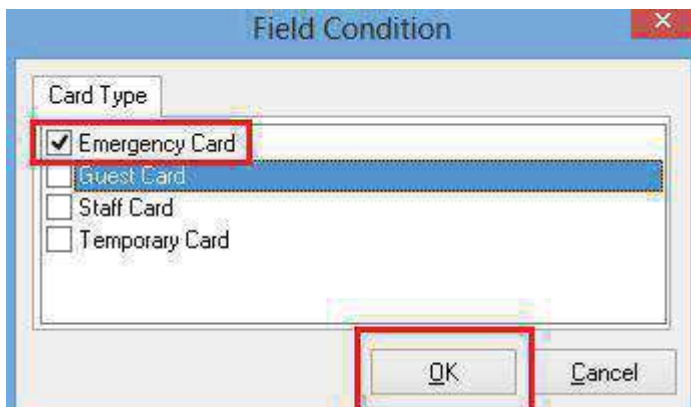


The "Field Condition" dialog box shows a list of card types. The "Emergency Card" checkbox is checked, and the "Guest Card" checkbox is unchecked. Both checkboxes are highlighted with red boxes. The "OK" and "Cancel" buttons are at the bottom right.


Just click" Emergency card"

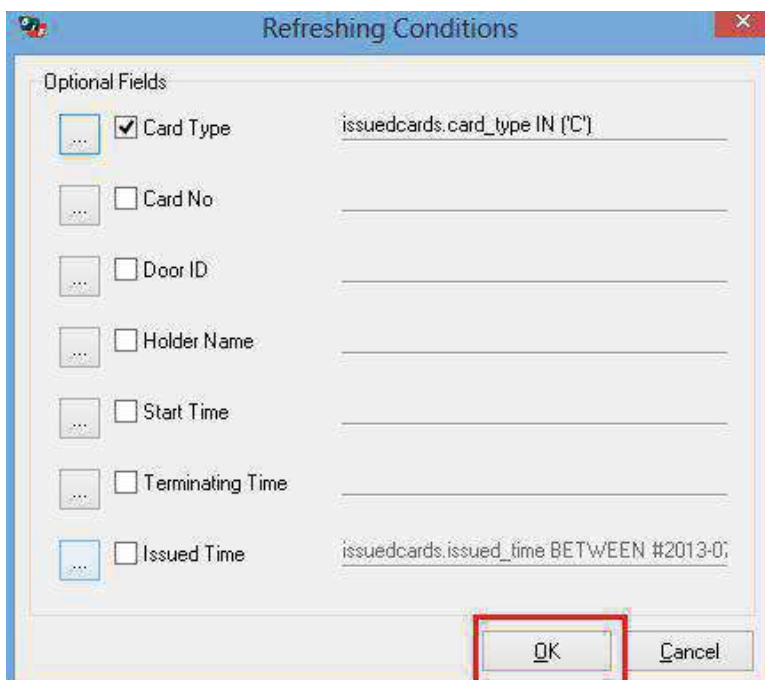


The "Refreshing Conditions" dialog box is shown again. The "Card Type" checkbox is checked, and the "Issued Time" checkbox is unchecked. Both checkboxes are highlighted with red boxes. The "Card Type" field has a corresponding SQL query: `issuedcards.card_type IN ('C')`. The "Issued Time" field has a corresponding SQL query: `issuedcards.issued_time BETWEEN #2013-0;`. The "OK" and "Cancel" buttons are at the bottom right.

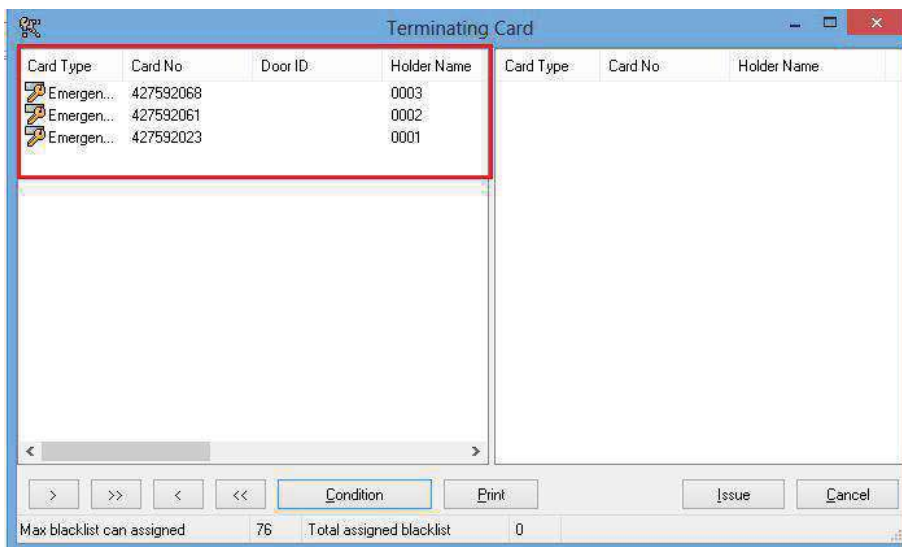

You will see the emergency cards that you ever issued.

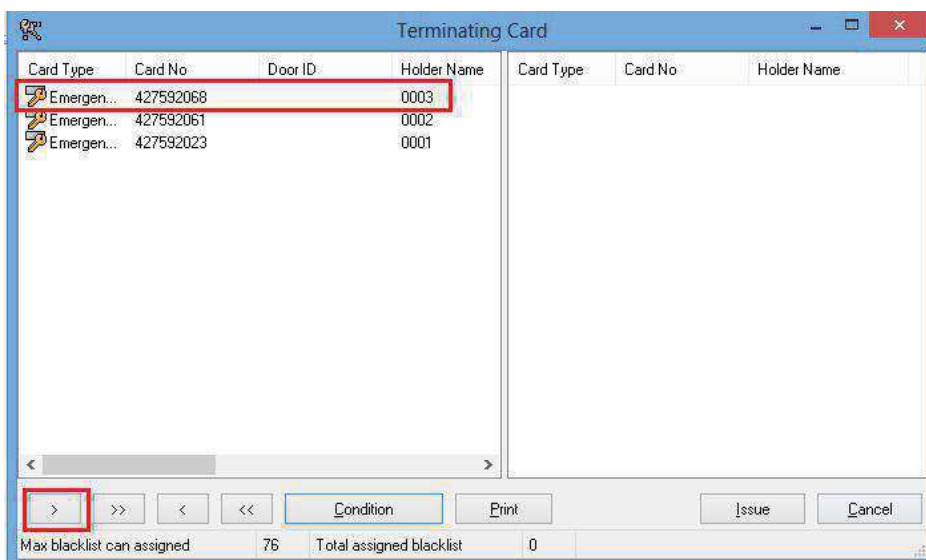

Select the lost emergency card make it to the left window

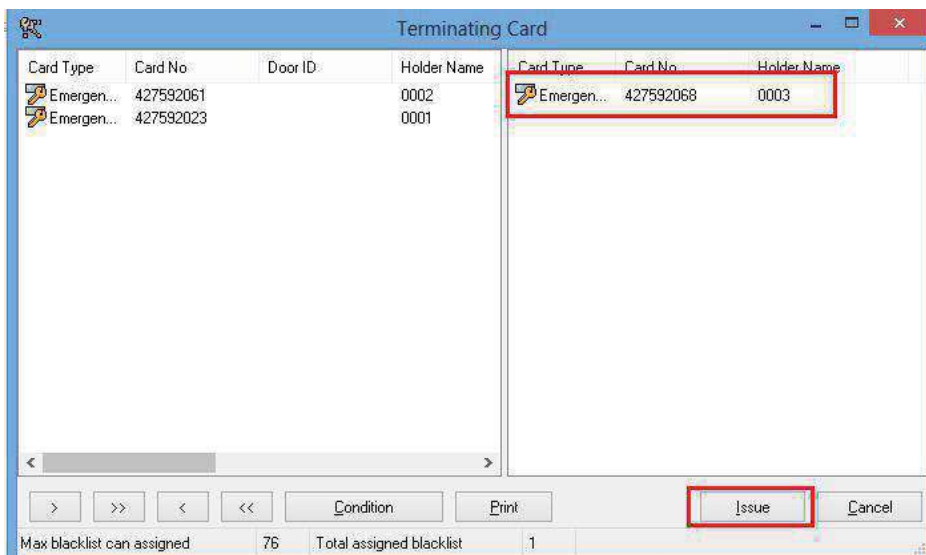

Put a S70 card on the encoder, click "Issue".
Scan all of rooms with this Terminating card after issuing; the lock emits 1 beep and green light, operation is successful, the lost card can not open the lock any more.

- **With Hand held**

Please find out "Black list setting" in Hand held.

Note: if you lost a key card, you want to stop it from opening the lock with hand held; you have to re-write the lock's information because the black list setting is changed, and then setup lock's information again.

13.5. Low voltage alarm

If you hear 8 beeps and green light when you open the lock, which means low voltage alarm, replacing the batteries is necessary.

13.6. Door Ajar alarm

- **Condition 1**

If you hear "beep,beep,beep", "beep,beep,beep"..... and red light, when you close the door, because the door is not close properly.

- **Condition 2**

If you hear "beep, beep,beep", "beep, beep,beep"..... and red light, whenever closing or opening status, please have a check with latch sensor inside lock case or replace another lock case.

